


Wires Indicated  Are Contained in Power Harness  
 All Other Wires Are Control Wiring  
 MS2 is Closed When Direction Selector Switch is in Forward Or Reverse  
 MS3 is Activated By Accelerator Pedal  
 MS4 is Closed By Direction Selector Switch in Reverse Only