

# Changing the Charge Curve



Follow the steps below to change the charging curve on the **ChargePlus FLEX**. Please note only a service technician should perform these functions.



**Step 1:** Disconnect the battery charger from the battery. The screen will state “No battery.”

**Step 2:** Simultaneously hold both navigational arrows for 10 seconds to access the programming menu (the yellow LED will turn on to indicate you are in the programming menu).

**Step 3:** Scroll through the parameters until the desired one is found. Press “Select” (the red LED should turn on).

**Step 4:** Scroll through the selected parameter to access the different options. Press “Select” when the desired option is found (the red LED should turn off).

**Step 5:** Scroll through the navigation to find “Programming Save and Exit” then press “Select” to exit.

*The battery charger will automatically exit the programming menu and will return to the charging status display after 30 seconds if left without operation by the user.*

**Please note:** The current range for the **48-volt setting** must be set to **20 amps or below** for 48 V to be an available option on the **ChargePlus FLEX**.

The charging current and voltage is restricted to what is available for the selected current or voltage. Please refer to the chart for the available amp ranges for each voltage.

## Charging Ranges

VOLTAGE (V)	AMPERAGE (A)
12 V	15–30 A
24 V	15–30 A
36 V	15–25 A
48 V	15–20 A