

Follow the steps below to change the charging curve on the **ChargePlus FLEX**. Please note only a service technician should perform these functions.



Step 1: Disconnect the battery charger from the battery. The screen will state “No battery.”

Step 2: Simultaneously hold both navigational arrows for 10 seconds to access the programming menu (the yellow LED will turn on to indicate you are in the programming menu).

Step 3: Scroll through the parameters until the desired one is found. Press “Select” (the red LED should turn on).

Step 4: Scroll through the selected parameter to access the different options. Press “Select” when the desired option is found (the red LED should turn off).

Step 5: Scroll through the navigation to find “Programming Save and Exit” then press “Select” to exit.

The battery charger will automatically exit the programming menu and will return to the charging status display after 30 seconds if left without operation by the user.

Please note: The current range for the **48-volt setting** must be set to **20 amps or below** for 48 V to be an available option on the **ChargePlus FLEX**.

The charging current and voltage is restricted to what is available for the selected current or voltage. Please refer to the chart for the available amp ranges for each voltage.

Charging Ranges

VOLTAGE (V)	AMPERAGE (A)
12 V	15–30 A
24 V	15–30 A
36 V	15–25 A
48 V	15–20 A

