


**SEPARATELY EXCITED (SX) TRANSISTORIZED TRACTION MOTOR CONTROL  
 AND SERIES PUMP MOTOR CONTROL  
 INSTALLATION AND OPERATION MANUAL**  
*(GE Models IC3645SR5W606F1 [software rev. BL3C and higher] and IC3645SP5U600F1)*

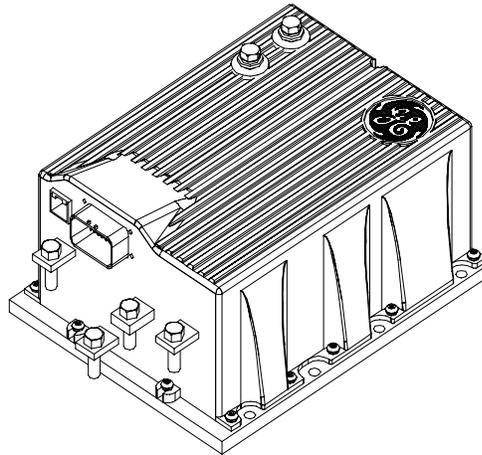

*Note: The information contained herein is intended to assist OEM's, Dealers and Users of electric vehicles in the application, installation and service of GE solid-state controllers. This manual does not purport to cover all variations in OEM vehicle types. Nor does it provide for every possible contingency to be met involving vehicle installation, operation or maintenance. For additional information and/or problem resolution, please refer the matter to the OEM vehicle manufacturer through his normal field service channels. Do not contact GE directly for this assistance.*

**Table of Contents**

**General Electric Company May 2003**

<b>Section 1.0</b>	<b>INTRODUCTION .....</b>	<b>4</b>
1.1	Motor Characteristics.....	4
1.2	Solid-State Reversing.....	5
1.3	Flexible System Application .....	5
1.4	More Features with Fewer Components.....	5
<b>Section 2.0</b>	<b>FEATURES OF SX FAMILY OF MOTOR CONTROLLERS .....</b>	<b>6</b>
2.1	Performance .....	6
2.1.1	Oscillator Card Features.....	6
2.1.1.a	Standard Operation.....	6
2.1.1.b	Creep Speed .....	6
2.1.1.c	Controlled Acceleration .....	6
2.1.2	Current Limit.....	6
2.1.3	Braking.....	6
2.1.3.a	Regenerative Braking to Zero Speed.....	6
2.1.3.b	Pedal Position Plug Braking.....	6
2.1.3.c	Auto Braking .....	6
2.1.4	Auxiliary Speed Control .....	6

**Table of Contents ( Continued )**

2.1.4.a	Field Weakening .....	6
2.1.4.b	Speed Limits .....	7
2.1.5	Ramp Operation .....	7
2.1.5.a	Ramp Start.....	7
2.1.5.b	Anti-Rollback.....	7
2.1.6	On-Board Coil Drivers and Internal Coil Suppression .....	7
2.2	System Protective Override.....	7
2.2.1	Static Return to Off (SRO) .....	7
2.2.2	Accelerator Volts Hold Off .....	7
2.2.3	Pulse Monitor Trip (PMT) .....	7
2.2.4	Thermal Protector (TP).....	7
2.2.5	Low Voltage .....	7
2.3	Diagnostics.....	8
2.3.1	Systems Diagnostics.....	8
2.3.2	Status Codes.....	8
2.3.2.a	Standard Status Codes.....	8
2.3.2.b	Stored Status Codes .....	8
2.3.3	Hourmeter Readings .....	8
2.3.3.a	Maintenance Alert and Speed Limit .....	8
2.3.4	Battery Discharge Indication (BDI).....	8
2.3.4.a	Internal Resistance Compensation .....	8
2.3.5	Handset .....	8
2.3.6	RS-232 Communication Port .....	8
2.3.6.a	Interactive Dash Display Modes .....	8
2.3.7	Circuit Board Coil Driver Modules.....	9
2.3.8	Truck Management Module (TMM).....	9
2.4	Hydraulic Pump Control.....	9
<b>Section 3.0</b>	<b>ORDERING INFORMATION, ELEMENTARY AND OUTLINE DRAWINGS .....</b>	<b>10</b>
3.1	Ordering Information for Separately Excited Controls .....	10
3.2	Outline: SX-4 and SR-4 Package Size .....	11
3.3	Outline: SX-3 and SR-3 Package Size .....	12
3.4	Traction Elementary.....	13
3.5	Pump Elementary.....	14
3.6	Traction and Pump Control Input / Output List.....	15
<b>Section 4.0</b>	<b>TROUBLESHOOTING AND DIAGNOSTIC STATUS CODES .....</b>	<b>16</b>
4.1	General Maintenance Instructions .....	16
4.2	Cable Routing and Separation .....	16
4.2.1	Application Responsibility.....	16
4.2.2	Signal/Power Level Definitions.....	16
4.2.2.a	Low Level Signals (Level L).....	16
4.2.2.b	High Level Signals (Level H) .....	17
4.2.2.c	Medium-Power Signals (Level MP).....	17
4.2.2.d	High-Power Signals (Level HP).....	17
4.2.3	Cable Spacing Guidelines.....	17
4.2.3.a	General Cable Spacing .....	17
4.2.4	Cabling for Vehicle Retrofits .....	17
4.2.5	RF Interference .....	17
4.2.6	Suppression .....	17


**Table of Contents ( Continued )**

4.3	Recommended Lubrication of Pins and Sockets Prior to Installation .....	18
4.4	Controller Mounting Guidelines.....	19
4.4.1	Necessary Tools.....	19
4.4.2	The GE Control Mounting Surface .....	19
4.4.3	Vehicle Mounting Surface.....	19
4.4.4	Application of Thermal Compound.....	19
4.4.5	Mounting the GE Control .....	20
4.4.6	Maintenance .....	20
4.5	General Troubleshooting Instructions.....	20
4.6	Traction Controller Status Codes .....	22-39
4.7	TMM Module Status Codes .....	39-41
4.8	Pump Control Status Codes .....	42-52
<b>Section 5.0</b>	<b>SX FAMILY - GE HANDSET INSTRUCTIONS .....</b>	<b>53</b>
5.1	General Features .....	53
5.2	Purpose/Setup Functions .....	53
5.3	Setup Function Procedures .....	54
5.3.1	Setup Mode .....	54
5.3.2	Status Code Scrolling.....	54
5.3.3	SX Handset Plug Connections & Outline Drawing.....	54
5.4	Setup Functions for Traction Controller .....	55-60
5.5	Summary of Current Limit Adjustments .....	61
5.6	Setup Functions for Hydraulic Pump Controller.....	62-64
<b>Section 6.0</b>	<b>AUTO CALIBRATION OF ACCELERATOR POTENTIOMETERS.....</b>	<b>65</b>
<b>Section 7.0</b>	<b>TRACTION MEMORY MAP .....</b>	<b>66-68</b>

**Section 1. INTRODUCTION**

**Section 1.1 Motor Characteristics**

The level of sophistication in the controllability of traction motors has changed greatly over the past several years. Vehicle manufacturers and users are continuing to expect more value and flexibility in electric vehicle motor and control systems as they are applied today. In order to respond to these market demands, traction system designers have been forced to develop new approaches to reduce cost and improve functions and features of the overall system. Development is being done in a multi-generational format that allows the market to take advantage of today's technology, while looking forward to new advances on the horizon. GE has introduced a second generation system using separately excited DC shunt wound motors. The separately excited DC motor system offers many of the features that are generally found on the advanced AC systems. Historically, most electric vehicles have relied have on series motor designs because of their ability to produce very high levels of torque at low speeds. But, as the demand for high efficiency systems increases, i.e., systems that are more closely applied to customers' specific torque requirements, shunt motors are now often being considered over series motors. In most applications, by independently controlling the field and armature currents in the separately excited motor, the best attributes of both the series and the shunt wound motors can be combined.

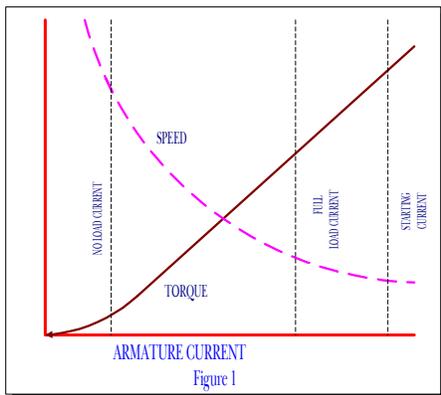


As shown in from the typical performance curves of Figure 1, the high torque at low speed characteristic of the series motor is evident.


In a shunt motor, the field is connected directly across the voltage source and is therefore independent of variations in load and armature current. If field strength is held constant, the torque developed will vary directly with the armature current. If the mechanical load on the motor increases, the motor slows down, reducing the back EMF (which depends on the speed, as well as the constant field strength). The reduced back EMF allows the armature

current to increase, providing the greater torque needed to drive the increased mechanical load. If the mechanical load is decreased, the process reverses. The motor speed and the back EMF increase, while the armature current and the torque developed decrease. Thus, whenever the load changes, the speed changes also, until the motor is again in electrical balance.

In a shunt motor, the variation of speed from no load to normal full load on level ground is less than 10%. For this reason, shunt motors are considered to be constant speed motors (Figure 2).

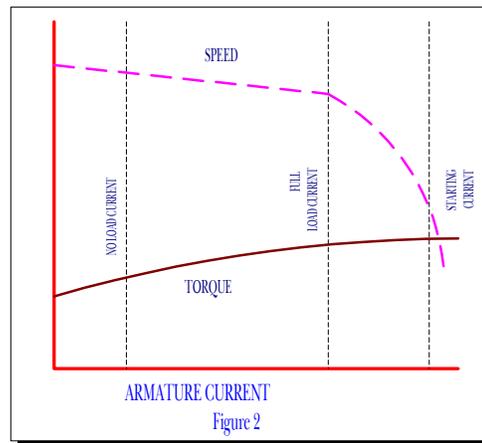

In the separately excited motor, the motor is operated as a fixed field shunt motor in the normal running range. However, when additional torque is required, for example, to climb non-level terrain, such as ramps and the like, the field current is increased to provide the higher level of torque. In most cases, the armature to field ampere turn ratio can be very similar to that of a comparable size series motor (Figure 3.)

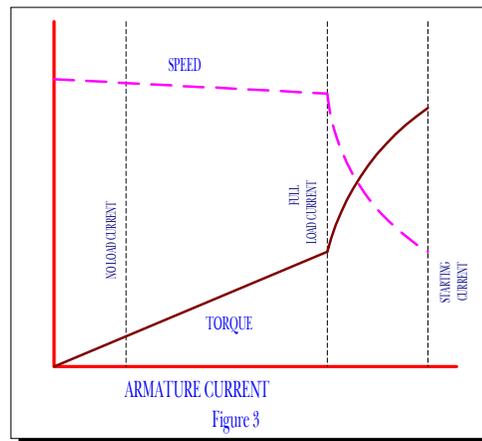


Aside from the constant horsepower characteristics described above, there are many other features that provide increased performance and lower cost. The

following description provides a brief introduction to examples of some of these features.

### Section 1.2 Solid-State Reversing

The direction of armature rotation on a shunt motor is determined by the direction in which current flows through the field windings. Because of the of the shunt motor field only typically requires about 10% of the armature current at full torque, it is normally cost effective to replace the double-pole, double-throw reversing contactor with a low power transistor H-Bridge circuit (Figure 4).

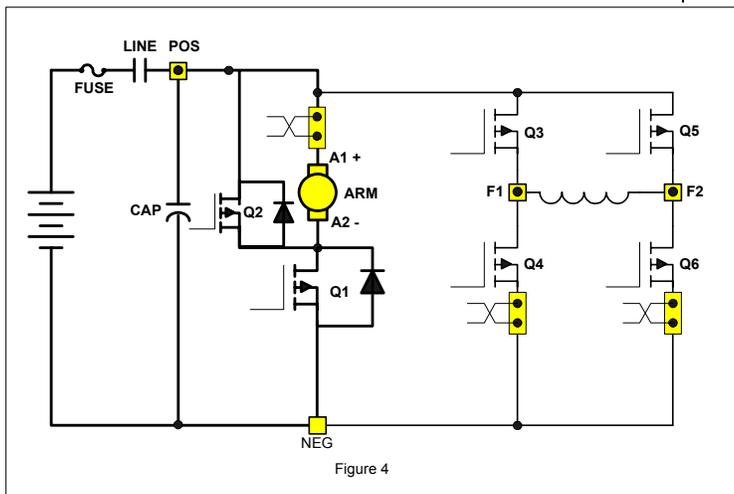

By energizing the transistors in pairs, current can be made to flow in either direction in the field. The armature control circuit typically operates at 12KHZ to 15KHZ, a frequency range normally above human hearing. This high frequency coupled with the elimination of directional contactors, provides very quiet vehicle operation. The field control circuits typically operate at 2 KHZ.

The line contactor is normally the only contactor required for the shunt motor traction circuit. This contactor is used for both pre-charge of the line capacitors and for emergency shut down of the motor circuit, in case of problems that would cause a full motor torque condition. The line can be energized and de-energized by the various logic combinations of the vehicle, i.e. activate on key, seat or start switch closure, and de-energize on time out of idle vehicle. Again, these options add to the quiet operation of the vehicle.

### Section 1.3 Flexible System Application

Because the shunt motor controller has the ability to control both the armature and field circuits independently, the system can normally be adjusted for maximum system efficiencies at certain operating parameters. Generally speaking, with the ability of independent field and

armature, the motor performance curve can be maximized through proper control application.

### Section 1.4 More Features with Fewer Components

Field weakening with a series wound motor is accomplished by placing a resistor in parallel with the field winding of the motor. Bypassing some of the current flowing in the field into the resistor causes the field current to be less, or weakened. With the field weakened, the motor speed will increase, giving the effect of "overdrive". To change the "overdrive speed", it is necessary to change the resistor value. In a separately excited motor, independent control of the field current provides for infinite adjustments of "overdrive" levels, between motor base speed and maximum weak field. The desirability of this feature is enhanced by the elimination of the contactor and resistor required for field weakening with a series motor.

With a separately excited motor, overhauling speed limit, or downhill speed, will also be more constant. By its nature, the shunt motor will try to maintain a constant speed downhill. This characteristic can be enhanced by increasing the field strength with the control. Overhauling load control works in just the opposite way of field weakening, armature rotation slows with the increase of current in the field.

Regenerative braking (braking energy returned to the battery) may be accomplished completely with solid-state technology. The main advantage of regenerative braking is increased motor life. Motor current is reduced by 50% or more during braking while maintaining the same braking torque as electrical braking with a diode clamp around the armature. The lower current translates into longer brush life and reduced motor heating. Solid state regenerative braking also eliminates a power diode, current sensor and contactor from the circuit.

For GE, the future is now as we make available a new generation of electric traction motor systems for electric vehicles having separately excited DC shunt motors and controls. Features that were once thought to be only available on future AC or brushless DC technology vehicles systems are now achievable and affordable.

**Section 2. FEATURES OF SX FAMILY OF TRANSISTOR MOTOR CONTROLLERS**

**Section 2.1 Performance**

**Section 2.1.1 Oscillator Card Features**

**Section 2.1.1.a Standard Operation**

With the accelerator at maximum ohms or volts, the creep speed can be adjusted by Function 2 of the Handset or a trimpot. The field control section allows the adjustment of the field weakening level in order to set the top speed of the motor. This top speed function (Minimum Field Current) is enabled when the armature current is less than the value set by Function 24 and the accelerator input voltage is less than 1 volt. Top Speed can be adjusted by Function 7 of the Handset or a trimpot.

The percent on-time has a range of approximately 0 to 100 percent. The SX controllers operate at a constant frequency and the percent on-time is controlled by the pulse width of the voltage / current applied to the motor circuits.

**Section 2.1.1.b Creep Speed**

With the accelerator at maximum ohms or volts (approximately 3.7 to 3.5 VDC), the creep speed can be adjusted by Function 2 of the Handset. At creep speed, the ON time can decrease to approximately 5%, with the OFF time at approximately 95%. At full transistor operation, this condition will be reversed (short OFF time, long ON time). This variation of ON and OFF time of the oscillator varies the voltage applied to the motor, thereby varying the speed of the motor for a given load.

**Section 2.1.1.c Control Acceleration**

This feature allows for adjustment of the rate of time it takes for the control to accelerate to 100% applied battery voltage to the motor on hard acceleration. Armature C/A is adjusted by Function 3 from 0.1 to 22 seconds.

**Section 2.1.2 Current Limit**

This circuit monitors motor current by utilizing sensors in series with the armature and field windings. The information detected by the sensor is fed back to the card so that current may be limited to a pre-set value. If heavy load currents are detected, this circuit overrides the oscillator and limits the average current to a value set by Function 4 and Function 8 of the Handset. The C/L setting is based on the maximum thermal rating of the control. Because of the flyback current through 3REC, the motor current is usually greater than battery current, except at 100% ON time.

**Section 2.1.3 Braking**

**Section 2.1.3.a Regenerative Braking to Zero Speed**

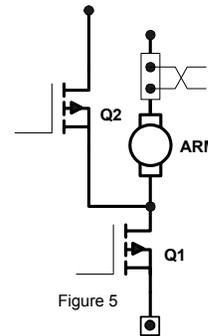


Figure 5

Slow down is accomplished when reversing direction by providing a small amount of retarding torque for deceleration. If the vehicle is moving, and the directional lever is moved from one direction to the other, the regen signal is initiated. Once the regen signal has been initiated, the field current is increased (armature circuit shown in Figure 5). Armature current is

regulated to the regen current limit as set by Function 9. As the vehicle slows down, the field current continues to increase, and transistor Q2 begins to chop. The field current will increase until it reaches a preset value set by Function 10, and transistor Q2 on-time will increase until it reaches 100% on-time. Once both of the above conditions have been met, and regen current limit can no longer be maintained, the braking function is canceled. The fields will then reverse, and the control reverts back to motoring. Part of the energy produced by the motor during regen is returned to the battery, and part is dumped in the motor as heat.

**Section 2.1.3.b Pedal Position Regenerative Braking**

This feature allows control of the plugging distance based on pedal position when there has been a "directional switch" change. Pedal position will reduce the regenerative current to the "value set by this function" as the accelerator is returned to the creep speed position. Maximum regen current is obtained with the accelerator in the top speed position.

**Section 2.1.3.c Auto Braking**

This feature is enabled by initiating a "neutral position" using either the directional switch or the accelerator switch. Once activated, Auto Braking operates similar to Pedal Position Plug Braking and is adjusted by using Function 21 of the Handset.

**Section 2.1.4 Auxiliary Speed Control**

**Section 2.1.4.a Field Weakening**

This function allows the adjustment of the field weakening level in order to set the top speed of the motor. The function is enabled when the armature current is less than the value set by Function 24 and the accelerator input voltage is set for max speed. It is important to note that this function is used to optimize motor and control performance, and this setting will be determined by GE and OEM engineers at the

time of vehicle development. This setting must not be changed by field personnel, without the permission of the OEM.

### Section 2.1.4.b Speed Limits

This feature provides a means to control speed by limiting motor volts utilizing three "adjustable speed limits. This motor volt limit regulates top speed of the transistor controller, but actual truck speed will vary at any set point depending on the loading of the vehicle. Each speed limit can be adjustable with the Handset using Functions 11, 12, and 13.

### Section 2.1.5 Ramp Operation

#### Section 2.1.5a Ramp Start

This feature provides maximum control torque to restart a vehicle on an incline. The memory for this function is the directional switch. When stopping on an incline, the directional switch must be left in its original or neutral position to allow the control to initiate full power when restarted. The accelerator potentiometer input will modulate ramp start current.

#### Section 2.1.5b Anti-Rollback

This feature provides retarding torque to limit rollback speed in the non-travel direction when the ACC pedal is released when stopping on a grade, or when the brake pedal is released when starting on a grade. This feature forces the vehicle to roll very slowly down the grade when accelerator or brake is released. Because the vehicle can gain significant speed during roll-back, the torque needed to re-start on the ramp is lower than an unrestricted roll-back speed.

### Section 2.1.6 On-Board Coil Drivers & Internal Coil Suppression

Coil drivers for the LINE contactor and fan motor are on-board the control card. This contactor must have a coil rated for the vehicle battery volts, and the fan should also be rated for battery volts.

### Section 2.2 System Protective Override

#### Section 2.2.1 Static Return to Off (SRO)

This inherent feature of the control is designed to require the driver to return the directional lever to the neutral position anytime he leaves the vehicle and returns. Additionally, if the seat switch or key switch is opened, the control shuts off and cannot be restarted until the directional lever is returned to neutral. A time delay of approximately 2 seconds is built into the seat switch input

to allow momentary opening of the seat switch, if a bump is encountered.

#### Section 2.2.2 Accelerator Volts Hold Off

This feature checks the voltage level at the accelerator input whenever the key switch or seat switch is activated. If, at start up, the voltage is less than 1.8 volts, the control will not operate. This feature assures that the control is calling for low speed operation at start up.

#### Section 2.2.3 Pulse Monitor Trip (PMT)

The PMT design contains three features which shut down, or lock out, control operation if a fault conditions occurs that would cause a disruption of normal vehicle operation:

- Look ahead
- Look again
- Automatic look again and reset

The PMT circuit will not allow the control to start under the following conditions:

- The control monitors both armature and field FET's at start-up and during running.
- The control will not allow the line contactor to close at start-up, or will drop it out during running, if either the armature or field FET's are defective, so as to cause uncontrolled truck movement.

#### Section 2.2.4 Thermal Protector (TP)

This temperature sensitive device is internal to the power transistor (Q1) module. If the transistor's temperature begins to exceed the design limits, the thermal protector will lower the maximum current limit, and maintain the transistors within their temperature limits. Even at a reduced current limit, the vehicle will normally be able to reach sufficient speed. As the control cools, the thermal protector will automatically reset, returning the control to full power.

#### Section 2.2.5 Low Voltage

Batteries under load, particularly if undersized or more than 80 percent discharged, will produce low voltages at the control terminals. The SX control is designed for use down to 50 percent of a nominal battery voltage of 36-84 volts, and 75 percent of a nominal battery voltage of 24 volts. Lower battery voltage may cause the control to operate improperly, however, the resulting PMT should open the Line contactor, in the event of a failure.

## Section 2.3 Diagnostics

### Section 2.3.1 Systems Diagnostics

The control detects the system's present operating status and can be displayed to either the Dash Display or the Handset. There are currently over 70 status codes that are available with SX systems using Traction and Pump controls and Truck Management Module (TMM). Along with the status code display from the TMM, the SX control is capable of reducing the current to the motor, alerting the operator of a critical fault condition.

### Section 2.3.2 Status Codes

#### Section 2.3.2a Standard Status Codes

The SX traction control has over 30 Status Codes that assist the service technician and operator in troubleshooting the vehicle. If mis-operation of the vehicle occurs, a status code will be displayed on the Dash Display for vehicles so equipped, or be available by plugging the Handset into the "y" plug of the logic card. With the status code number, follow the procedures outlined in DIAGNOSTIC STATUS CODES to determine the problem and a solution.

Note: The Status Code Instruction Sheets do not claim to cover all possible causes of a display of a "status code". They do provide instructions for checking the most direct inputs that can cause status codes to appear.

#### Section 2.3.2.b Stored Status Codes

This feature records the last 16 "Stored Status Codes" that have caused a PMT controller shut down and/or disrupted normal vehicle operation. (PMT type faults are reset by cycling the key switch). These status codes, along with the corresponding BDI and hourmeter readings, can be accessed with the Handset, or by using the RS 232 communications port and dumping the information to a Personal Computer terminal.

### Section 2.3.3 Hourmeter Readings

This feature will display the recorded hours of use of the traction and pump control to the Dash Display each time the key switch is turned off.

#### Section 2.3.3.a Maintenance Alert & Speed Limit

This feature is used to display Status Code 99 and/or activate a speed limit when the vehicle operating hours match the hours set into the maintenance alert register. This feature is set with the Handset using Functions 19 and 20. The operator is alerted that maintenance on the vehicle is required.

### Section 2.3.4 Battery Discharge Indication (BDI)

The latest in microprocessor technology is used to provide accurate battery state of charge information and to supply passive and active warning signals to the vehicle operator. Features and functions:

- Displays 100 to 0 percent charge.
- Display blinks with 20% charge. Disables pump circuit with 10% charge. Auto ranging for 36/48 volt operation. Adjustable for use on 24 to 48 volts.

#### Section 2.3.4.a Internal Resistance Compensation

This feature is used when the Battery Discharge Indicator is present. Adjustment of this function will improve the accuracy of the BDI.

### Section 2.3.5 Handset

This is a multi-functional tool used with the LX, ZX, and SX Series GE solid state controls. The Handset consists of a Light Emitting Diode (LED) display and a keyboard for data entry. Note, for ordering purposes, a separate Handset part is required for SX controls.

Features and functions:

- Monitor existing system status codes for both traction and pump controls. Monitor intermittent random status codes.
- Monitor battery state of charge, if available.
- Monitor hourmeter reading on traction and pump controls. Monitor or adjust the control functions.

### Section 2.3.6 RS 232 Communication Port

This serial communication port can be used with Interactive Custom Dash Displays to allow changes to vehicle operating parameters by the operator. Or, it can be used by service personnel to dump control operating information and settings into a personal computer program.

#### Section 2.3.6.a Interactive Dash Display Modes

The Interactive Custom Dash Display allows the operator to select the best vehicle performance for changing factory (task) conditions. There are four (4) "operator interaction modes" that can be selected by depressing a push button on the dash display.

From the Dash Display, the operator may select any of four pre-set interactive modes consisting of (4) Min Field levels, (4) Field Weakening levels, (4) Ratio levels, and (4) Regen Current Limit levels.

These interactive modes are "pre-set" using the Handset (Functions 48-63) or a personal computer (Functions 97-

112). This feature allows the operator to select the best vehicle performance for changing factory (task) conditions.

### Section 2.3.7 Circuit Board Coil Driver Modules

The Coil drivers are internal to the control card, and are the power devices that operate the Line contactor coil. On command from the control card, these drivers initiate opening and closing the contactor coils. All driver modules are equipped with reverse battery protection, such that, if the battery is connected incorrectly, the contactors can not be closed electrically.

### Section 2.3.8 Truck Management Module (TMM)

The Truck Management Module is a multifunction accessory card, or an integral function of the GE Pump controls when used with the SX Traction control. The Module provides the OEM the ability to initiate status codes or operator warning codes to be displayed on the Dash Display, whenever a normally open switch or sensor wire provides a signal to the Module.

The TMM Module can be used to display a separate status code indicating over-temperature of traction motors, hydraulic motors, or any other device or system that can activate a switch that closes.

The TMM Module can also be used as a Brush Wear Indicator (BWI). The Brush Wear Indicator is designed to detect a "worn out brush" and display a fault code on the Dash Display to warn maintenance personnel that the motor brushes need to be replaced before they wear to the point of causing destructive damage to the motor commutator surface.

### Section 2.4 Hydraulic Pump Control

This hydraulic motor controller consists of the following features:

- Four speeds, adjustable from 0 to 100% on.
- Fixed speeds actuated by switch closure to negative.
- Current limit and controlled acceleration adjustable.
- Battery Discharge Indicator interrupt compatible.
- 0 – 100% on, controlled by accelerator voltage (P7).

Operation of voltage regulator card: This card provides the basic functions required for controlling the pump control, optional contactors, and PMT functions. Battery positive is applied through a main control fuse to the key switch, energizing the control card power supply input to P1.

When a pump contactor is used, PMT operation is the same as outlined for the traction controllers.

The four speed reference points P12, P19, P20 and P21 are selected by connecting these points independently to battery negative.

The first speed is obtained by closing Speed Limit I (P12) to control negative. SL1 is adjustable by Function 11 using the Handset to adjust percent on from 0 to 100%. The specified motor volts will be regulated, however, the magnitude of motor current will vary depending on the loading of the vehicle.

The second speed is obtained by closing SL2 (P19) to control negative. SL2 is adjusted using the Handset and Function 12 similar to SL1.

The third speed is obtained by closing SL3 (P20) to control negative. SL3 is adjusted using the Handset and Function 13 similar to SL1.

The fourth speed is obtained by closing SL4 (P21) to control negative. SL4 is adjusted using the Handset and Function 14 similar to SL1.

If more than one Speed Limit is activated, the selected speed with the highest motor volts will override the low motor volt speed. The current limit circuit is adjustable and operates the same as the traction current limit.

The controlled acceleration circuit is adjustable and operates the same as the traction circuit. Adjustment range is from 0.1 to 5.5 seconds.

The Battery Discharge Indicator (BDI) interrupt will disable the hydraulic controller if the connection at P10 loses the 12 volt signal from the traction control. BDI interrupt can be disabled by Function 17 using the Handset. Select card type with or without BDI function.

**Section 3.0 ORDERING INFORMATION, ELEMENTARY AND OUTLINE DRAWINGS**

**Section 3.1 Ordering Information for Separately Excited Controls**

Example:

**Part Number:** IC3645 SE 4 D 33 2 C3  
**Argument Number:** 01 02 03 04 05 06 07

**Argument 01:** Basic Electric Vehicle Control Number

**Argument 02:** Control Type:

- SP = Series Control (Pump)
- SH = Separately Excited Control ( Plugging )
- SR = Separately Excited Control ( Regen to Zero )

**Argument 03:** Operating Voltage:

- 1 = 120 volts                      4 = 48 volts
- 2 = 24 volts                        5 = 36/48 volts
- 3 = 36 volts                        6 = 24/36 volts
- 7 = 72/80 volts

**Argument 04:** Package Size:

- D = 6.86" X 6.67"
- R = 6.86" X 8.15"
- U = 8.66" X 8.13"
- W = 8.66" X 10.83"

**Argument 05:** Armature Current  
( 2 characters )

- 22 = 220 Amps
- 33 = 330 Amps
- 40 = 400 Amps
- etc.



**Argument 06:** Field Current  
( 1 character )

- 2 = 20 Amps
- 3 = 30 Amps
- 4 = 40 Amps
- etc.



**Argument 07:** Customer / Revision

- A1 = Customer A / Revision 1
- B1 = Customer B / Revision 1
- etc.


**Section 3.2 Outline: SX-4 and SR-4 Package Size**

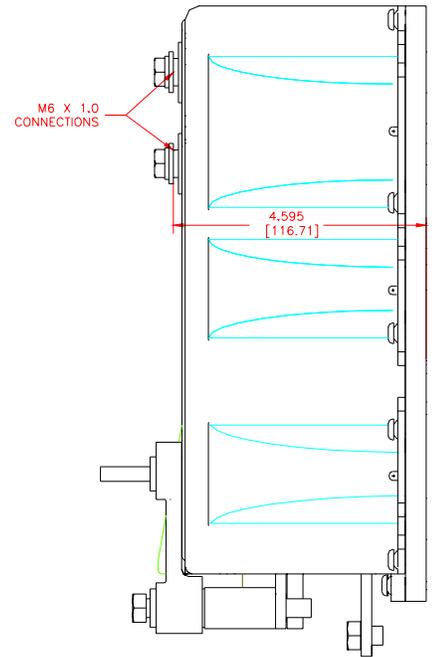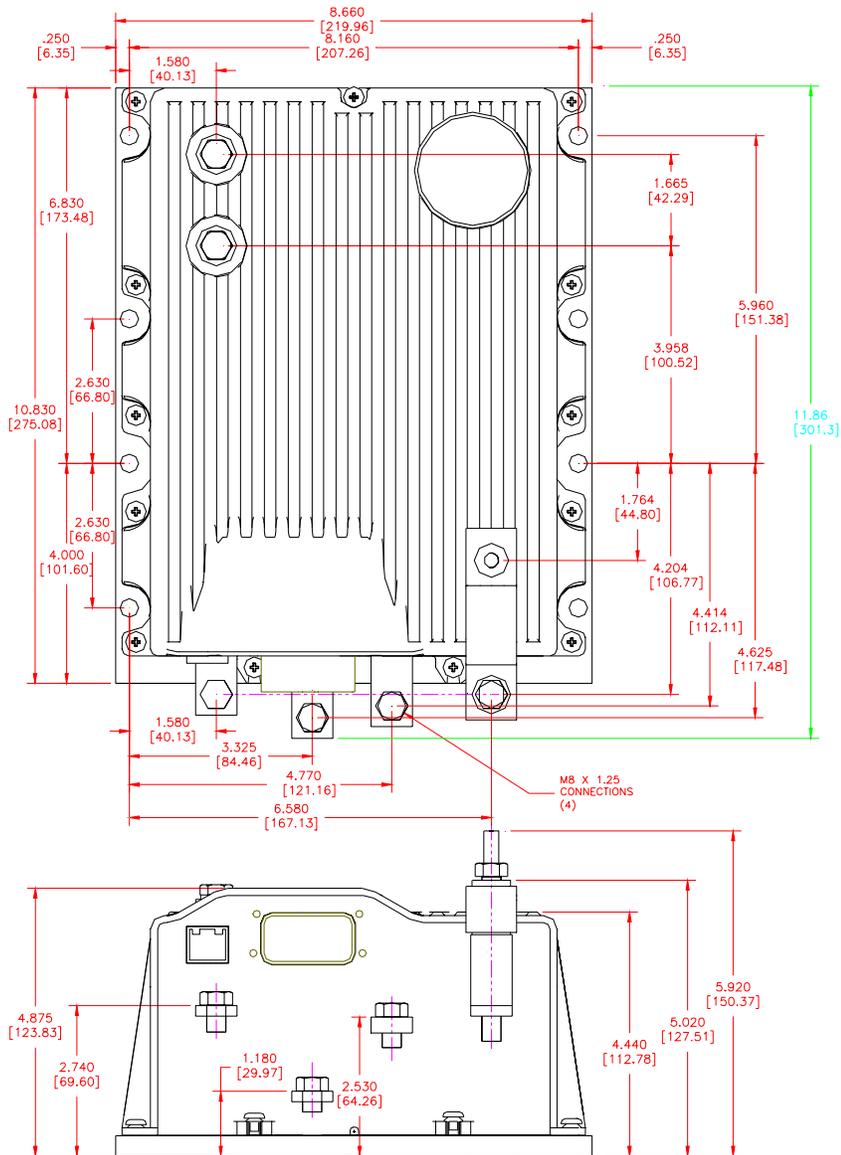

**Section 3.3 Outline: SX-3 and SR-3 Package Size**

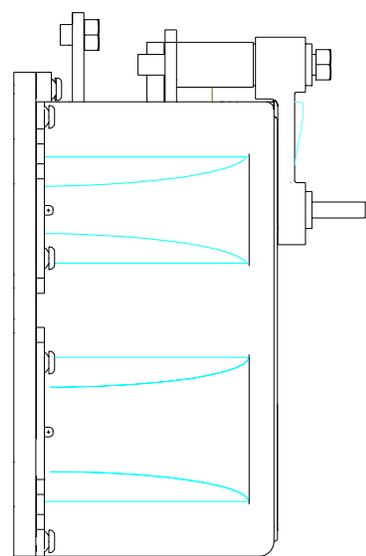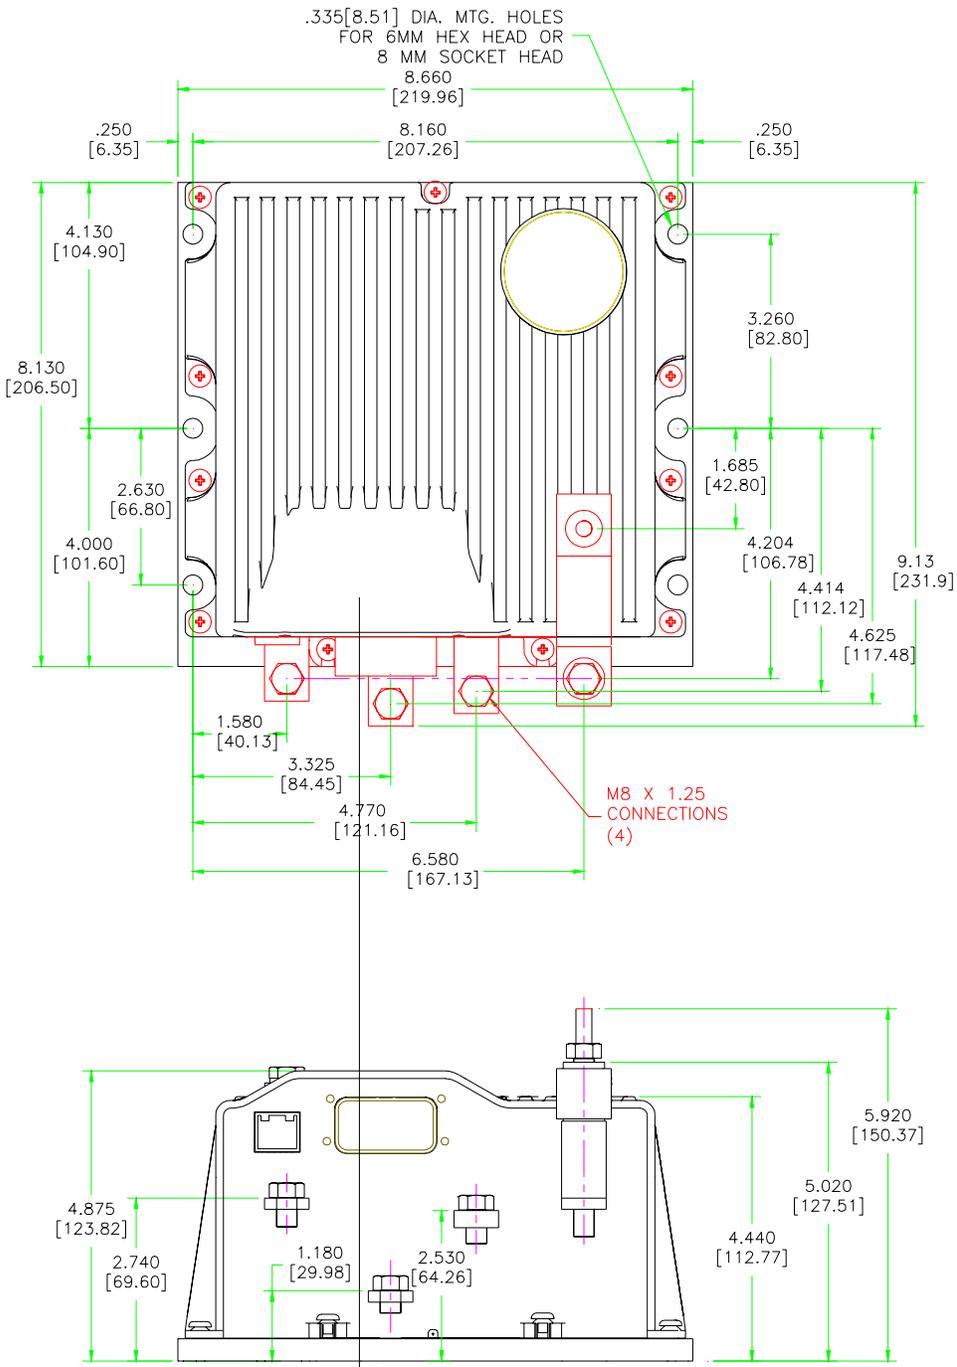


**Section 3.4 Traction Elementary**

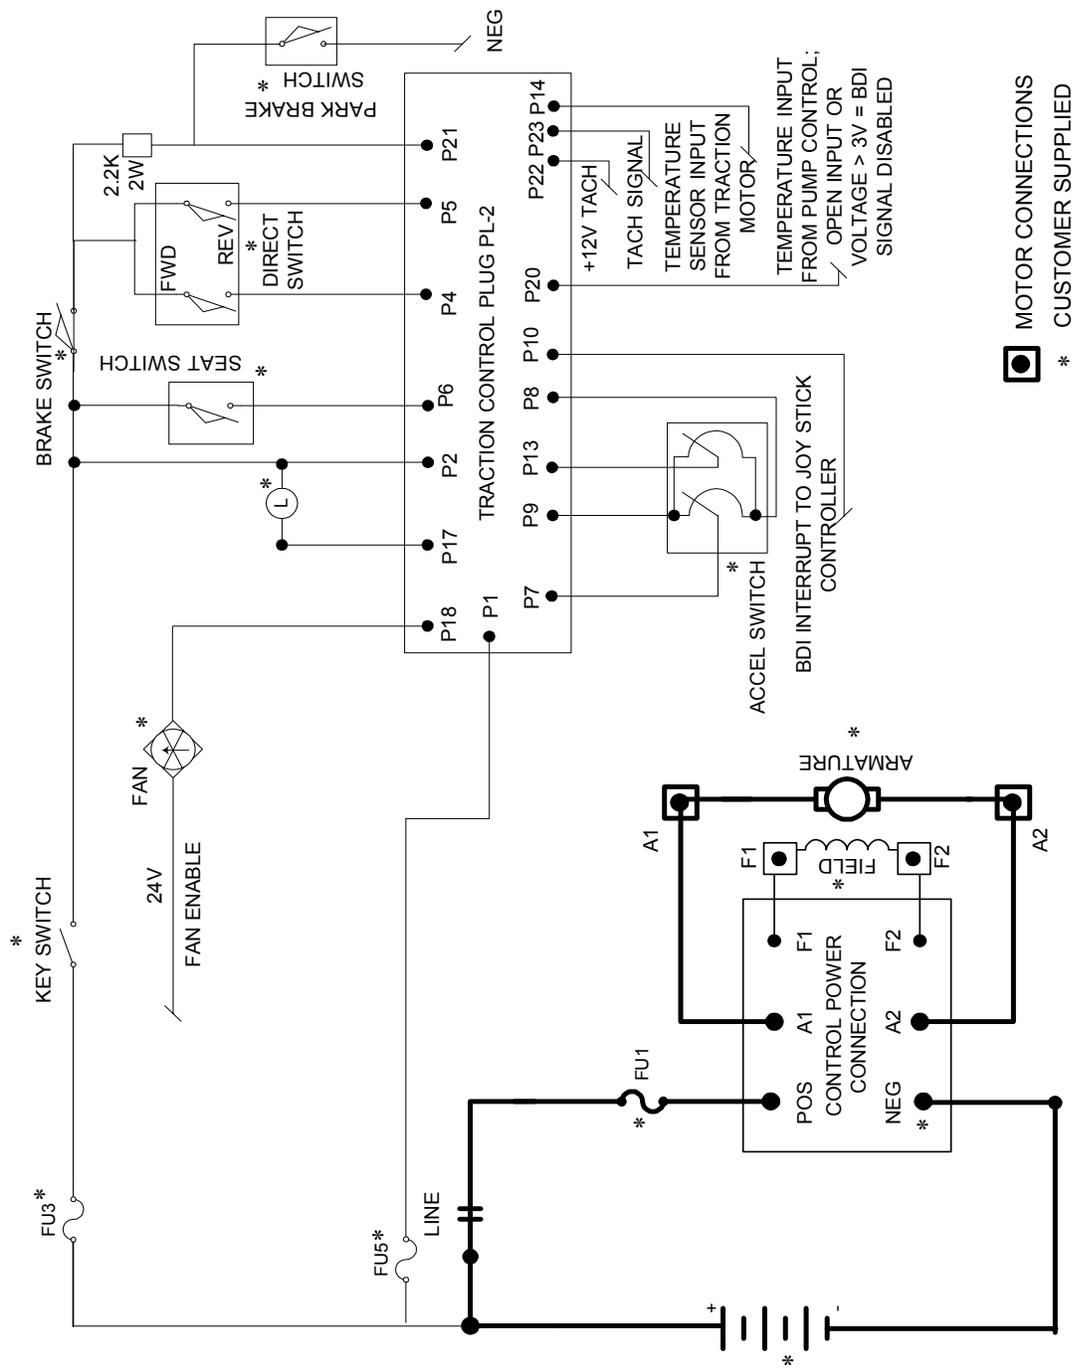

MOTOR CONNECTIONS  
 \* CUSTOMER SUPPLIED


**Section 3.5 Pump Elementary**

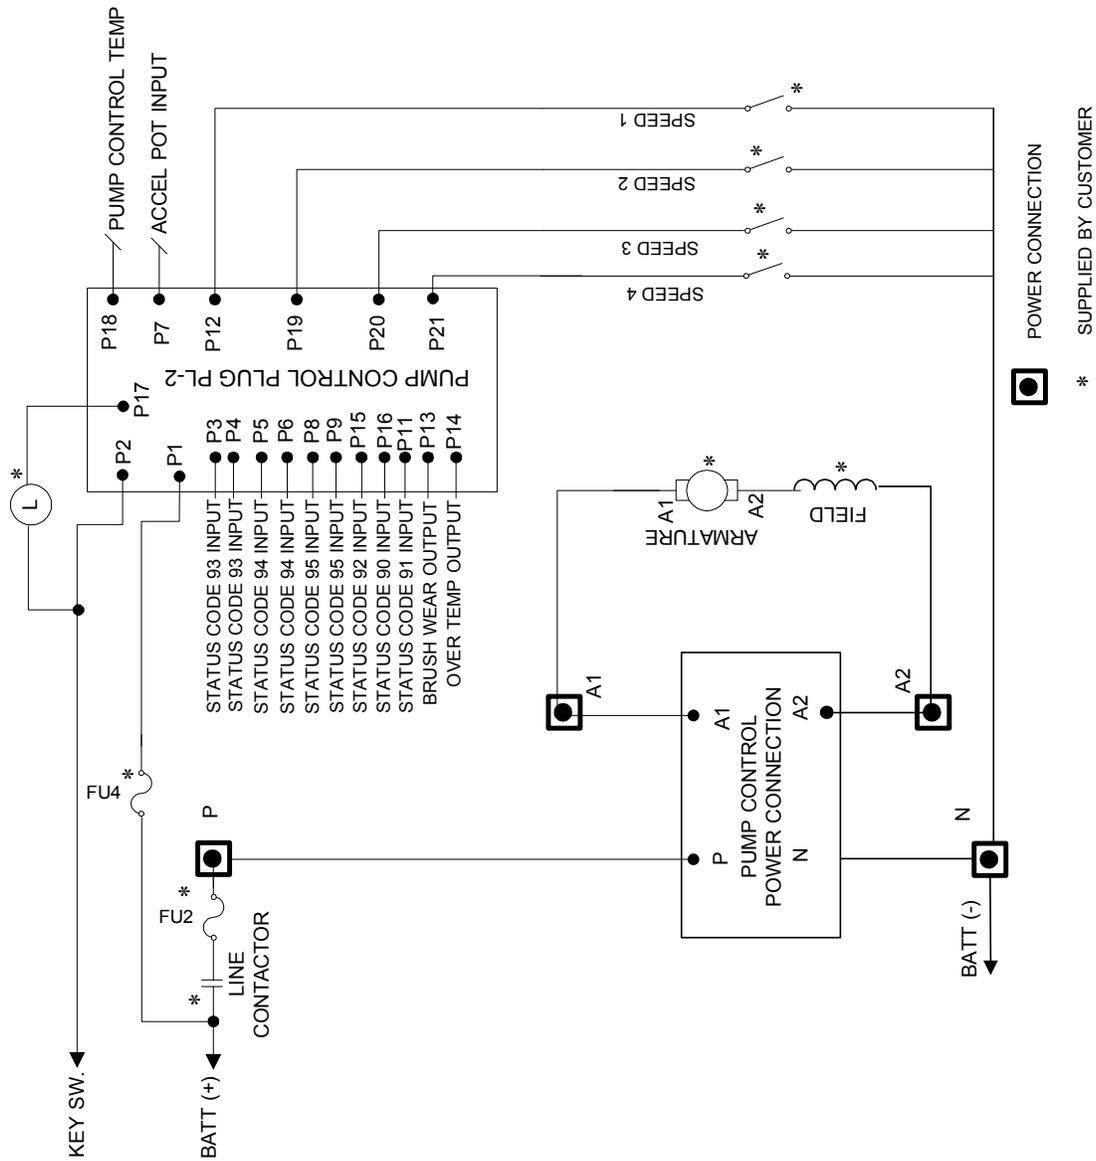


Section 3.6 Traction and Pump Control Input and Output List

CONNECTIONS TO MAIN PLUG (23 PIN) AND "Y" PLUG (12 PIN)

PIN	TRACTION INPUT/OUTPUT DESCRIPTION	PUMP INPUT/OUTPUT DESCRIPTION
1	BATTERY VOLTS FROM BATTERY	BATTERY VOLTS FROM BATTERY
2	BATTERY VOLTS FROM KEY	BATTERY VOLTS FROM KEY
3	BATTERY VOLTS FROM START SWITCH -OPTIONAL	STATUS CODE 93 INPUT
4	BATTERY VOLTS FROM FORWARD SWITCH -OPTIONAL	STATUS CODE 93 INPUT
5	BATTERY VOLTS FROM REVERSE SWITCH -OPTIONAL	STATUS CODE 94 INPUT
6	BATTERY VOLTS FROM SEAT SWITCH	STATUS CODE 94 INPUT
7	ACCELERATOR INPUT VOLTAGE SIGNAL	POTENTIOMETER INPUT VOLTAGE SIGNAL
8	ACCELERATOR NEGATIVE	STATUS CODE 95 INPUT
9	ACCELERATOR POT +5 VOLTS SUPPLY	STATUS CODE 95 INPUT
10	BDI INTERRUPT	PUMP ENABLE SIGNAL 12VDC
11	PLUG/RGN OUTPUT SIGNAL +12V 1=PLUG	STATUS CODE 91 INPUT
12	NOT USED	SPEED LIMIT #1 INPUT
13	AUX ACCELERATOR INPUT	TMM1 BRUSHWEAR INDICATER OUTPUT
14	LINEAR TRACTION MOTOR TEMPERATURE	TMM1 OVER TEMPERATURE OUTPUT
15	NOT USED	STATUS CODE 92 INPUT
16	NOT USED	STATUS CODE 90 INPUT
17	LINE CONTACTOR DRIVER AND SUPPRESSION	LINE CONTACTOR DRIVER
18	FAN	PUMP CONTROL TEMPERATURE 0 = COLD
19	NOT USED	SPEED LIMIT #2 INPUT
20	TEMPERATURE FROM PUMP CONTROL	SPEED LIMIT #3 INPUT
21	PARK BRAKE (NEG=SL1)	SPEED LIMIT #4 INPUT
22	TACH +12V	SERIAL RECEIVE
23	TACH INPUT	SERIAL TRANSMIT
PIN	MOTOR PROPORTIONING "Y" PLUG INPUT/OUTPUT DESCRIPTION	PUMP "Y" PLUG INPUT/OUTPUT DESCRIPTION
1	CLOCK (OUT)	CLOCK (OUT)
2	DATA (OUT)	DATA (OUT)
3	ENABLE (OUT)	ENABLE (OUT)
4	NEGATIVE	NEGATIVE
5	+5V SUPPLY	+5V SUPPLY
6	CONT/STORE (IN) (HANDSET)	CONT/STORE (IN) (HANDSET)
7	NOT USED	NOT USED
8	BWI INPUT/VALUE	VALUE
9	OVER TEMP INPUT/FUNCTION	FUNCTION
10	NOT USED	NOT USED
11	SERIAL RECEIVE / CONNECT TO P22	SERIAL RECEIVE / CONNECT TO P22
12	SERIAL TRANSMIT / CONNECT TO P23	SERIAL TRANSMIT / CONNECT TO P23

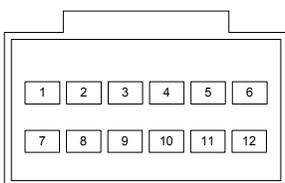

WIRE END VIEW "Y" PLUG

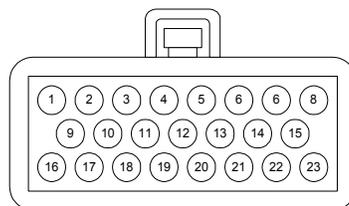

WIRE END VIEW - MAIN PLUG

**\* Pins 3, 4 and 5**  
*These input functions are provided by the accelerator pot input value.*

## Section 4.0 TROUBLESHOOTING AND DIAGNOSTIC STATUS CODES

### Section 4.1 General Maintenance Instructions

The transistor control, like all electrical apparatus, does have some thermal losses. The semiconductor junctions have finite *temperature* limits, above which these devices may be damaged. For these reasons, normal maintenance should guard against any action which will expose the components to excessive heat and/or those conditions which will reduce the heat dissipating ability of the control, such as restricting air flow.

The following Do's and Don't's should be observed:

Any controls that will be applied in ambient temperatures over 100° F (40° C) should be brought to the attention of the vehicle manufacturer.

All external components having inductive coils must be filtered. Refer to vehicle manufacturer for specifications.

The wiring should not be directly steam cleaned. In dusty areas, blow low-pressure air over the control to remove dust. In oily or greasy areas, a mild solution of detergent or denatured alcohol can be used to wash the control, and then low-pressure air should be used to completely dry the control.

For the control to be most effective, it must be mounted against the frame of the vehicle. The metal vehicle frame, acting as an additional heat sink, will give improved vehicle performance by keeping the control package cooler. *Apply a thin layer of heat-transfer grease (such as Dow Corning 340) between the control heat sink and the vehicle frame.*

Control wire plugs and other exposed transistor control parts should be kept free of dirt and paint that might change the effective resistance between points.

**CAUTION: The vehicle should not be plugged when the vehicle is jacked up and the drive wheels are in a free wheeling position. The higher motor speeds can create excessive voltages that can be harmful to the control.**

Do not hipot (or megger) the control. Refer to control manufacturer before hipotting.

Use a lead-acid battery with the voltage and ampere hour rating specified for the vehicle. Follow normal battery maintenance procedures, recharging before 80 percent discharged with periodic equalizing charges.

Visual inspection of GE contactors contained in the traction and pump systems is recommended to occur during every 160 hours of vehicle operation. Inspection is recommended

to verify that the contactors are not binding and that the tips are intact and free of contaminants.

GE does not recommend that any type of welding be performed on the vehicle after the installation of the control(s) in the vehicle. GE will not honor control failures during the warranty period when such failures are attributed to welding while the control is installed in the vehicle.

### Section 4.2 Cable Routing and Separation

Electrical noise from cabling of various voltage levels can interfere with a microprocessor-based control system. To reduce this interference, GE recommends specific cable separation and routing practices, consistent with industry standards.

#### Section 4.2.1 Application Responsibility

The customer and customer's representative are responsible for the mechanical and environmental locations of cables. They are also responsible for applying the level rules and cabling practices defined in this section. To help ensure a lower cost, noise-free installation, GE recommends early planning of cable routing that complies with these level separation rules.

On new installations, sufficient space should be allowed to efficiently arrange mechanical and electrical equipment.

On vehicle retrofits, level rules should be considered during the planning stages to help ensure correct application and a more trouble-free installation.

#### Section 4.2.2. Signal/Powerlevel Definitions

The signal/power carrying cables are categorized into four defining levels: low, high, medium power, and high power. Within those levels, signals can be further divided into classes.

Sections 4.2.2.a through 4.2.2.d define these levels and classes, with specific examples of each. Section 4.2.3 contains recommendations for separating the levels.

##### 4.2.2.a Low-Level Signals (Level L)

Low-level signals are designated as *level L*. These consist of:

- Analog signals 0 through  $\pm 15$  V
- Digital signals whose logic levels are less than 15 V DC
- 4 – 20 mA current loops
- DC busses less than 15 V and 250 mA

The following are specific examples of level L signals used in drive equipment cabling:

- Control common tie
- DC buses feeding sensitive analog or digital hardware
- All wiring connected to components associated with sensitive analog hardware with less than 5V signals (for example, potentiometers and tachometers)
- Digital tachometers and resolvers
- Dash display cabling
- RS-232 cabling

**Note:** Signal inputs to analog and digital blocks should be run as shielded twisted-pair (for example, inputs from tachometers, potentiometers, and dash displays).

#### 4.2.2.b High-Level Signals (Level H)

High-level signals are designated as *level H*. These signals consist of:

- Analog and digital signals greater than 15 V DC and less than 250 mA

For example, switch inputs connected to battery volts are examples of level H signals used in drive equipment cabling.

#### 4.2.2.c Medium-Power Signals (Level MP)

Medium power signals are designated as *level MP*. These signals consist of:

- DC switching signals greater than 15 V
- Signals with currents greater than 250 mA and less than 10A

The following are specific examples of level MP signals used in drive equipment cabling:

- DC busses less than 10 A
- Contactor coils less than 10 A
- Machine fields less than 10 A

#### 4.2.2.d. High Power Signals (Level HP)

Power wiring is designated as *level HP*. This consists of DC buses and motor wiring with currents greater than 10 A. The following are specific examples of level HP signals used in drive equipment cabling:

- Motor armature loops
- DC outputs 10 A and above
- Motor field loops 10 A and above

#### 4.2.3. Cable Spacing Guidelines

Recommended spacing (or clearance) between cables (or wires) is dependent on the level of the wiring inside them. For correct level separation when installing cable, the

customer must apply the **general guidelines** (section 4.2.3.a), outlined below.

#### 4.2.3.a General Cable Spacing

The following general practices should be used for *all levels* of cabling:

- All cables and wires of like signal levels and power levels must be grouped together.
- In general, different levels must run in separate wire bundles, as defined in the different classes, identified above. Intermixing cannot be allowed, unless noted by exception.
- Interconnecting wire runs should carry a level designation.
- If wires are the same level and same type signal, group those wires from one location to any other location together in multiconductor cables or bind them together with twine or zip-ties.
- When unlike signals must cross, cross them in 90° angles at a maximum spacing. Where it is not possible to maintain spacing, place a grounded steel barrier between unlike levels at the crossover point.

#### 4.2.4 Cabling for Vehicle Retrofits

Reducing electrical noise on vehicle retrofits requires careful planning. Lower and higher levels should never encircle each other or run parallel for long distances. It is practical to use existing wire runs or trays as long as the level spacing (see section 4.2.2) can be maintained for the full length of the run.

Existing cables are generally of high voltage potential and noise producing. Therefore, route levels L and H in a path separate from existing cables, whenever possible.

For level L wiring, use barriers in existing wire runs to minimize noise potential.

Do not loop level L signal wires around level H, level MP, or HP wires.

#### 4.2.5 RF Interference

To prevent radio frequency (RF) interference, care should be taken in routing power cables in the vicinity of radio-controlled devices.

#### Section 4.2.6 Suppression

Unless specifically noted otherwise, suppression (for example, a snubber) is required on all inductive devices controlled by an output. This suppression minimizes noise and prevents damage caused by electrical surges.

**Section 4.3 Recommended Lubrication of Pins and Sockets Prior to Installation**

Beginning in January of 1999, GE will implement the addition of a lubricant to all connections using pins and sockets on EV100/EV200 and Gen II products. Any connection made by GE to the A, B, X, Y, or Z plugs will have the lubricant NYE 760G added to prevent fretting of these connections during vehicle operation.

Fretting occurs during microscopic movement at the contact points of the connection. This movement exposes the base metal of the connector pin which, when oxygen is present, allows oxidation to occur. Sufficient build up of the oxidation can cause intermittent contact and intermittent vehicle operation. This can occur at any similar type of connection, whether at the control or in any associated vehicle wiring, and the resultant intermittent contact can provide the same fault indication as actual component failure.

The addition of the NYE 760G lubricant will prevent the oxidation process by eliminating the access of oxygen to the contact point. GE recommends the addition of this lubricant to the 12 pin and 23 pin plugs of all new Gen II controls at the time of their installation into a vehicle

When servicing existing vehicles exhibiting symptoms of intermittent mis-operation or shutdown by the GE control, GE recommends the addition of this lubricant to all 12 and 23 pin plugs, after proper cleaning of the connectors, as a preventative measure to insure fretting is not an issue before GE control replacement. Also, for long term reliable control operation, the plug terminals must be maintained per these instructions with the recommended contact cleaner and lubricant which provides a high degree of environmental and fretting protection.

New and re-manufactured control plugs are cleaned and lubricated prior to shipment from the factory. However, in applications where severe vibration or high temperature cycling and excessive humidity ( such as freezers ) are present, it is recommended that the plug terminals be cleaned and lubricated every year, per this instructions. In normal applications, plug maintenance should be performed every two years, unless intermittent problems arise with the plugs, requiring more immediate attention.

**Warning: Do not use any other cleaners or lubricants other than the ones specified.**

**WARNING: Before conducting maintenance on the vehicle, jack up the drive wheels, disconnect the battery and discharge the capacitors. Consult the Operation and Service Manual for your particular vehicle for details on discharging the capacitors; this procedure differs between SCR and Transistor controls.**

1. **Disconnect** plug from controller or mating plug.

2. **Locate** the plug that contains the socket (female) terminals. *Maintenance needs only to be performed on the plug containing the socket (female) type terminals. Reconnecting the plugs will lubricate the pin (male) terminals.*
3. **Clean** each terminal using Chemtronics® contact cleaner "Pow-R-WasH CZ " as shown in Figure 1.

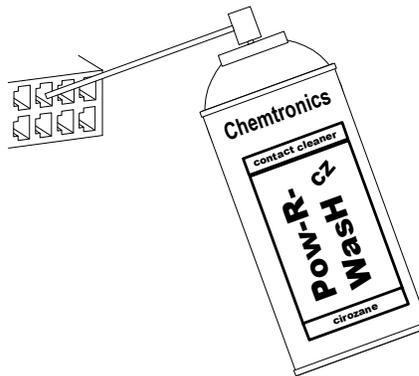


Figure 1

4. **Lubricate** each terminal using Nye® 760G lubricant as shown in figure 2. Apply enough lubricant to each terminal opening to completely fill each opening to a depth of .125" minimum.

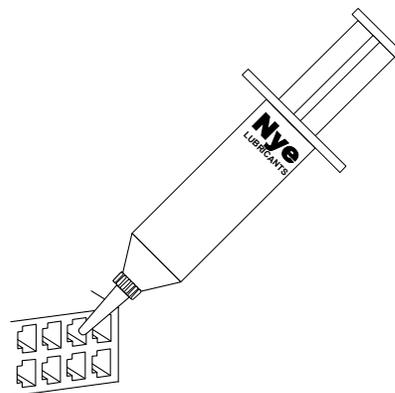


Figure 2

5. **Reconnect** plugs.

**Reference**

Cleaner	Chemtronics® Pow-R-WasH CZ Contact Cleaner
Lubricant	Nye® Lubricants NYOGEL® 760G
GE Plug Lub Kit	Contains both above products: <b>328A177G1</b>

### Section 4.4 Controller Mounting Guidelines

In the design of the GE family of motor controls, performance assumptions were made based on heat transfer between the control and the ambient environment. The vehicle mounting surface acts as a heat sink, which increases the effective surface area for heat dissipation. If this assumed heat transfer is not achieved during control installation and operation, GE controllers will fall short of their anticipated performance. It should be noted that the condition of the mounting surface, and the quality of the resulting interface between the control and the vehicle, can significantly hinder heat transfer from the control. The presence of contaminants, or of air voids created by surface inconsistencies in either the vehicle or the control, degrade the control's capacity for heat transfer. The control's performance is de-rated proportionally as its own thermal sensors reduce its operation to protect it from damage due to excessive heating.

Contained within the software of the GE controls are several diagnostic status codes related to controller thermal performance. Failure to follow these mounting recommendations increases the likelihood of encountering these status codes, through no fault of the control itself, thus voiding controller warranty for units returned solely due to the presence of these status codes.

Careful surface preparation, including adequate application of thermal compound, as detailed in the following paragraphs, must be completed during the installation of GE controls. There are many techniques for applying thermal compound, and we have outlined one approach below that has shown to apply a consistent thickness of material.

#### Section 4.4.1 Necessary Tools

GE recommends the use of the following components, or equivalent substitutions, during the control installation process:

- a) Thermal compound, (Dow Corning #340), maintained per the manufacturer's recommendations and free of contaminants
- b) 3/32" notched trowel, such as a Krusin adhesive spreader, model 00031
- c) Calibrated torque wrench (0 – 15 ft-lbs)

#### Section 4.4.2 The GE Control Mounting Surface

During the manufacture of the GE control, the surface flatness is maintained at 0.005" per linear inch (not to exceed 0.025" per 10.0 inches). The surface finish of the GE control has an  $R_a$  (average roughness) of 64 (microinches), or better. This finish is consistent with cold rolled or extruded aluminum.

Care should always be taken in the handling and storage of controllers. The base of the control should be free from nicks, bumps, protrusions or any other foreign object that

would prevent the control from sitting flush with the vehicle mounting surface. Examine the base of the control to verify that it is in good condition and free from damage or contamination.

#### Section 4.4.3 Vehicle Mounting Surface

The quality of the vehicle mounting surface is critical for the optimum heat transfer between the control and the ambient environment. Conduction through the base of the control is the control's only means of heat rejection. While GE controls are highly efficient, a few percent of the electrical energy will be converted into heat. As previously mentioned, if this energy is not dissipated through the base of the control, a thermal protector will reduce the performance of the control until the temperature stabilizes.

For optimal heat transfer from control to vehicle, the flatness of the vehicle mounting surface should be equivalent to the flatness of the control surface (0.005" per linear inch). Use a straight edge or dial indicator to verify the mounting surface.

The biggest hindrance to heat transfer is the presence of rust, scale, weld splatter or paint on the vehicle mounting surface. If any of these items are noted, prepare the surface per the following guidelines:

- a) Clean the mounting surface with a rotary wire brush until the metal surface is exposed.
- b) Using 80-100 grit emery paper, sand the surface until the metal shines.
- c) Flush the surface clean with an appropriate liquid de-greaser or parts cleaner.

#### Section 4.4.4 Application of Thermal Compound

Due to the minute differences in the control mounting surface and the vehicle mounting surface, small pockets of air will be created. These air pockets will add to the overall thermal resistance of the interface.

To avoid these air pockets and improve thermal conductivity, thermal compound must be applied between the GE control base plate and the vehicle mounting surface. The function of this compound is to conform to surface discrepancies, filling gaps and optimizing the metal-to-metal contact of the control and the vehicle.

- a) Prepare the two mounting surfaces (control and vehicle) as indicated above.
- b) Using a triangular notched trowel of 3/32" (.09" +/- .01), apply the grease to the vehicle mounting surface.
- c) Use straight, non-crossing strokes of the trowel to apply the compound.
- d) Make multiple vertical passes until a uniform consistency is achieved.



Krusin adhesive spreader model 00031







Vehicle surface after proper grease application

**Section 4.4.5 Mounting the GE Control**

- a) Place the control unit with desired orientation on mounting plate with mounting holes aligned.
- b) Move the control slightly in all directions to eliminate voids and enhance the distribution of the thermal compound.
- c) Insert the all of the mounting hardware (4, 6 or 8 bolts, M6 or M8, necessary for the mounting of the respective family of controls).
- d) Tighten these bolts (as per sequence shown in diagrams below) to half of the nominal torque value (**7.5lb-ft**).
- e) Lastly, tighten the bolts to the nominal torque value (**15 lb-ft**), following the same sequence.



Calibrated torque wrench for hardware installation

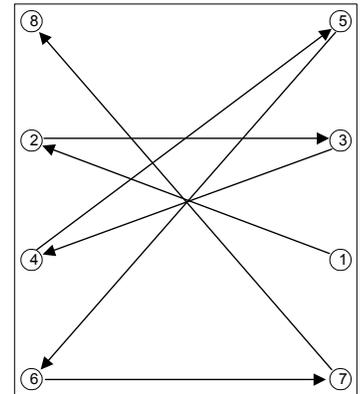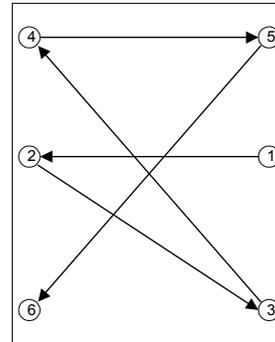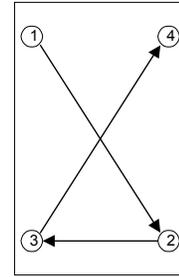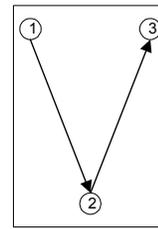

Proper sequence for use in tightening hardware during control mounting

**Section 4.4.6 Maintenance**

If it is necessary to remove the control for service, careful consideration must be given to removing the old thermal compound from the control and mounting surface, prior to replacement of the unit. **Never** re-use thermal compound. Use a putty knife or similar straight edge to carefully remove all thermal compound residue without damaging either mounting surface. Flush the surfaces with a liquid de-greaser or parts cleaner and allow them to dry, before re-applying the thermal compound and mounting the control. Take care not to contaminate the surfaces with hydraulic fluid or battery acid.

**Section 4.5 General Troubleshooting Instructions**

Trouble-shooting the SX family of controls should be quick and easy when following the instructions outlined in the following status code instruction sheets.

If mis-operation of the vehicle occurs, a status code will be displayed on the Dash Display (for vehicles equipped with a Dash Display) or made available by plugging a Handset into the plug "Y" location, and then reading the status code.

**Note:** Status code numbers from 00 to 99 are traction control status codes. Status codes with the prefix 1 (101 to 199) are pump control status codes.

With the status code number, follow the procedures outlined in the status code instruction sheets to determine the problem.

**Important Note:** Due to the interaction of the logic card with all vehicle functions, almost any status code or control fault could be caused by the logic card. After all other status code procedures have been followed and no problem is found, the controller should then be replaced as the last option to correct the problem.

The same device designations have been maintained on different controls but the wire numbers may vary. Refer to the elementary and wiring diagrams for your specific control. The wire numbers shown on the elementary diagram will have identical numbers on the corresponding wiring diagrams for a specific vehicle, but these numbers may be different from the numbers referenced in this publication.

**WARNING: Before trouble-shooting, jack up the drive wheels, disconnect the battery and discharge the capacitors. Reconnect the battery as needed for specific checks. Capacitors should be discharged by connecting a 200 ohm 2 watt resistor between the positive and negative terminals on the control panel.**

Check resistance on R x 1000 scale from frame to power and control terminals. A resistance of less than 20,000 ohms can cause misleading symptoms. Resistance less than 1000 ohms should be corrected first.

Before proceeding, visually check for loose wiring, mis-aligned linkage to the accelerator switch, signs of overheating of components, etc.

Tools and test equipment required are: clip leads, volt-ohm meter (20,000 ohms per volt) and basic hand tools.

**Section 4.6 Traction Control Codes**

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>NONE</b>	Segments do not illuminate on the Dash Display and/or the Handset.	No input voltage to the control card or the display unit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Display screen on Dash Display and/or Handset is blank.</p> <p><b>POSSIBLE CAUSE</b> Positive or negative control voltage is not present.</p> <ul style="list-style-type: none"> <li>• Insure that the key switch is closed and voltage is present between P1 &amp; battery negative (Power Terminal "NEG"). Also check for voltage between P2 and control negative.</li> </ul> <p>Open circuit between control card AND the Dash Display or Handset.</p> <ul style="list-style-type: none"> <li>• Check for an open circuit or loose connection going from the control and the Dash Display or Handset.</li> </ul> <p>Defective Dash Display or Handset.</p> <ul style="list-style-type: none"> <li>• Replace Dash Display or Handset.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-01</b>	No brake switch or deadman switch input (no voltage to P6).	This status code will be displayed when P6 is less than 50% battery volts.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Mis-adjusted or defective brake or deadman switch.</p> <ul style="list-style-type: none"> <li>• Check to see that the brake switch closes properly.</li> </ul> <p>Open circuit between battery positive and P6.</p> <ul style="list-style-type: none"> <li>• Check for loose connections or broken wires:                             <ul style="list-style-type: none"> <li>- Between the brake switch and P6</li> <li>- Between the key switch and the battery positive side of the brake switch.</li> <li>- Between the brake switch and P2.</li> </ul> </li> <li>• On vehicles without a brake/deadman switch, check for a loose connection or broken wire from P2 and/or P6.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-02</b> <b>STANDARD</b>	Standard truck configuration where the direction is set by accelerator volts – forward direction selected on power up.	This status code will be displayed when voltage at P7 is less than 1.9V.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate because of Static Return to Off (SRO) lock out.</p> <p><b>POSSIBLE CAUSE</b> Accelerator calibration is incorrect and it must be recalibrated for a new accelerator pot installation.</p> <ul style="list-style-type: none"> <li>Repeat the accelerator pot calibration routine outlined in this operating manual</li> </ul> <p>The voltage at P9 is less than 4.2V.</p> <ul style="list-style-type: none"> <li>Measure the accelerator pot to verify that it reads above 3K ohms. If not, replace the accelerator pot.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>Replace the controller unit.</li> </ul>	<p>The diagram shows the Traction Control Plug PL-2 with pins P1 through P23. Key components connected include: KEY SWITCH (to P1, P2, P6), BRAKE SWITCH (to P2, P6), SEAT SWITCH (to P6), FAN (to P18), FAN ENABLE (to P17), DIRECT SWITCH (to P4), FWD/REV switches (to P4), PARK BRAKE SWITCH (to P5, P21), ACCEL* SWITCH (to P7, P9), and a 24V FAN. It also shows connections for +12V TACH, TACH SIGNAL, TEMPERATURE SENSOR INPUT FROM TRACTION MOTOR, and TEMPERATURE INPUT FROM PUMP CONTROL. A note indicates that an open input or voltage &gt; 3V = BDI SIGNAL DISABLED.</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-02</b> <b>OPTIONAL</b>	Optional truck configuration with directional switch input - forward directional switch is closed on initial power up.	This status code will be displayed when P4 is greater than 60% of battery voltage at initial key switch on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate because of Static Return to Off (SRO) lock out.</p> <p><b>POSSIBLE CAUSE</b> Forward directional switch is closed on initial start up (i.e. closure of battery, key switch or brake switch).</p> <ul style="list-style-type: none"> <li>Return directional switch lever to neutral and then return lever to forward position.</li> </ul> <p>Forward directional switch is welded closed or mis-adjusted to be held closed.</p> <ul style="list-style-type: none"> <li>Replace or adjust directional switch to insure that it opens when the directional switch is returned to neutral.</li> </ul> <p>Short circuit between B+ and P4.</p> <ul style="list-style-type: none"> <li>Disconnect the wire from P4 and check for positive voltage. Correct source of voltage.</li> </ul> <p>Defective control. Replace the controller unit.</p>	<p>The diagram is identical to the one for the standard configuration, showing the Traction Control Plug PL-2 with pins P1 through P23 and their respective electrical connections to various vehicle components.</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-03</b> <b>STANDARD</b>	Standard truck configuration where direction is set by accelerator volts – reverse direction selected on power up.	This status code will be displayed when the voltage at P7 is greater than 2.4V.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate because of Static Return to Off (SRO) lock out.</p> <p><b>POSSIBLE CAUSE</b> Accelerator calibration is incorrect and it must be recalibrated for a new accelerator pot installation.</p> <ul style="list-style-type: none"> <li>Repeat the accelerator pot calibration routine outlined in this operating manual</li> </ul> <p>Defective control. Replace the controller unit.</p>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-03</b> <b>OPTIONAL</b>	Optional truck configuration with directional switch input - reverse directional switch is closed on initial power up.	This status code will be displayed when P5 is greater than 60% of battery voltage at initial key switch on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate because of Static Return to Off (SRO) lock out.</p> <p><b>POSSIBLE CAUSE</b> Reverse directional switch is closed on initial start up (i.e. closure of battery, key switch or brake/deadman switch).</p> <ul style="list-style-type: none"> <li>Return directional switch lever to neutral and then return lever to reverse position.</li> </ul> <p>Reverse directional switch is welded closed or mis-adjusted to be held closed.</p> <ul style="list-style-type: none"> <li>Replace or adjust directional switch to insure that it opens when the directional switch is returned to neutral.</li> </ul> <p>Short circuit between B+ and P5.</p> <ul style="list-style-type: none"> <li>Disconnect the wire from P5 and check for a voltage in the wire that was connected to P5. If voltage is measured, locate and correct its source.</li> </ul> <p>Defective control. Replace the controller unit.</p>	


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-06</b>	Accelerator depressed with no direction selected.	This status code will be displayed when P4 and P5 are less than 60% of battery volts, and P7 is less than 2.5 volts.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Accelerator pedal is depressed before closing forward or reverse directional switch.</p> <ul style="list-style-type: none"> <li>Status code will disappear when directional switch is closed or when accelerator pedal is released.</li> </ul> <p>Defective directional switch</p> <ul style="list-style-type: none"> <li>Check forward or reverse switch to insure closure when direction is selected.</li> </ul> <p>Open circuit between directional switch(es) and battery positive or between directional switch(es) and P4 or P5.</p> <ul style="list-style-type: none"> <li>Check all control wires and connections shown in Trouble Shooting Diagram.</li> </ul>	<p>The diagram shows the electrical connections for the Traction Control Plug PL-2. It includes components such as the Key Switch, Brake Switch, Seat Switch, Direct Switch, FAN, and Park Brake Switch. The plug pins are labeled P1 through P23. Connections include a 24V FAN ENABLE line to P18, a 2.2K 2W resistor between P5 and P21, and various sensor and control inputs like +12V TACH, TACH SIGNAL, and TEMPERATURE SENSOR INPUT FROM TRACTION MOTOR.</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-07</b>	Accelerator voltage is too high.	This status code will be displayed when the accelerator voltage is higher than 4.2 volts, and a directional contactor is picked up.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate when accelerator pedal is depressed or status code -07 is displayed then disappears when the vehicle starts to accelerate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>Status code is possible if Function 11 is set to a value in excess of 200 while SL1 is activated.</li> </ul>	<p>The diagram shows a three-pin connector with pins labeled P9, P7, and P8. These pins are connected to an ACC POT (Accelerator Potentiometer).</p>


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<p><b>-09</b> <i>OPTIONAL</i></p>	<p>Optional truck configuration - both the forward and reverse directional switches are closed at the same time.</p>	<p>This status code will be displayed when P4 and P5 are greater than 60% of battery volts at the same time.</p>
<p>MEMORY RECALL <b>NO</b></p>	<p><b>CORRECTIVE ACTIONS</b></p>	<p><b>TROUBLE-SHOOTING DIAGRAM</b></p>
<p>Circuits valid for Traction Controller</p>	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Forward or reverse directional switch welded closed or mis-adjusted to be held closed.</p> <ul style="list-style-type: none"> <li>Replace or adjust directional switches to insure that they open when directional switch is returned to neutral.</li> </ul> <p>Short circuit between battery positive and P4 and/or P5.</p> <ul style="list-style-type: none"> <li>Disconnect wires from P4 and P5 and check wire for short circuit to positive side of directional switch.</li> </ul> <p>Defective Control</p> <ul style="list-style-type: none"> <li>Disconnect wires and measure voltage at P4 and P5. Voltage should be less than 60% of battery volts.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<p><b>-11</b></p>	<p>Accelerator volts too low on power up.</p>	<p>This status code will be displayed when accelerator volts are less than 1.7V at P7.</p>
<p>MEMORY RECALL <b>NO</b></p>	<p><b>CORRECTIVE ACTIONS</b></p>	<p><b>TROUBLE-SHOOTING DIAGRAM</b></p>
<p>Circuits valid for Traction Controller</p>	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Defective accelerator pot.</p> <ul style="list-style-type: none"> <li>Measure the voltage from P9 to NEG. Voltage should be between 4 to 4.8 volts. If not, disconnect the wire from P9. Measure the voltage from P9 to NEG. This voltage should be greater than 4 volts; if not, replace the control.</li> <li>Disconnect wire from P7. Measure voltage from the wire removed from P7 to NEG. Voltage should be greater than 1.9V, if not, replace accelerator pot.</li> </ul>	


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-12</b>	One or both accelerator pots are defective when the control is configured for dual pot input.	This status code will be displayed when the sum of the voltages of the two pots is greater than 5V or less than 4V.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective accelerator pot.</p> <ul style="list-style-type: none"> <li>Measure the voltage from P9 to P8. Voltage should be between 4 to 4.8 volts. Voltage from P7 to NEG should be approximately 2.14 V. Connect the voltmeter from P7 to P13. The voltage measured should equal 0 to +/- 0.25V. Connect the voltmeter to the wire removed from P7. Connect the voltmeter negative to the wire removed from P13. The voltmeter should read greater than 4V, but less than 5V. If not, replace the potentiometer.</li> </ul>	

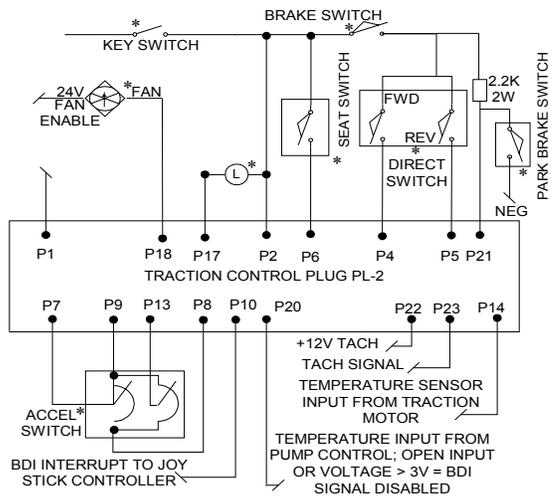

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-15</b>	Battery voltage is too low or control card is mis-adjusted.	This status code will be displayed when the battery volts are less than 1.95 volts per cell at initial key switch on. See table below.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Discharged battery</p> <ul style="list-style-type: none"> <li>Check battery for proper open circuit voltage as shown in "Trouble Shooting Diagram", charge battery, if required.</li> </ul> <p>Defective battery</p> <ul style="list-style-type: none"> <li>Check each battery cell for proper voltage (greater than 1.95 volts at cell). Replace or repair battery.</li> </ul> <p>Incorrect control card adjustment.</p> <ul style="list-style-type: none"> <li>Check Function 15 for proper adjustment for battery being used. See Handset instruction sheet for details. Adjust to proper settings.</li> </ul> <p>Check "minimum" battery volts at P1 and NEG.</p>	

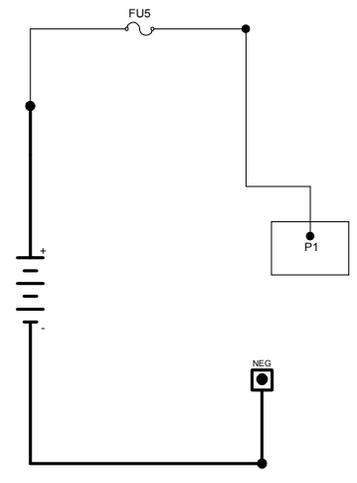

NOMINAL BATTERY VOLTAGE	MINIMUM LIMIT VOLTS AT 1.95 VDC PER CELL
24	23.4
36	35.1
48	46.8
72	70.2
80	78.0

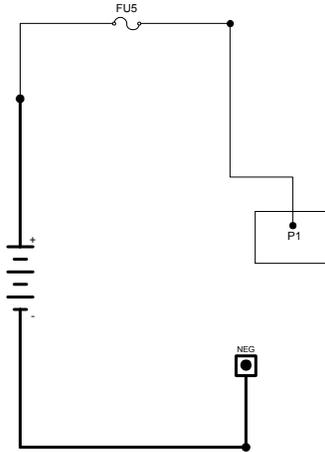TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION												
<b>-16</b>	Battery voltage is too high or control card is mis-adjusted.	This status code will be displayed when the battery volts are greater than 2.4 volts per cell at initial key switch on. See table below.												
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>												
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Incorrect control card adjustment Check Function 15 for proper adjustment for battery being used. See Handset instructions for details. Adjust to proper setting.</p> <p>Battery over charged or incorrect battery used.</p> <ul style="list-style-type: none"> <li>• Check battery for proper open circuit voltage per table at right. If voltage is excessive, check battery charger for proper output voltage.</li> </ul> <p>Check "maximum" battery volts at P1 and NEG.</p>	 <table border="1" data-bbox="1242 525 1461 745"> <thead> <tr> <th>NOMINAL BATTERY VOLTAGE</th> <th>MAXIMUM LIMIT VOLTS AT 1.95 VDC PER CELL</th> </tr> </thead> <tbody> <tr> <td>24</td> <td>23.4</td> </tr> <tr> <td>36</td> <td>35.1</td> </tr> <tr> <td>48</td> <td>46.8</td> </tr> <tr> <td>72</td> <td>70.2</td> </tr> <tr> <td>80</td> <td>78.0</td> </tr> </tbody> </table>	NOMINAL BATTERY VOLTAGE	MAXIMUM LIMIT VOLTS AT 1.95 VDC PER CELL	24	23.4	36	35.1	48	46.8	72	70.2	80	78.0
NOMINAL BATTERY VOLTAGE	MAXIMUM LIMIT VOLTS AT 1.95 VDC PER CELL													
24	23.4													
36	35.1													
48	46.8													
72	70.2													
80	78.0													

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-23</b>	Motor field current is high on start up in the reverse direction.	This status code will be displayed when the current draw in the motor field is too high (greater than 1.1V) at start up in the reverse direction.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control. • Replace controller unit.</p>	<b>NO GRAPHIC FOR THIS STATUS CODE</b>


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-24</b>	Motor field current is high on start up in the forward direction.	This status code will be displayed when the current draw in the motor field is too high (greater than 1.1V) at start up in the forward direction.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<p><b>NO GRAPHIC FOR THIS STATUS CODE</b></p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-27</b>	Control's power supply is less than 10 Volts DC.	This status code will be displayed when the control's power supply is less than 10 volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor opens and closes, then can only be closed by opening and closing the key switch.</p> <p><b><u>POSSIBLE CAUSE</u></b> Discharged Battery</p> <ul style="list-style-type: none"> <li>• Check battery to insure proper state of charge. Voltage may be dropping below 10 Volts DC under load.</li> </ul> <p>Loose connection at P1.</p> <ul style="list-style-type: none"> <li>• Insure that the wire connection at P1 is tight.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-28</b>	Motor field current is too high during the run mode.	This status code will be displayed when the current in the motor field is sustained above a preset limit for longer than 70 seconds.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Continued operation of vehicle in high motor current condition.</p> <ul style="list-style-type: none"> <li>Operate vehicle at lower motor current condition for 70 seconds.</li> </ul> <p>Function 7 is mis-adjusted to allow higher than normal motor field current.</p> <ul style="list-style-type: none"> <li>Adjust function per OEM instructions.</li> </ul>	<p><b><i>THE PRESENCE OF THIS STATUS CODE IS NOT NECESSARILY INDICATIVE OF A CONTROL ISSUE. IF FUNCTION 7 IS NOT MIS-ADJUSTED, THE STATUS CODE INDICATES AN APPLICATION ISSUE WHERE A MOTOR IS BEING STALLED, ETC. DISPLAY OF THIS STATUS CODE SHOULD NOT TRIGGER THE RETURN OF A CONTROL FOR REPAIR OR REPLACEMENT.</i></b></p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-41</b>	Open thermal protector (TP) or transistor over temperature.	This status code will be displayed when the voltage at the thermal protector is too high.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Reduced or no power to traction motor in control range.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is in thermal cut-back.</p> <ul style="list-style-type: none"> <li>Allow control to cool, status code should disappear.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>Replace controller unit.</li> </ul>	<p><b><i>THE PRESENCE OF THIS STATUS CODE IS NOT NECESSARILY INDICATIVE OF A CONTROL ISSUE. THE STATUS CODE MAY INDICATE AN APPLICATION ISSUE WHERE A MOTOR IS BEING STALLED, ETC. DISPLAY OF THIS STATUS CODE SHOULD NOT TRIGGER THE RETURN OF A CONTROL FOR REPAIR OR REPLACEMENT.</i></b></p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-42</b>	Motor armature offset voltage is too high.	This status code will be displayed when the voltage at the current sensor input is greater than 2.7 volts with no current flowing in the motor circuit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control. • Replace controller unit.</p>	

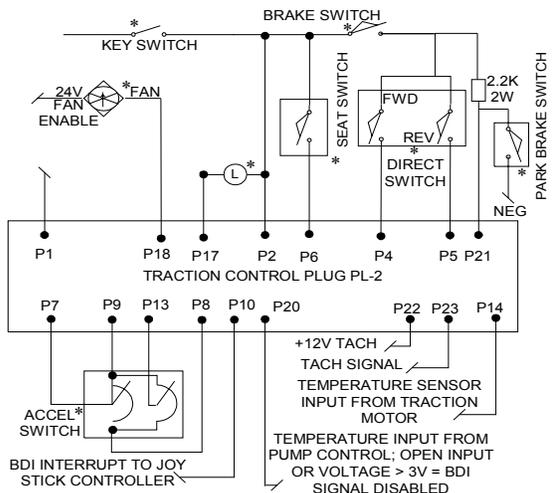

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-43</b>	Motor armature offset voltage is too low.	This status code will be displayed when the voltage at the current sensor input is less than 2.4 volts with no current flowing in the motor circuit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control. • Replace controller unit.</p>	

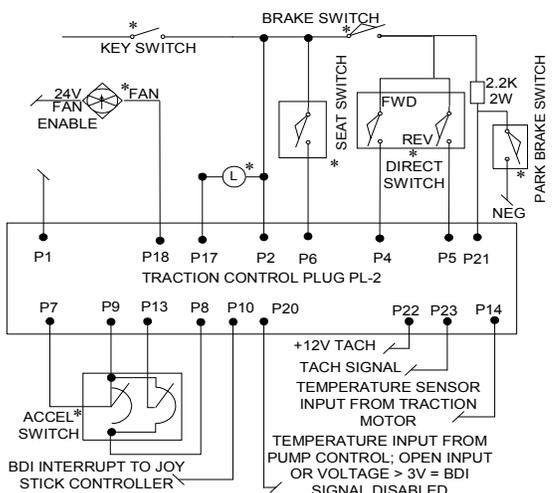

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-44</b>	Armature transistor did not turn off properly.	This status code will be displayed when, during control operation, the armature transistor fails to turn off. This will result in a PMT condition.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor opens and closes, then can only be closed by opening and closing the key switch.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<p>The diagram shows a Traction Control Plug PL-2 with pins P1 through P23. Key components and their connections are:</p> <ul style="list-style-type: none"> <li><b>KEY SWITCH:</b> Connected to P18 and P17.</li> <li><b>BRAKE SWITCH:</b> Connected to P2 and P6.</li> <li><b>SEAT SWITCH:</b> Connected to P4 and P5.</li> <li><b>FAN:</b> 24V FAN ENABLE connected to P13.</li> <li><b>FWD/REV/DIRECT SWITCH:</b> Connected to P20, P22, and P23.</li> <li><b>PARK BRAKE SWITCH:</b> Connected to P14 and P14 (NEG).</li> <li><b>ACCEL SWITCH:</b> Connected to P7 and P9.</li> <li><b>BDI INTERRUPT TO JOY STICK CONTROLLER:</b> Connected to P8 and P10.</li> <li><b>Sensors:</b> +12V TACH, TACH SIGNAL, TEMPERATURE SENSOR INPUT FROM TRACTION MOTOR, and TEMPERATURE INPUT FROM PUMP CONTROL (OPEN INPUT OR VOLTAGE &gt; 3V = BDI SIGNAL DISABLED) are connected to P2, P6, P4, P5, P21, P22, P23, and P14.</li> </ul>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-45</b>	Armature transistor did not turn on properly.	This status code will be displayed when, during control operation, the armature transistor fails to turn on properly. This will result in a PMT condition.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor opens and closes, then can only be closed by opening and closing the key switch.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<p>The diagram shows a Traction Control Plug PL-2 with pins P1 through P23. Key components and their connections are:</p> <ul style="list-style-type: none"> <li><b>KEY SWITCH:</b> Connected to P18 and P17.</li> <li><b>BRAKE SWITCH:</b> Connected to P2 and P6.</li> <li><b>SEAT SWITCH:</b> Connected to P4 and P5.</li> <li><b>FAN:</b> 24V FAN ENABLE connected to P13.</li> <li><b>FWD/REV/DIRECT SWITCH:</b> Connected to P20, P22, and P23.</li> <li><b>PARK BRAKE SWITCH:</b> Connected to P14 and P14 (NEG).</li> <li><b>ACCEL SWITCH:</b> Connected to P7 and P9.</li> <li><b>BDI INTERRUPT TO JOY STICK CONTROLLER:</b> Connected to P8 and P10.</li> <li><b>Sensors:</b> +12V TACH, TACH SIGNAL, TEMPERATURE SENSOR INPUT FROM TRACTION MOTOR, and TEMPERATURE INPUT FROM PUMP CONTROL (OPEN INPUT OR VOLTAGE &gt; 3V = BDI SIGNAL DISABLED) are connected to P2, P6, P4, P5, P21, P22, P23, and P14.</li> </ul>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-46</b>	"Look Ahead" test for A2 volts less than 12% of battery volts.	This status code will be displayed when the voltage at A2 is less than 12% of battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor will not pick up.</p> <p><b><u>POSSIBLE CAUSE</u></b> Check for short circuit from the motor armature to the frame of the vehicle.</p> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<p>The diagram shows the Traction Control Plug PL-2 with pins P1 through P23. Connections include: KEY SWITCH to P1; 24V FAN ENABLE to P18; BRAKE SWITCH to P2; SEAT SWITCH to P6; FWD/REV DIRECT SWITCH to P4; PARK BRAKE SWITCH to P5; ACCEL* SWITCH to P7; BDI INTERRUPT TO JOY STICK CONTROLLER to P9; +12V TACH TACH SIGNAL to P10; TEMPERATURE SENSOR INPUT FROM TRACTION MOTOR to P13; TEMPERATURE INPUT FROM PUMP CONTROL; OPEN INPUT OR VOLTAGE &gt; 3V = BDI SIGNAL DISABLED to P14; and NEG to P21. A 2.2K 2W resistor is connected between P21 and P5.</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-49</b>	Motor field current is too low during the run mode.	This status code will be displayed when the current draw in the motor field is too low during the run mode.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<p>The diagram shows the Traction Control Plug PL-2 with pins P1 through P23. Connections include: KEY SWITCH to P1; 24V FAN ENABLE to P18; BRAKE SWITCH to P2; SEAT SWITCH to P6; FWD/REV DIRECT SWITCH to P4; PARK BRAKE SWITCH to P5; ACCEL* SWITCH to P7; BDI INTERRUPT TO JOY STICK CONTROLLER to P9; +12V TACH TACH SIGNAL to P10; TEMPERATURE SENSOR INPUT FROM TRACTION MOTOR to P13; TEMPERATURE INPUT FROM PUMP CONTROL; OPEN INPUT OR VOLTAGE &gt; 3V = BDI SIGNAL DISABLED to P14; and NEG to P21. A 2.2K 2W resistor is connected between P21 and P5.</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-51</b>	Capacitor volts are low before the line contactor closes.	This status code will be displayed during "key on" when the capacitor volts is less than 50% of battery volts at initial key switch on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor does not close when capacitor does not precharge.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control fuse.</p> <ul style="list-style-type: none"> <li>• Check control fuse for open circuit. Replace fuse, if necessary.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-57</b>	Controller "motor current sensor" input too low during running.	This status code will be displayed when the voltage input from the current sensor is too low during running.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<p style="text-align: center;"><b>NO GRAPHIC FOR THIS STATUS CODE</b></p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-64</b>	The line driver input (P2-17) is less than 12% of battery volts	This status code will be displayed when the control detects that the line driver input (P2-17) is less than 12% battery volts when the key switch is turned on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> -Open wire connection to Pin 17 - Shorted line Driver transistor</p> <p>Defective control. • Replace controller unit.</p>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-65</b>	The line coil or fan current is too high during the run mode.	This status code will be displayed when the current limit in the line coil is exceeded during the run mode. The line contactor will drop out and the key switch will have to be recycled to reset the control.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> - Shorted line contactor coil - Short between wires connected to line coil</p> <p>If line coil resistance is correct: Defective control. • Replace controller unit.</p>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-66</b>	The field current exceeds the current limit of the field transistor.	This status code will be displayed when the field transistor exceeds its specific current limit. The line contactor will drop out and the key switch will have to be recycled to restart the control.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate</p> <ul style="list-style-type: none"> <li>Line contactor opens</li> </ul> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>Shorted field F1 to F2</li> <li>F1 or F2 terminals shorted to battery positive (B+)</li> <li>F1 or F2 terminals shorted to battery negative (B-)</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-67</b>	The armature current exceeds the armature transistor limit.	This status code will be displayed when the armature transistor exceeds its specific current limit. The control is reset by recycling the key switch.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>Shorted motor armature A1 to A2</li> <li>Power cables may be shorted to each other (Measure at control terminals)</li> <li>A1 to A2 terminals may be shorted to battery positive or negative</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-69</b>	The fan driver current is too high.	This status code will be displayed when the current in the fan driver circuit exceeds its specific current limit. The control is reset by recycling the key switch.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>Shorted fan driver coil</li> <li>Short between wires connecting to the fan driver coil.</li> </ul> <p>If the fan driver coil resistance is correct, then:</p> <ul style="list-style-type: none"> <li>Defective control. Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-71</b>	Accelerator potentiometer out of range (for single accelerator potentiometer operation).	This status code will be displayed when the voltage at P7 is greater than 4.13V or less than 0.196V.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>Defective accelerator pot.                     <ul style="list-style-type: none"> <li>Measure the voltage from P9 to NEG. It should be between 4.0 to 4.8V. If it is, replace the accelerator pot.</li> </ul> </li> <li>If the voltage from P9 to NEG is not between 4.0 to 4.8V, remove the wire from P9 and measure the voltage at P9. It should be between 4.0 to 4.8V. If it is not, replace the control.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION								
<b>-76</b>	Capacitor (1C) voltage too high.	This status code will be displayed when the voltage on the capacitor goes above limit voltage* during the regenerative braking cycle.								
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>								
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor opens and closes, then opens and can only close by opening and closing the key switch.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>• Unplugging the battery connector during regenerative braking.</li> <li>• Line contactor bouncing open during regen.</li> <li>• Main power fuse opening during regen.</li> <li>• Intermittent battery plug connection.</li> </ul> <p>* Limit Voltage:</p> <table border="1"> <thead> <tr> <th>Limit</th> <th>Batt.</th> </tr> </thead> <tbody> <tr> <td>50V</td> <td>36V</td> </tr> <tr> <td>70V</td> <td>48V</td> </tr> <tr> <td>96V</td> <td>72/80V</td> </tr> </tbody> </table>	Limit	Batt.	50V	36V	70V	48V	96V	72/80V	
Limit	Batt.									
50V	36V									
70V	48V									
96V	72/80V									

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-77</b>	Motor current is detected during regenerative braking.	This status code will be displayed when motoring current is detected during the regenerative braking cycle.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor opens and closes, then opens and can only close by opening and closing the key switch.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
-81	Tachometer signal is lost.	This status code will be displayed when the input at P23 is lost.
MEMORY RECALL YES	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Truck regens and will not plug, and status code 81 is displayed on dash.</p> <p><b><u>POSSIBLE CAUSE</u></b> Lost input at P23.</p> <ul style="list-style-type: none"> <li>Verify wiring at P23 from tachometer.</li> </ul> <p>Defective tachometer.</p> <ul style="list-style-type: none"> <li>Replace tachometer unit.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>Replace controller unit.</li> </ul>	<p>The diagram shows the TRACTION CONTROL PLUG PL-2 with pins P1 through P23. Key components and their connections include: KEY SWITCH (P1), BRAKE SWITCH (P2), SEAT SWITCH (P6), FAN (P18), DIRECT SWITCH (P4), PARK BRAKE SWITCH (P21), ACCEL SWITCH (P7), and a tachometer signal input at P23. A note indicates that a temperature input from the pump control is disabled if the voltage is greater than 3V.</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
-82	Traction motor is stalled.	This status code will be displayed when the MPH is less than the value of setting of Function 16 and the $I_m$ is greater than 370A for 3.5 seconds.
MEMORY RECALL YES	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> The control will not operate and can only be reset by cycling the accelerator.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>Continued operation of vehicle in high motor current condition</li> <li>Operating control at stall motor current for more than 3.5 seconds</li> <li>Function 16 is incorrectly adjusted for control % on-time                             <ul style="list-style-type: none"> <li>Adjust function per OEM instructions</li> </ul> </li> </ul>	<p><b><i>THE PRESENCE OF THIS STATUS CODE SI NOT NECESSARILY INDICATIVE OF A CONTROL ISSUE. IF FUNCTION 16 IS NOT MIS-ADJUSTED, THE STATUS CODE INDICATES AN APPLICATION ISSUE WHERE A MOTOR IS BEING STALLED, ETC. DISPLAY OF THIS STATUS CODE SHOULD NOT TRIGGER THE RETURN OF A CONTROL FOR REPAIR OR REPLACEMENT.</i></b></p>

**Section 4.7 TMM Codes**

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-92</b>	Pump motor temperature has exceeded maximum temperature limit.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is greater than 2.5V.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Motor Temperature	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by switch closure to battery negative.</p> <p>Plug P11 (pump) is shorted to battery negative.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	<p style="text-align: right;">SC91</p>


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-93</b>	Pump motor brush wear indicator has detected worn brush.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Steer Pump Motor Brush Wear Indicator	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by motor brush sensor closure to battery positive.</p> <p>Plug P3 (pump) is shorted to positive.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	<p style="text-align: right;">SC93</p>


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-94</b>	Traction motor brush wear indicator has detected worn brush.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Motor Brush Wear Indicator	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by motor brush sensor closure to battery positive.</p> <p>Plug P5 (pump) is shorted to positive.</p> <p>Defective input switch (open).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	<p style="text-align: right;">SC94</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-98</b>	Traction motor temperature has exceeded maximum temperature limit.	This status code will be displayed when the voltage at P14 is greater than 1.15 V.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Motor Temperature	<p><b><u>SYMPTOM</u></b> Status code flashes "on" and "off".</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective motor thermistor. Resistance is greater than 1400 ohms Measure the voltage from P14 to NEG. This voltage should be greater than 1.15V. If not, the thermistor is defective.</p> <p>Cold = 25°C = 750 ohms Hot = 155°C = 1400 ohms</p>	<p style="text-align: right;">SC90</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-99</b>	Maintenance alert and speed limit.	This status code will be displayed when the “normal” hour meter exceeds the “maintenance alert hours” setting for the vehicle.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Status code is displayed for 4 seconds when the key switch is first turned on, and/or the vehicle may run at a reduced speed.</p> <p><b><u>CUSTOMER SELECTED SETTING WITH THE HANDSET:</u></b> User defined status code is displayed when the normal hour meter reading exceeds the programmed “maintenance alert hours” setting selected by the user</p> <ul style="list-style-type: none"> <li>• Maintenance Code Hour Meter, Functions 19 and 20, are programmed with the Handset and command the display of status code - 99.</li> <li>• If desired, Maintenance Code Speed Limit, Function 13, can be programmed with the Handset.</li> </ul> <p>User should perform the desired maintenance function. Re-set maintenance alert hour meter after maintenance is performed.</p>	<p><b><u>NO DIAGRAM</u></b></p> <p><b>USER SHOULD PERFORM THE DESIRED MAINTENANCE FUNCTION</b></p>

**Section 4.8 Pump Control Codes**

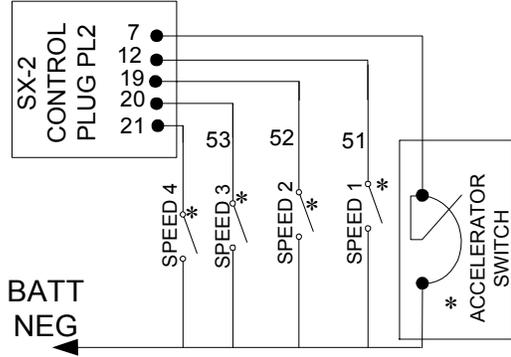PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-101</b>	"SPEED 1" switch closed with the key turned off.	This status code will be displayed when the "SPEED 1" switch closes while the key switch is turned off.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> "SPEED 1" switch is closed or shorted to battery negative.</p> <ul style="list-style-type: none"> <li>Verify connections at P12 and Battery negative. Replace switch, if necessary.</li> </ul>	 <p>The diagram shows an SX-2 Control Plug PL2 with pins 7, 12, 19, 20, and 21. Pin 7 is connected to the SPEED 4 switch. Pin 12 is connected to the SPEED 3 switch. Pin 19 is connected to the SPEED 2 switch. Pin 20 is connected to the SPEED 1 switch. Pin 21 is connected to the Accelerator Switch. The Accelerator Switch is also connected to BATT NEG. The switches are labeled SPEED 4, SPEED 3, SPEED 2, and SPEED 1. The Accelerator Switch is labeled ACCELERATOR SWITCH. There are asterisks next to the switch labels.</p>

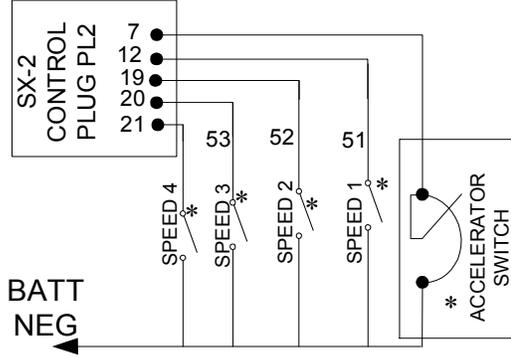PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-102</b>	"SPEED 2" switch closed with the key turned off.	This status code will be displayed when the "SPEED 2" switch closes while the key switch is turned off.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> "SPEED 2" switch is closed or shorted to battery negative.</p> <ul style="list-style-type: none"> <li>Verify connections at P19 and Battery negative. Replace switch, if necessary.</li> </ul>	 <p>The diagram shows an SX-2 Control Plug PL2 with pins 7, 12, 19, 20, and 21. Pin 7 is connected to the SPEED 4 switch. Pin 12 is connected to the SPEED 3 switch. Pin 19 is connected to the SPEED 2 switch. Pin 20 is connected to the SPEED 1 switch. Pin 21 is connected to the Accelerator Switch. The Accelerator Switch is also connected to BATT NEG. The switches are labeled SPEED 4, SPEED 3, SPEED 2, and SPEED 1. The Accelerator Switch is labeled ACCELERATOR SWITCH. There are asterisks next to the switch labels.</p>

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-103</b>	"SPEED 3" switch closed with the key turned off.	This status code will be displayed when the "SPEED 3" switch closes while the key switch is turned off.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> "SPEED 3" switch is closed or shorted to battery negative.</p> <ul style="list-style-type: none"> <li>Verify connections at P20 and Battery negative. Replace switch, if necessary.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-104</b>	"SPEED 4" switch closed with the key turned off.	This status code will be displayed when the "SPEED 4" switch closes while the key switch is turned off.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> "SPEED 4" switch is closed or shorted to battery negative.</p> <ul style="list-style-type: none"> <li>Verify connections at P21 and Battery negative. Replace switch, if necessary.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-117</b>	"Card Type" selection is invalid.	This status code will be displayed when the card type selection value is set to an invalid number.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Invalid card type selection.</p> <ul style="list-style-type: none"> <li>Review function 17 in the Handset Instruction sheets. Adjust and set card type value as instructed by OEM service manual.</li> </ul>	<p><b>NO GRAPHIC FOR THIS STATUS CODE</b></p>

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-123</b>	Pump line contactor coil current is low.	This status code will be displayed when the current draw in the pump line contactor coil circuit is less than 100 milliamps and A2 is less than 88% of battery volts.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Pump contactor will not pick up. Status code may vary between code 123 and code 124.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective pump contactor coil circuit.</p> <ul style="list-style-type: none"> <li>Check for open circuit or loose connection between P17 and positive side of P line contactor coil.</li> <li>Check ohmic value from P17 to positive side of P line coil. Value should be between 10 and 14 ohms.</li> </ul>	<p>The diagram illustrates the electrical circuit for the pump control system. It shows the connection from the battery (BATT (+) and BATT (-)) through a line contactor (P) and a fuse (FU2*) to the pump control plug (P17). The plug is connected to the field armature (A1, A2) of the pump motor. The diagram also shows the connection to the pump control power connection (P, N) and the field armature (A1, A2). Other components shown include a key switch (KEY SW.), a fuse (FU4*), and various speed inputs (SPEED 1, SPEED 2, SPEED 3, SPEED 4). The diagram is labeled with terminal numbers P1, P2, P17, P18, P7, P12, P19, P20, P21 and includes a note: "* SUPPLIED BY CUSTOMER".</p>

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-124</b>	A2 voltage is low (less than 88% of battery volts).	This status code will be displayed when the A2 voltage is less than 88% of battery volts and the pump line driver is energized.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Control does not operate. Status code may vary between code 123 and code 124. Complete checks for code 124 and, if the problem is not found, perform checks for code 123.</p> <p><b>POSSIBLE CAUSE</b> Defective pump line contactor. Contactor power tips are failing to close due to:</p> <ul style="list-style-type: none"> <li>• Binding contactor tip assembly.</li> <li>• Defective pump contactor coil (see status code 123).</li> </ul> <p>Open motor circuit</p> <ul style="list-style-type: none"> <li>• Check for open circuit or loose connection in the pump motor circuit from the A1 connection to the A2 connection on the control.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-127</b>	Control logic card power supply is less than 10 VDC.	This status code is displayed when the logic card power supply is less than 10 volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Discharged Battery</p> <ul style="list-style-type: none"> <li>• Check battery to insure proper state of charge.</li> </ul> <p>Loose connection at P1.</p> <ul style="list-style-type: none"> <li>• Insure that the wire connection at P1 is tight.</li> </ul> <p>Defective logic card</p> <ul style="list-style-type: none"> <li>• Replace control.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-128</b>	Armature current is too high during the lift mode.	Status code displayed when the current in the armature circuit is sustained above 400A for 70 sec.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Continued operation of vehicle in high motor current condition.</p> <ul style="list-style-type: none"> <li>Operate vehicle at lower motor current condition for 70 seconds.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-141</b>	Open thermal protector (TP1) or transistor is over temperature.	This status code is displayed when the voltage at the thermal protector is greater than 2.3 volts.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Reduced or no power to pump motor in control range.</p> <p><b>POSSIBLE CAUSE</b> Control is in thermal cut-back.</p> <ul style="list-style-type: none"> <li>Allow control to cool, status code should disappear.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-142</b>	Pump Controller “motor current sensor” input is missing.	This status code is displayed when the voltage at the current sensor is greater than 0.1 volts with no current flowing in the motor circuit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> No power to pump motor in control range.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-143</b>	Pump Controller “motor current sensor” input is too low.	This status code is displayed when the voltage at the current sensor is greater than 0.1 volts with no current flowing in the motor circuit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> No power to pump motor in control range.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-144</b>	Power Transistor (Q1) did not turn off properly.	This status code is displayed when, during pump control operation, the transistor fails to turn off. This will result in a PMT condition.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> With no pump contactor, control may run continuously.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-145</b>	Power Transistor (Q1) did not turn on properly.	This status code is displayed when during pump control operation, the transistor fails to turn on.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> With no pump contactor, the control may run continuously.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-146</b>	"Look Ahead" test for A2 volts less than 12% of battery volts.	This status code will be displayed when the voltage at A2 is less than 12% of battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b>                      Pump control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b>                      Check for short circuit from the motor armature to the frame of the vehicle.</p> <p>Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-148</b>	"Look Ahead" test for A2 volts greater than 88% of battery volts.	This status code will be displayed when the voltage at A2 is greater than 88% of battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b>                      Pump line contactor will not pick up.</p> <p><b><u>POSSIBLE CAUSE</u></b>                      Defective pump contactor.</p> <ul style="list-style-type: none"> <li>• Check for welded pump contactor power tips.</li> <li>• Check for sluggish operation of pump contactor.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-150</b>	Capacitor volts are low after the line contactor closes.	This status code will be displayed when the capacitor voltage is less than 85% of the battery voltage in the run mode.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Pump control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective line contactor.</p> <ul style="list-style-type: none"> <li>• Check for open line contactor power tips.</li> </ul> <p>Check for loose or open connections in cables from battery positive to control positive circuit.</p> <p>Defective power fuse.</p> <ul style="list-style-type: none"> <li>• Check power fuse for open circuit.</li> </ul> <p>No battery voltage at P1.</p> <ul style="list-style-type: none"> <li>• Check for battery voltage at POS and P1.</li> <li>• Check for loose connection at P1.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-151</b>	Capacitor volts are low before the line contactor closes. (Internal card function during precharge)	This status code will be displayed during “key on” when the capacitor voltage is less than 85% of battery volts at initial key switch on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Pump control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control fuse.</p> <ul style="list-style-type: none"> <li>• Check control fuse for open circuit, replace fuse, if necessary.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul> <p><i>Note: Repeated “charging/discharging” the capacitors during troubleshooting will cause status code 51. Also “do not” connect <u>any</u> loads to the load side of the line contactor.</i></p>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-157</b>	Controller "motor current sensor" input voltage polarity check.	This status code will be displayed when the voltage input to motor current sensor is of the wrong polarity.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b>                      Pump control will not operate.</p> <p><b>POSSIBLE CAUSE</b>                      Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-180</b>	Voltage at capacitor (1C) is less than 14 volts.	This status code will be displayed when the voltage at P1 is less than 14 volts. This occurs typically in the run mode of operation.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b>                      Pump control will not operate.</p> <p><b>POSSIBLE CAUSE</b>                      (Line contactor controlled by traction control).                      Line Contactor opened up during run.</p> <ul style="list-style-type: none"> <li>• Check connection from P17 to Line coil (-) for loose connection.</li> <li>• Check connection from battery (+) to Line coil (+) for loose connection.</li> <li>• Check power connection from battery (+) to contactor L.</li> <li>• Check for blown fuse at pump control.</li> <li>• Check for dirty contactor tips.</li> </ul>	



## Section 5. SX FAMILY GE HANDSET INSTRUCTIONS

### Section 5.1 General Features

The GE Handset is a multi-functional tool to be used with the LX, ZX, and SX Series GE solid-state controls. The Handset consists of a Light Emitting Diode (LED) display and a keyboard for data entry.

**Note: The Handset is the same for all GE controls, however, the cable will change between some control types.**


### Section 5.2 Purpose / Setup Functions

The purpose of the Handset is to allow authorized personnel to perform the following functions of the SX family of Controls:

- Monitor existing system fault codes
- Monitor intermittent random fault codes
- Monitor battery state of charge on systems with BDI
- Monitor hourmeter reading
- Monitor or adjust the following control functions:
  - ◆ Creep speed
  - ◆ Armature Controlled Acceleration and 1A Time
  - ◆ Regenerative Braking Current Limit and Disable
  - ◆ Armature and Field Current Limit
  - ◆ Plugging Distance (Current)
  - ◆ Pedal Position Plug Range or Disable
  - ◆ 1A Drop Out Current or Disable
  - ◆ Speed Limit Points
  - ◆ Truck Management Fault Speed Limit
  - ◆ Internal Resistance Compensation for Battery State of Charge Indication
  - ◆ Battery Voltage ( 36/48 volts is auto ranging )
  - ◆ Selection of Card Operation Type.

**Warning: Before connecting or disconnecting the Handset tool, turn off the key switch, unplug the battery and jack up the drive wheels of the vehicle.**

At the transistor control traction card, unplug the "Y plug" if the dash display is in use, and plug in the Handset to the plug location "Y" on the control card. After installing the Handset tool, plug the battery in and turn the key switch on. The following is the start-up display sequence that will occur:

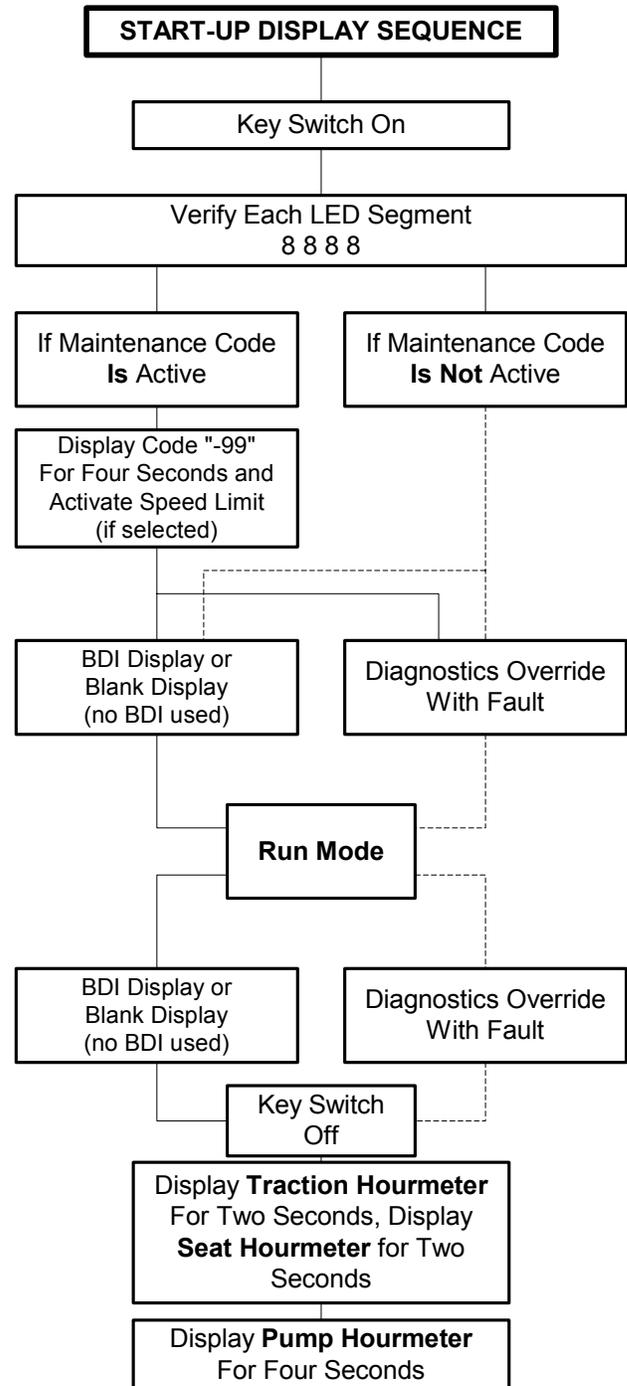

**NOTE: The vehicle can be operated with the Handset connected, however, the adjustment knob must be set fully clockwise to insure the control operates at top speed.**

**Warning: Before making any adjustments to the control, you must consult the operating and maintenance instructions supplied by the vehicle manufacturer. Failure to follow proper set up instructions could result in mis-operation or damage to the control system.**

**Section 5.3 Set-up Function Procedures**

With the Handset connected, hold down the **CONT** key and turn on the key switch. This will place you in the set-up mode, ready to monitor or adjust control function settings.

**NOTE:** The term "Push" means to depress key for approximately one second.

**Section 5.3.1 Setup Mode**

**SET-UP MODE**

ACTION	DISPLAY SHOWS	REMARKS
Hold Down CONT And Turn On Key	8 8 8 8	Segment Check Displayed
Push Function Number	U 0 0 5	Selected Function No. Is Displayed
After One Second Time Delay	0 8 5	Stored Value For The Function Is Displayed
Push CONT	0 8 5	Display Value Will Blink
Change Value With Adjustment Knob	1 2 5	Value Changes While Blinking
Push STORE	1 2 5	New Value Stored And Blinking Stops
Push ESC	8 8 8 8	Segment Check Displayed

At this point, another function can be monitored/changed by pushing another function number, or the vehicle can be placed in the run mode by holding the **ESC** key down for one second or longer. The display will return to either the diagnostics mode, the BDI display, or a blank display (if BDI is not used and there are no fault codes). The vehicle can now be operated with the Handset connected, or the Handset can be disconnected before operation.


**NOTE:** You can return to the segment check mode at any time, by holding down the **ESC** key until 8888 appears in the display.

**Section 5.3.2 Status Code Scrolling**


The SX family of controllers furnishes a function register that contains the last 16 "stored status codes" that shut down vehicle operation (a PMT type fault that is reset by cycling the key switch) and the battery state of charge

reading at the time the fault occurred. The first of the 16 status codes will be overwritten each time a new status code occurs. This stored status code register can be cleared from memory by using the Handset.


**ACCESSING STORED STATUS CODES WITH GE HANDSET**

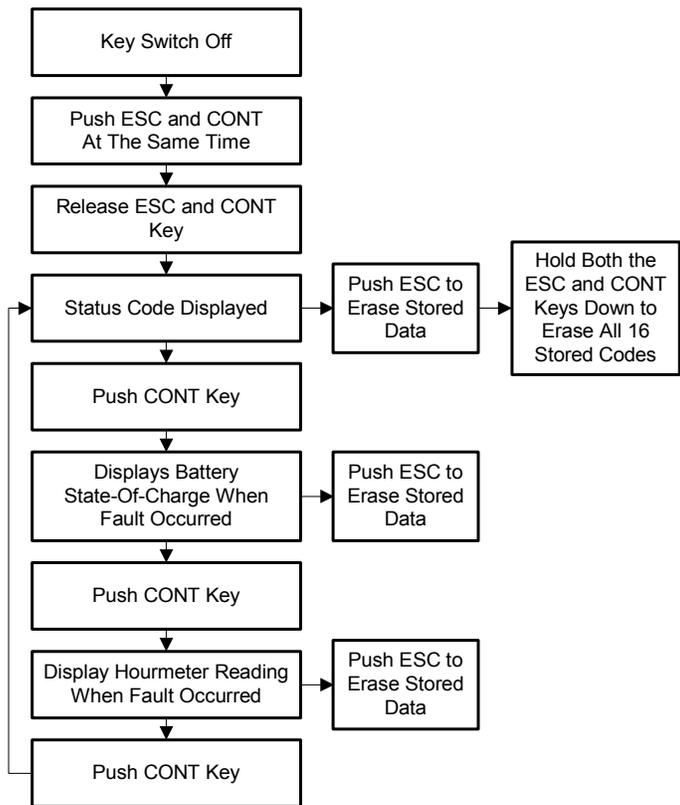

**Section 5.3.3 SX Family Handset, Plug Connections and Outline Drawing**

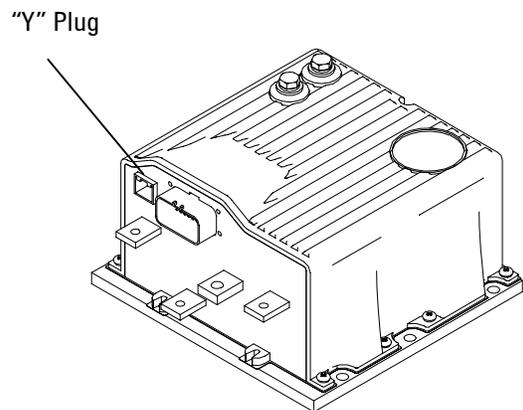

Handset Cable Part Number - 325B1002G1

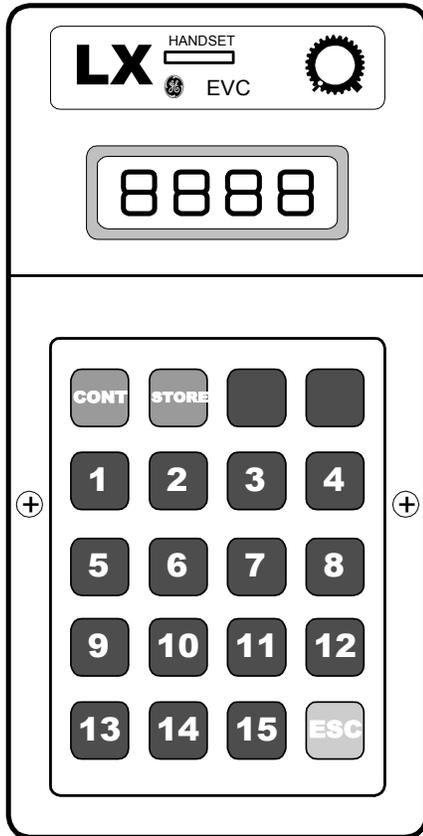

**Section 5.4 Setup Functions for Traction Controller**

**FUNCTION 1 MILE PER HOUR SCALING**

This function is used in conjunction with a tachometer to determine the speed of the vehicle. The following equation should be used to determine the appropriate setting for this function:

$$\text{Set} = \frac{10 \times 3600 \times 2 \times \text{Pi} \times \text{RR}}{5280 \times 12 \times \text{PPR} \times 0.010}$$

**FUNCTION 2 CREEP SPEED ( Push 2 )**

This function allows for the adjustment of the creep speed of the vehicle. Creep speed can be adjusted when an accelerator input voltage between 3.9 and 3.3 volts or an accelerator ohm input between 6K and 4.0K ohms is provided.

Range 2% to 15% on time  
Set 0 to 255  
Resolution 0.05% per set unit  
Example: Setting of 20 = 3% on time

**Important Note:** This function is used to optimize motor and control performance and this setting will be determined by GE and OEM engineers at the time of vehicle development. This setting must not be changed by field personnel without the permission of the OEM.

**FUNCTION 3 ARMATURE CONTROLLED ACCELERATION ( Push 3 )**

This function allows for the adjustment of the rate of time it takes for the control to accelerate to 100% applied battery voltage to the motor on hard acceleration.

Range 0.025 to 6.3 seconds  
Set 0 to 255  
Resolution 0.025 seconds per set unit  
Example: Setting of 20 = 0.5 seconds

**FUNCTION 4 SPEED REGULATION/DECREASING FIELD ( Push 4 )**

This function allows for the adjustment of over speed regulation. It allows the user to set the rate at which the field current is decreased when the vehicle speed is less than the over speed limit.

Range 0.0015 to 0.383 seconds  
Set 0 to 255  
Resolution 0.0015 seconds/unit  
Example:  $(20 \times 0.0015) + 0.0015 = 0.032 \text{ sec}$

**FUNCTION 5 POTENTIOMETER/DIRECTIONAL SWITCH CALIBRATION ( Push 5 )**

This function allows the user to alternate between the standard configuration of the truck (with control via the accelerator potentiometer) or the optional configuration of the truck (with control via the directional switches).

Set	Mode	Control Via
16 to 32	Standard	Accelerator potentiometer
144 to 160	Optional	Directional switches

**FUNCTION 6 MPH BL3C SPEED LIMIT ( Push 6 )**

This function is adjusts the value of the over speed limit of the control.

Resolution 1 set unit = 0.1 MPH  
Example Setting of 100 = 10 MPH

**FUNCTION 7 MIN FIELD CURRENT**  
( Push 7 )

This function allows the adjustment of the field weakening level in order to set the top speed of the motor.

Volts	Min	Max	Set	Resolution Per unit value
36/48	0	60	51 to 255	.314

$$\text{MIN } I_F = (\text{VAL}-51) \times .314 \text{ (36/48 VOLT)}$$

**Important Note: This function is used to optimize motor and control performance, and this setting will be determined by GE and OEM engineers at the time of vehicle development. This setting must not be changed by field personnel without the permission of the OEM.**

**FUNCTION 8 OVER SPEED RESPONSE TIME**  
( Push 8 )

This function allows for the adjustment of the rate at which field current increases in an over speed condition.

Resolution      1 set unit = 0.001 seconds  
Example          Setting of 100 = 0.1 second

**FUNCTION 9 REGEN BRAKING C/L**  
( Push 9 )

This function allows for the adjustment of the regen braking current limit; the higher the current, the shorter the stopping distance.

Volts	Min	Max	Set	Resolution Per unit value	Example If set at 20
36/48	183A	597A	0 to 255	(1.625 x setting) + 183	215 amp

$$\text{REGEN BRAKE } I_A = (\text{VAL} \times 1.625) + 183 \text{ at 36/48 VOLTS}$$

**FUNCTION 10 FIELD CURRENT FOR REGEN**  
( Push 10 )

This function allows for the adjustment of the field current to be used during the regen braking mode.

Range            0 to 64 amps  
Set                51 to 255  
Resolution      (VAL – 51) x 0.314  
Example:        Setting of 200 = 47 amps

**FUNCTION 11 MAINTENANCE AND LOST TACH SPEED LIMIT or PARK BRAKE SWITCH CLOSED**  
( Push 11 )

This function allows for the adjustment of the motor speed limit (maximum battery volts to the motor) when the tach signal is lost, or a status code –81 appears on the dash display.

Range            100% to 0% battery volts  
Set                51 to 163  
Resolution      0.89% per set unit  
Example        Setting of 71 = (163 – 71) x .89  
                     = 82%

**FUNCTION 12 MAX PERCENT ON**  
( Push 12 )

This function is always active and allows for the adjustment of maximum armature volts, as a percentage of the battery voltage.

Range            100% to 0% battery volts  
Set                51 to 163  
Resolution      0.89% per set unit  
Example        Setting of 71 = (163 – 71) x .89  
                     = 82%

**FUNCTION 13 SPEED LIMIT 3**  
( Push 13 )

The SL3 set speed limit is activated by status code 98, indicating an overheated traction motor.

Range            100% to 0% battery volts  
Set                51 to 163  
Resolution      0.89% per set unit  
Example        Setting of 71 = (163 – 71) x .89  
                     = 82%

**FUNCTION 14 INTERNAL RESISTANCE COMPENSATION**  
( Push 14 )

This function is used when the Battery Discharge Indicator is present. Adjustment of this function will improve the accuracy of the BDI. In order to determine this setting the voltage drop of the battery under load must first be calculated by the following method. This function can be changed by the dash display mode selection button.

1. On a fully charged battery, record the open circuit voltage (Vo) by measuring the voltage at the control positive and negative power terminals.

2. Load the traction motor to 100 amps in 1A and record the voltage ( $V_L$ ) at the control positive and negative power terminal.
3. Calculate voltage drop ( $V_{Drop}$ ) as follows:  

$$V_{Drop} = V_0 - V_L$$
4. Use the table below to determine the appropriate setting using the calculated  $V_{Drop}$  as a reference.

**INTERNAL RESISTANCE COMPENSATION TABLE**

Setting	$V_{Drop}$	Setting	$V_{Drop}$
2	11.44	17	01.34
3	07.60	18	01.27
4	05.72	19	01.20
5	04.57	20	01.14
6	03.81	21	01.09
7	03.27	22	01.04
8	02.86	23	00.99
9	02.54	24	00.95
10	02.28	25	00.91
11	02.08	26	00.88
12	01.90	27	00.85
13	01.76	28	00.82
14	01.63	29	00.79
15	01.52	30	00.76
16	01.43	31	00.74

**FUNCTION 15 BATTERY VOLTS**  
**(Push I5)**

This function allows for the adjustment of voltage range for controls equipped with the Battery Discharge Indication function. In order for the BDI to operate properly, the setting as shown in the table must be entered:

Battery volts	Set units
36 volts	Between 32 and 44
48 volts	Between 45 and 69
No BDI	Between 251 and 255

***The following functions have function numbers larger than the numbers on the Handset keyboard. To access these functions. Push the CONT key and the number shown in the following instructions at the same time. THE SEAT SWITCH MUST BE OPEN.***

**FUNCTION 16 STALL MPH**  
**( Push CONT 2 )**

This function allows for the adjustment of the traction motor stall point.

$$VAL \times 0.1 = MPH$$

Example: Setting of 10 =  $10 \times 0.1 = 1.0 MPH$

**FUNCTION 17 CARD TYPE SELECTION**  
**( Push CONT 2 )**

This function allows for the selection of the card type used for your vehicle's application. This function should be set at a value of 54.

Setting	Scale
50 - 54	MPH
55 - 59	KPH

**Warning: These settings must be changed by authorized personnel only, following instructions supplied by the vehicle manufacturer. Card type selection must be made within the capabilities of the control panel used and the supporting electro-mechanical devices. Failure to comply with proper application standards could result in mis-operation or damage to the control and/or motors.**

**FUNCTION 18 LINE CONTACTOR DROP OUT DELAY**  
**( Push CONT 3 )**

This function allows for the adjustment of the time delay for the line contactor drop out.

$$(VAL \times 0.5) + 1.5 = \text{seconds before contactor drop out}$$

Example: Setting of 10 =  $(10 \times 0.5) + 1.5 = 6.5 \text{ seconds}$

**FUNCTION 19 MAINTENANCE CODE TENS AND UNITS HOURS SET**  
**( Push CONT 4 )**

This function allows for the adjustment of the tens and units hours of the maintenance code activation time.

Range	0 to 99
Set	0 to 99
Example	9999 Hours

**FUNCTION 20 MAINTENANCE CODE THOUSANDS AND HUNDREDS HOURS SET ( Push CONT 5 )**

This function allows for the adjustment of the thousands and hundreds hours of the maintenance code activation time.

Range	0 to 240
Set	0 to 240
Example	<u>9999</u> Hours

**FUNCTION 21 AUTO REGEN BRAKING C/L (Push CONT 6)**

This function allows for the adjustment of the regen braking current limit when the accelerator is released.

$$\text{AUTO REGEN C/L AMPS} = \text{REGEN C/L VAL} - \left[ \left( \frac{\text{FNT 21-51 VAL}}{\text{VAL}} \right) 6.50 \right]$$

**FUNCTION 23 PLUG/REGEN TRANSITION POINT ( Push CONT 8)**

This function allows for the adjustment of the vehicle speed at which the vehicle transitions from regen braking to plug braking.

$$\text{VAL} \times 0.1 = \text{MPH}$$

Example: Setting of 30 = 30 x 0.1 = 3.0 MPH

**FUNCTION 24 FIELD WEAKENING START ( Push CONT 9)**

This function allows for setting the armature current at which minimum field current will be achieved.

Range	0 to 414 Amps
Setting	0 to 255
Resolution	1.625 per set unit
$I_{\text{MOTOR FWS}} = \text{VAL} \times 1.625$	

Example: Setting of 20 = 32.5 amps

**FUNCTION 25 MONITOR ( Push CONT 10)**

This function allows the monitoring of certain control functions by looking directly at the RAM of the microprocessor. Because absolute memory locations need

to be known, this function should not be used without detailed instructions from the GE application engineer. **This function should only be adjusted by the vehicle OEM. To ensure optimum operation of the control, this function must be left with zero stored in this register.**

**FUNCTION 26 RATIO ( Push CONT 11)**

This function sets the ratio between armature and field current when operating below the maximum field current and above the Field Weakening Start point. The setting represents the quantity of field current changed for each 1 amp of armature current changed.

Volts	Max Change	Set	Resolution
36/48	.48	0 to 40	.024

**FUNCTION 28 STORED STATUS CODE COUNT POINTER ( Push CONT 13)**

This register contains the location of the last stored status code recorded of the 16 stored status codes. These stored status codes have caused a PMT controller shutdown and/or disruption of normal vehicle operation. To determine which stored status code was the last one recorded, read the number stored in Function 28. Using the **Memory Map** for your logic card, match the "**stored status code pointer number**" [the number shown in (*bold italics*) in the HS (Handset) number column] on the memory map, with the number obtained from Function 28. This will be the last stored status code recorded.

Note: **When scrolling through the stored status code register, the register always starts at status code 1 and scrolls to status code 16. Instructions for scrolling the register are in section 6.3.2 of this instruction booklet.**

**DASH DISPLAY INTERACTIVE MODES**

The following functions (functions 48 through 62) are mode settings that are activated from the Interactive Dash Display. Each function must be set using the logic table shown below. If you try to set this function outside these guidelines, an error code will be displayed to prompt you to enter the correct setting:

- If "80" is displayed, the setting is too low.
- If "81" is displayed, the setting is too high.

*The following functions have function numbers larger than the numbers on the Handset keyboard. To access these functions. Push the CONT key and the number shown in the following instructions at the same time. THE SEAT SWITCH MUST BE CLOSED.*

**FUNCTION 48    MODE 1 MIN FIELD**  
( Push CONT 1 )

This function allows the adjustment of the field weakening level in order to set the top speed of the motor.

Volts	Min	Max	Set	Resolution Per unit value
36/48	0	60	51 to 255	.314

$$\text{MIN } I_F = (\text{VAL}-51) \times .314 \text{ (36/48 VOLT)}$$

This MIN FIELD takes effect when the Mode 1 settings are called for by the interactive Dash Display

**FUNCTION 49    MODE 1 FIELD WEAKENING START**  
( Push CONT 2 )

This function allows for setting the armature current at which minimum field current will be achieved.

Range	0 to 414 Amps
Setting	0 to 255
Resolution	1.625 per set unit

Example: Setting of 20 = 32.5 amps

$$I_M \text{ FWS} = \text{VAL} \times 1.625$$

This FIELD WEAKENING START takes effect when the Mode 1 settings are called for by the interactive Dash Display.

**FUNCTION 50    MODE 1 RATIO**  
( Push CONT 3 )

This function sets the ratio between armature and field current when operating below the maximum field current and above the Field Weakening Start point. The setting represents the quantity of field current changed for each 1 amp of armature current changed.

Volts	Max Change	Set	Resolution
36/48	.48	0 to 40	.024

This RATIO takes effect when the Mode 1 settings are called for by the interactive Dash Display.

**FUNCTION 51    MODE 1 MPH LIMIT**  
( Push CONT 4 )

This function allows for the adjustment of the traction MPH limit, to limit the achievable top speed of the truck.

$$\text{VAL} \times 0.1 = \text{MPH.}$$

This MPH LIMIT takes effect when the Mode 1 settings are called for by the interactive Dash Display.

**FUNCTION 52    MODE 2 MIN FIELD**  
( Push CONT 5 )

Same as Function 48.

This MIN FIELD takes effect when the Mode 2 settings are called for by the interactive Dash Display.

**FUNCTION 53    MODE 2 FIELD WEAKENING START**  
( Push CONT 6 )

Same as Function 49.

This FIELD WEAKENING START takes effect when the Mode 2 settings are called for by the interactive Dash Display.

**FUNCTION 54    MODE 2 RATIO**  
( Push CONT 7 )

Same as Function 50.

This RATIO takes effect when the Mode 2 settings are called for by the interactive Dash Display.

**FUNCTION 55    MODE 2 MPH LIMIT**  
( Push CONT 8 )

Same as Function 51.

This MPH LIMIT takes effect when the Mode 2 settings are called for by the interactive Dash Display.

**FUNCTION 56    MODE 3 MIN FIELD**  
( Push CONT 9 )

Same as Function 48.

This MIN FIELD takes effect when the Mode 3 settings are called for by the interactive Dash Display.

**FUNCTION 57    MODE 3 FIELD WEAKENING START**  
( Push CONT 10 )

Same as Function 49.

This FIELD WEAKENING START takes effect when the Mode 3 settings are called for by the interactive Dash Display.

**FUNCTION 58    MODE 3 RATIO**  
( Push CONT 11 )

Same as Function 50.

This RATIO takes effect when the Mode 3 settings are called for by the interactive Dash Display.

**FUNCTION 59    MODE 3 MPH LIMIT**  
( Push CONT 12 )

Same as Function 51.

This MPH LIMIT takes effect when the Mode 3 settings are called for by the interactive Dash Display.

**FUNCTION 60    MODE 4 MIN FIELD**  
( Push CONT 13 )

Same as Function 48.

This MIN FIELD takes effect when the Mode 4 settings are called for by the interactive Dash Display.

**FUNCTION 61    MODE 4 FIELD WEAKENING START**  
( Push CONT 14 )

Same as Function 49.

This FIELD WEAKENING START takes effect when the Mode 4 settings are called for by the interactive Dash Display.

**FUNCTION 62    MODE 4 RATIO**  
( Push CONT 15 )

Same as Function 50.


This RATIO takes effect when the Mode 4 settings are called for by the interactive Dash Display.

**FUNCTION 63    MODE 4 MPH LIMIT**  
( Push CONT ESC )

Same as Function 51.

This MPH LIMIT takes effect when the Mode 4 settings are called for by the interactive Dash Display.

Section 5.5 Summary of Current Limit Adjustments

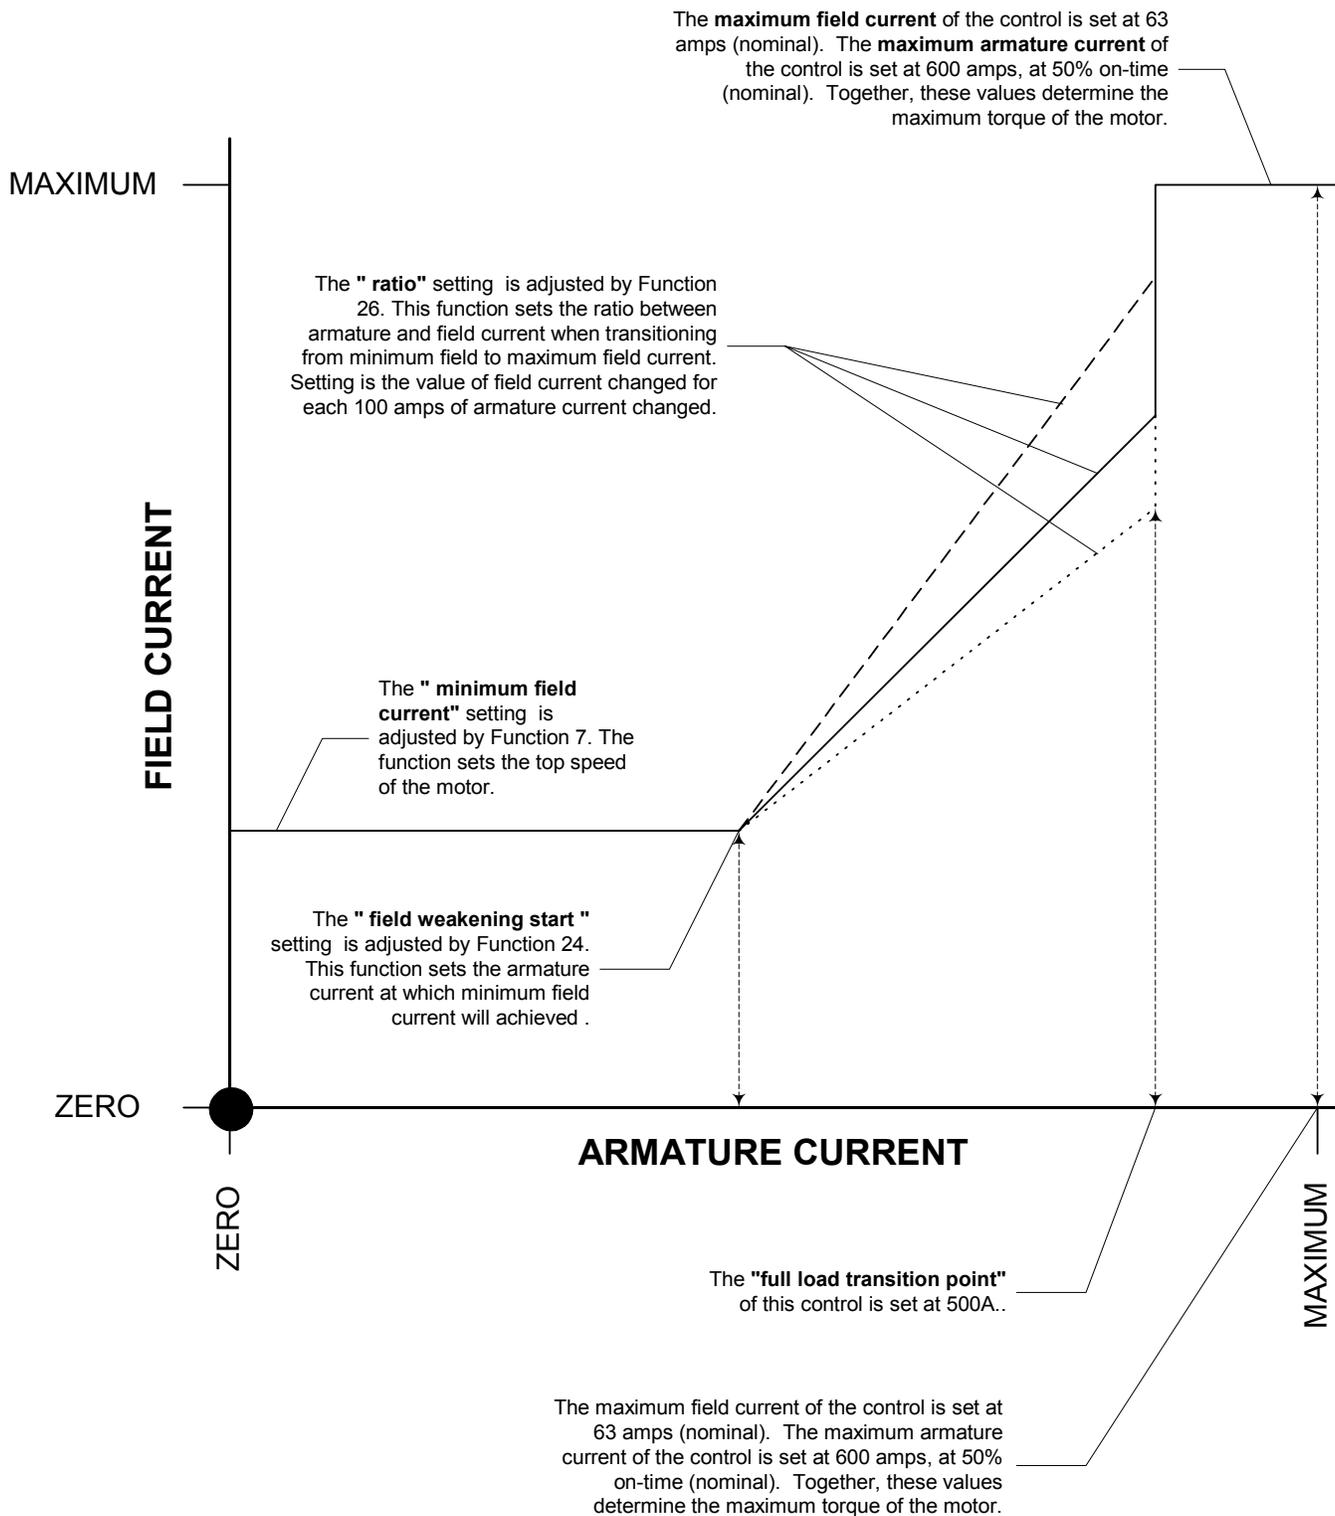

**Section 5.6 Setup Functions for Hydraulic Pump Control**

**FUNCTION 1: NOT APPLICABLE**

This function is not applicable to this type of control and should not be adjusted.

**FUNCTION 2: PERCENT ON-TIME ADJUSTMENT (Push 2)**

This function allows for the adjustment of the percent on-time of the control.

- Range 2 – 15% on-time
- Setting 0 - 255
- Resolution 0.05% per set unit
- Example: Setting of 20 =  $(20 \times 0.05) + 2 = 3\%$

**FUNCTION 3: CONTROLLED ACCELERATION (Push 3)**

This function allows for the adjustment of the rate of time it takes for the control to accelerate to 96% applied battery voltage to the motor on hard acceleration.

- Range 0.1 to 5.5 seconds
- Setting 0 to 255
- Resolution 0.021 seconds per set unit

Example: Setting of 20 = 0.52 seconds C/A

**FUNCTION 4: CURRENT LIMIT (Push 4)**

This function allows for the adjustment of the current limit of the control. The rating of the control will determine the range of adjustment for this function. Please refer to the OEM operating instructions for the control used in your vehicle.

- Range See OEM control C/L curves
- Setting 0 to 255

Example: 0 = min. current, 255 = max. current

**FUNCTION 7: NOT APPLICABLE**

This function is not applicable to this type of control and should not be adjusted.

**FUNCTION 11: SPEED LIMIT 1 (SL1) (Push 11)**

This function allows for the adjustment of the speed limit (maximum battery volts to the motor) when the SL1 limit switch input signal is received by the control card. SL1 limit switch is a normally open switch connected to battery negative, the switch closing enables speed limit.

- Range 0% to 100% battery volts
- Setting 0 to 255
- Resolution 0.375 volts per set unit

Example: Setting of 50=18.75 volts

**FUNCTION 12: SPEED LIMIT 2 (SL2) (Push 12)**

Same as Function 11 except using SL2 limit switch for input.

**FUNCTION 13: SPEED LIMIT 3 (SL3) (Push 13)**

Same as Function 11 except using SL3 limit switch for input.

**FUNCTION 14: SPEED LIMIT 4 (SL4) (Push 14)**

Same as Function 11 except using SL4 limit switch for input.

**Note: The following functions have function numbers larger than the numbers on the Handset keyboard. To access these functions, push the CONT key and the number shown in the following instructions at the same time. THE KEY SWITCH MUST BE OPEN.**

**FUNCTION 16: NOT APPLICABLE**

This function is not applicable to this type of control and should not be adjusted.

**FUNCTION 17: CARD TYPE SELECTION (Push CONT 2)**

This function should be set in accordance with the control type in use in the vehicle:

Function	Without Pump Ctr/PMT
High C/L BDI Lockout	63 - 71

BDI Lockout means that the BDI signal from the traction control must be present in order for the pump control to operate. This control will stop operation when the battery state of charge reaches 10%.

Settings for these functions should be made in between the values shown.

**Warning: These setting must be changed by authorized personnel only, following instructions supplied by the manufacturer. Card type selection must be made within the capabilities of the TRANSISTOR control panel used and the supporting electro-mechanical devices. Failure to comply with proper application standards could result in mis-operation or damage to the control and/or motors.**

**FUNCTION 28: FAULT COUNT POINTER**  
**(Push CONT 13)**

This register contains the location of the last stored status code recorded of the 16 stored status codes. These stored status codes have caused a PMT controller shutdown and/or disruption of normal vehicle operation.

To determine which stored status code was the last one recorded, read the number stored in Function 28. Using the **Memory Map** (See Section 8.1) for your logic card, match the **"stored status code pointer number"** (the number shown in ***bold italics***) in the HS (Handset) number column) on the memory map, with the number obtained from Function 28. This will be the last stored status code recorded.

**Note: When scrolling the stored status code register, the register always starts at status code 1 and scrolls to status code 16. Instructions for scrolling the register are in Section 6.3.2 of this instruction booklet.**

**Note: The following functions have function numbers larger than the numbers on the Handset keyboard. To access these functions, push the CONT key and the number shown in the following instructions at the same time. THE KEY SWITCH MUST BE OPEN.**

**FUNCTION 48: MODE 1 - CONTROLLED ACCELERATION**  
**(Push CONT 1)**

This function allows for the adjustment of the rate of time it takes for the control to accelerate to 96% applied battery voltage to the motor on hard acceleration.

Range	0.1 to 22.0 seconds
Setting	0 to 255
Resolution	0.084 seconds per set unit

Example: Setting of 20 = 1.8 seconds C/A

**FUNCTION 49: MODE 1 - SPEED LIMIT 2 (SL2)**  
**(Push CONT 2)**

This function allows for the adjustment of the speed limit (maximum battery volts to the motor) when the SL2 limit switch input signal is received by the control card. SL2 limit switch is a normally open switch connected to battery negative, the switch closing enables speed limit.

Range	0% to 100% battery volts
Setting	0 to 255
Resolution	0.375 volts per set unit

Example: Setting of 50=18.75 volts

**FUNCTION 50: MODE 1 - SPEED LIMIT 4 (SL4)**  
**(Push CONT 3)**

This function allows for the adjustment of the speed limit (maximum battery volts to the motor) when the SL4 limit switch input signal is received by the control card. SL4 limit switch is a normally open switch connected to battery negative, the switch closing enables speed limit.

Range	0% to 100% battery volts
Setting	0 to 255
Resolution	0.375 volts per set unit

Example: Setting of 50=18.75 volts

**FUNCTION 51 NOT APPLICABLE**

This function is not applicable to this type of control and should not be adjusted.

**FUNCTION 52: MODE 2 - CONTROLLED ACCELERATION**  
**(Push CONT 5)**

Same as Function 48.

**FUNCTION 53: MODE 2 - SPEED LIMIT 2 (SL2)**  
**(Push CONT 6)**

Same as Function 49.

**FUNCTION 54: MODE 2 - SPEED LIMIT 4 (SL4)**  
**(Push CONT 7)**

Same as Function 50.

**FUNCTION 55: NOT APPLICABLE**

This function is not applicable to this type of control and should not be adjusted.

**FUNCTION 56: MODE 3 - CONTROLLED ACCELERATION**  
**(Push CONT 9)**

Same as Function 48.

**FUNCTION 57: MODE 3 - SPEED LIMIT 2 (SL2)**  
**(Push CONT 10)**

Same as Function 49.

**FUNCTION 58: MODE 3 - SPEED LIMIT 4 (SL4)**  
**(Push CONT 11)**

Same as Function 50.

**FUNCTION 59: NOT APPLICABLE**

This function is not applicable to this type of control and should not be adjusted.

**FUNCTION 60: MODE 4 - CONTROLLED ACCELERATION**  
**(Push CONT 13)**

Same as Function 48.

**FUNCTION 61: MODE 4 - SPEED LIMIT 2 (SL2)**  
**(Push CONT 14)**

Same as Function 49.

**FUNCTION 62: MODE 4 - SPEED LIMIT 4 (SL4)**  
**(Push CONT 15)**

Same as Function 50.

## SECTION 6.0 AUTOCALIBRATION OF ACCELERATOR POTENTIOMETERS

When calibrating the right and left throttle potentiometers (for standard truck configuration), program Function 5 with a handset to a value of 24, and then exit programming mode. Cycle the key switch on and off to store the function setting, and leave the handset plugged in.

When returning the key switch to the "ON" position, make sure that the seat switch is open, and both the left and right accelerator pedals are fully released. Once all of the above conditions have been met, four "A" 's will appear on the handset.

**AAAA**

When the four "A" 's are displayed, close the seat switch, with the accelerator pedals fully released to calibrate the potentiometers to this position. The dash display should show three "A" 's:

**AAA**

Re-open the seat switch to begin the calibration of the fully depressed right accelerator pedal position. Depress the right accelerator pedal fully, and close the seat switch to calibrate the fully depressed right accelerator pedal. When this is completed, the dash display should show two "A" 's:

**AA**

Re-open the seat switch to begin the calibration of the fully depressed left accelerator pedal position. Depress the left accelerator pedal fully, and close the seat switch to calibrate the fully depressed left accelerator pedal. When this is completed, the dash display will return to normal operation. Confirm this by opening the seat switch, and the dash display will show "-01

The autocalibration routine is now completed.

---

If truck operation with the forward and reverse switches is desired (optional configuration), set Function 5 to a value of 152. With the key switch in the "OFF" position, the seat switch open, and both the forward and reverse switches in the neutral position, turn the key switch to "ON" and the dash display will show four "A"'s:

**AAAA**

To calibrate the right fully released accelerator pedal position, leave the pedal fully released and close the seat

switch. When this calibration is completed, the display will show three "A"'s:

**AAA**

Re-open the seat switch and fully depress the right accelerator pedal. Close the seat switch to complete the calibration of the fully depressed pedal. The dash display will then return to normal operation. Confirm this by opening the seat switch, and the dash display will show "01".

The autocalibration routine is now completed.

Section 7.0 TRACTION CONTROL MEMORY MAP

E <sup>2</sup>	Func No.	HS No.	Traction Control Function	Access By	Restrictions
0	1	1	MPH Scaling	HS or PC	None
1	2	2	Creep	HS or PC	None
2	3	3	Controlled Acceleration	HS or PC	None
3	4	4	Speed Regulation/Dec. Field	HS or PC	None
4	5	5	Pot/Directional Calibration	HS or PC	None
5	6	6	MPH BL3C Speed Limit	HS or PC	None
6	7	7	Overspeed Response	HS or PC	None
7	8	8	Maximum Field Current	HS or PC	None
8	9	9	Regen BrakingCurrent Limit	HS or PC	None
9	10	10	Field Current for Regen	HS or PC	None
10	11	11	Maintenance and Lost Tach Speed Limit or Park Brake Switch Closed	HS or PC	None
11	12	12	Max Percent On	HS or PC	None
12	13	13	Speed Limit 3	HS or PC	None
13	14	14	IR Compensation	HS or PC	None
14	15	15	Battery Volts Select	HS or PC	None
15	16	16	Stall MPH	HS or PC	None
16	17	17	Card Type Select	HS or PC	None
17	18	18	Line Driver Time Delay	HS or PC	None
18	19	19	Maintenance Code HM (Tens/Units)	HS or PC	None
19	20	20	Maintenance Code HM (Thou/Hun)	HS or PC	None
20	21	21	Auto Regen	HS or PC	None
21	22	22	Not applicable	HS or PC	For DD on power up
22	23	23	Plug/Regen Transition	HS or PC	None
23	24	24	Field Weakening Start	HS or PC	None
24	25	25	Monitor	HS or PC	GE Temporary Storage
25	26	26	Ratio	HS or PC	GE Temporary Storage
26	27	27	Not applicable	HS or PC	GE Temporary Storage
27	28	28	Stored Status Code Count Pointer	HS or PC	None
28	29	29	Not applicable	HS or PC	None
29	30	30	Not applicable	HS or PC	None
30	31		Aux HM (Tens/Ones)	PC Only	None
31	32		Aux HM (Thou/Hun)	PC Only	None
32	33	<b>(18)</b>	Stored Status Code #1	PC Only	Reset to Zero Only
33	34		BDI 1	PC Only	Reset to Zero Only
34	35		Hours (Tens/Ones) 1	PC Only	Reset to Zero Only
35	36		Hours (Thou/Hun) 1	PC Only	Reset to Zero Only
36	37	<b>(20)</b>	Stored Status Code #2	PC Only	Reset to Zero Only
37	38		BDI 2	PC Only	Reset to Zero Only
38	39		Hours (Tens/Ones) 2	PC Only	Reset to Zero Only
39	40		Hours (Thou/Hun) 2	PC Only	Reset to Zero Only
40	41	<b>(22)</b>	Stored Status Code #3	PC Only	Reset to Zero Only
41	42		BDI 3	PC Only	Reset to Zero Only
42	43		Hours (Tens/Ones) 3	PC Only	Reset to Zero Only

E <sup>2</sup>	Func No.	HS No.	Traction Control Function	Access By	Restrictions
43	44		Hours (Thou/Hun) 3	PC Only	Reset to Zero Only
45	46		BDI 4	PC Only	Reset to Zero Only
46	47		Hours (Tens/Ones) 4	PC Only	Reset to Zero Only
47	48		Hours (Thou/Hun) 4	PC Only	Reset to Zero Only
48	49	(26)	Stored Status Code #5	PC Only	Reset to Zero Only
49	50		BDI 5	PC Only	Reset to Zero Only
50	51		Hours (Tens/Ones) 5	PC Only	Reset to Zero Only
51	52		Hours (Thou/Hun) 5	PC Only	Reset to Zero Only
52	53	(28)	Stored Status Code #6	PC Only	Reset to Zero Only
53	54		BDI 6	PC Only	Reset to Zero Only
54	55		Hours(Tens/Ones) 6	PC Only	Reset to Zero Only
55	56		Hours(Thou/Hun) 6	PC Only	Reset to Zero Only
56	57	(30)	Stored Status Code #7	PC Only	Reset to Zero Only
57	58		BDI 7	PC Only	Reset to Zero Only
58	59		Hours(Tens/Ones) 7	PC Only	Reset to Zero Only
59	60		Hours(Thou/Hun) 7	PC Only	Reset to Zero Only
60	61	(32)	Stored Status Code #8	PC Only	Reset to Zero Only
61	62		BDI 8	PC Only	Reset to Zero Only
62	63		Hours;(Tens/Ones) 8	PC Only	Reset to Zero Only
63	64		Hours(Thou/Hun) 8	PC Only	Reset to Zero Only
64	65	(34)	Stored Status Code #9	PC Only	Reset to Zero Only
65	66		BDI 9	PC Only	Reset to Zero Only
66	67		Hours(Tens/Ones) 9	PC Only	Reset to Zero Only
67	68		Hours(Thou/Hun) 9	PC Only	Reset to Zero Only
68	69	(36)	Stored Status Code #10	PC Only	Reset to Zero Only
69	70		BDI 10	PC Only	Reset to Zero Only
70	71		Hours(Tens/Ones) 10	PC Only	Reset to Zero Only
71	72		Hours(Thou/Hun) 10	PC Only	Reset to Zero Only
72	73	(38)	Stored Status Code #11	PC Only	Reset to Zero Only
73	; 74		BDI 11	PC Only	Reset to Zero Only
74	75		Hours(Tens/Ones) 11	PC Only	Reset to Zero Only
75	76		Hours(Thou/Hun) 11	PC Only	Reset to Zero Only
76	77	(40)	Stored Status Code #12	PC Only	Reset to Zero Only
77	78		BDI 12	PC Only	Reset to Zero Only
78	79		Hours(Tens/Ones) 12	PC Only	Reset to Zero Only
79	80	.	Hours(Thou/Hun) 12	PC Only	Reset to Zero Only
80	81	(42)	Stored Status Code #13	PC Only	Reset to Zero Only
81	82		BDI 13	PC Only	Reset to Zero Only
82	83		Hours(Tens/Ones) 13	PC Only	Reset to Zero Only
83	84		Hours(Thou/Hun) 13	PC Only	Reset to Zero Only
84	85	(44)	Stored Status Code # 14	PC Only	Reset to Zero Only
85	86		BDI 14	PC Only	Reset to Zero Only
86	87		Hours(Tens/Ones) 14	PC Only	Reset to Zero Only
87	88		Hours(Thou/Hun) 14	PC Only	Reset to Zero Only
88	89	(46)	Stored Status Code # 15	PC Only	Reset to Zero Only
89	90		BDI 15	PC Only	Reset to Zero Only
90	91		Hours (Tens/Ones) 15	PC Only	Reset to Zero Only

<b>E<sup>2</sup></b>	<b>Func No.</b>	<b>HS No.</b>	<b>Traction Control Function</b>	<b>Access By</b>	<b>Restrictions</b>
90	91		Hours (Tens/Ones) 15	PC Only	Reset to Zero Only
91	92		Hours (Thou/Hun) 15	PC Only	Reset to Zero Only
92	93	<b>(48)</b>	Stored Status Code #16	PC Only	Reset to Zero Only
94	95		Hours (Tens/Ones) 16	PC Only	Reset to Zero Only
95	96		Hours (Thou/Hun) 16	PC Only	Reset to Zero Only
96	67	48	Dash Display Min Field -1		
97	98	49	Dash Display Field Weakening Start -1	HS or PC	None
98	99	50	Dash Display Ratio2 -1	HS or PC	None
99	100	51	Dash Display Regen Current Limit - 1	HS or PC	None
100	101	52	Dash Display Min Field -2	HS or PC	None
101	102	53	Dash Display Field Weakening Start - 2	HS or PC	None
102	103	54	Dash Display Ratio2 -2	HS or PC	None
103	104	55	Dash Display Regen Current Limit - 2	HS or PC	None
104	105	56	Dash Display Min Field -3	HS or PC	None
105	106	57	Dash Display Field Weakening Start - 3	HS or PC	None
106	107	58	Dash Display Ratio2 -3	HS or PC	None
107	108	59	Dash Display Regen Current Limit - 3	HS or PC	None
108	109	60	Dash Display Min Field -4	HS or PC	None
109	110	61	Dash Display Field Weakening Start - 4	HS or PC	None
110	111	62	Dash Display Ratio2 -4	HS or PC	None
111	112	63	Dash Display Regen Current Limit - 4	HS or PC	None
112	113		Secure HM (Tens/Ones)	PC Only	OEM Read Only
113	114		Secure HM (Thou/Hun)	PC Only	OEM Read Only
114	115		Secure Aux HM (Tens/Ones)	PC Only	OEM Read Only
115	116		Secure Aux HM (Thou/Hun)	PC Only	OEM Read Only
116	117		Reserved	PC Only	GE Future Use
117	118		Reserved	PC Only	GE Future Use
118	119		Reserved	PC Only	GE Future Use
119	120		Reserved	PC Only	GE Future Use
120	121		Accelerator Learn – Offset A	PC Only	None
121	122		Accelerator Learn – Offset B	PC Only	None
122	123		Accelerator Learn – YINTA	PC Only	None
123	124		Accelerator Learn – YINTB	PC Only	None
124	125		Accelerator Learn – Slope A	PC Only	None
125	126		Accelerator Learn – Slope B	PC Only	None
126	127		OEM Use	PC Only	None
127	128		OEM Use	PC Only	None

Numbers in ***(bold italics)*** are Stored Status Code pointers.