


**SEPARATELY EXCITED (SX) TRANSISTORIZED TRACTION MOTOR CONTROL  
 AND SERIES PUMP MOTOR CONTROL  
 INSTALLATION AND OPERATION MANUAL**

*(GE Models IC3645SR4W606MC2, IC3645SR4W606MC3, IC3645SR7W455MC3, IC3645SR4W746MC2,  
 IC3645SR4W746MC3, IC3645SP4U500MC2, IC3645SP4U500MC3, IC3645SP4U600MC2, IC3645SP4U600MC3,  
 IC3645SP4U600MC4, IC3645SP7U450MC3 and IC3645SR4W10010M1)*

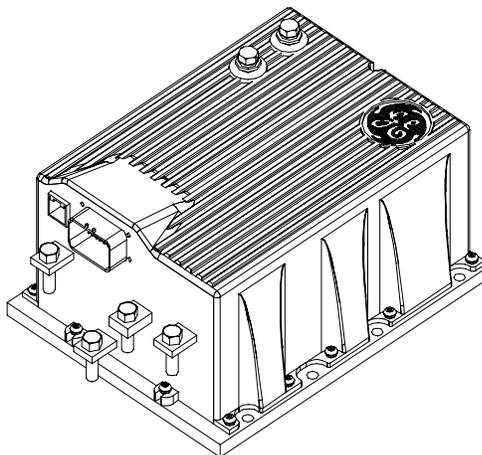

*Note: The information contained herein is intended to assist OEM's, Dealers and Users of electric vehicles in the application, installation and service of GE solid-state controllers. This manual does not purport to cover all variations in OEM vehicle types. Nor does it provide for every possible contingency to be met involving vehicle installation, operation or maintenance. For additional information and/or problem resolution, please refer the matter to the OEM vehicle manufacturer through his normal field service channels. Do not contact GE directly for this assistance.*

**Table of Contents**

**General Electric Company September 2004**

<b>Section 1.0</b>	<b>INTRODUCTION .....</b>	<b>4</b>
1.1	Motor Characteristics .....	4
1.2	Solid-State Reversing .....	5
1.3	Flexible System Application.....	5
1.4	More Features with Fewer Components .....	5
<b>Section 2.0</b>	<b>FEATURES OF SX FAMILY OF MOTOR CONTROLLERS .....</b>	<b>6</b>
2.1	Performance.....	6
2.1.1	Oscillator Card Features.....	6
2.1.1.a	Standard Operation .....	6
2.1.1.b	Creep Speed.....	6
2.1.1.c	Control Acceleration .....	6
2.1.2	Current Limit.....	6
2.1.3	Braking 6	

**Table of Contents ( Continued )**

2.1.3.a	Regenerative Braking to Zero Speed .....	6
2.1.3.b	Pedal Position Plug Braking .....	6
2.1.3.c	Auto Braking .....	6
2.1.4	Auxiliary Speed Control .....	6
2.1.4.a	Field Weakening .....	6
2.1.4.b	Speed Limits .....	7
2.1.5	Ramp Operation .....	7
2.1.5.a	Ramp Start.....	7
2.1.5.b	Anti-Rollback .....	7
2.1.6	Steer Pump Contactor Time Delay .....	7
2.1.7	On-Board Coil Drivers and Internal Coil Suppression .....	7
2.2	System Protective Override .....	7
2.2.1	Static Return to Off (SRO) .....	7
2.2.2	Accelerator Volts Hold Off .....	7
2.2.3	Pulse Monitor Trip (PMT).....	7
2.2.4	Thermal Protector (TP).....	7
2.2.5	Low Voltage .....	8
2.3	Diagnostics.....	8
2.3.1	Systems Diagnostics.....	8
2.3.2	Status Codes.....	8
2.3.2.a	Standard Codes.....	8
2.3.2.b	Stored Codes .....	8
2.3.3	Hourmeter Readings .....	8
2.3.3.a	Maintenance Alert and Speed Limit .....	8
2.3.4	Battery Discharge Indication (BDI).....	8
2.3.4.a	Internal Resistance Compensation .....	8
2.3.5	Handset .....	8
2.3.6	RS-232 Communication Port .....	8
2.3.6.a	Interactive Dash Display Modes .....	9
2.3.7	Circuit Board Coil Driver Modules.....	9
2.3.8	Truck Management Module (TMM).....	9
2.4	Hydraulic Pump Control.....	9

**Section 3.0 ORDERING INFORMATION, ELEMENTARY AND OUTLINE DRAWINGS..... 10**

3.1	Ordering Information for Separately Excited Controls.....	10
3.2	Outline: SX-4 and SR-4 Package Size .....	11
3.3	Outline: SX-3 and SR-3 Package Size .....	12
3.4	Traction Elementary for Use with a Pump Control (no 1A Contactor).....	13
3.5	Traction Elementary for Use with a Pump Control (Including 1A Contactor).....	14
3.6	Traction Elementary for Use with a Pump Contactor and TMM Card (no 1A Contactor).....	15
3.7	Traction Elementary for Use with a Pump Contactor and TMM Card (Incl. 1A Contactor)....	16
3.8	Pump Control Elementary (no 1A Contactor).....	17
3.9	Pump Control Elementary (Including 1A Contactor) .....	18
3.10	Traction and Pump Control Input / Output List.....	19

**Section 4.0 TROUBLESHOOTING AND DIAGNOSTIC STATUS CODES..... 20**

4.1	General Maintenance Instructions.....	20
4.2	Cable Routing and Separation .....	20
4.2.1	Application Responsibility .....	20
4.2.2	Signal/Power Level Definitions .....	20
4.2.2.a	Low Level Signals (Level L).....	20


**Table of Contents ( Continued )**

4.2.2.b	High Level Signals (Level H) .....	21
4.2.2.c	Medium-Power Signals (Level MP).....	21
4.2.2.d	High-Power Signals (Level HP) .....	21
4.2.3	Cable Spacing Guidelines .....	21
4.2.3.a	General Cable Spacing.....	21
4.2.4	Cabling for Vehicle Retrofits .....	21
4.2.5	RF Interference.....	21
4.2.6	Suppression.....	21
4.3	Recommended Lubrication of Pins and Sockets Prior to Installation .....	22
4.4	General Troubleshooting Instructions .....	23
4.5	Traction Controller Status Codes.....	24-43
4.6	TMM Module Status Codes.....	44-48
4.7	Pump Control Status Codes.....	49-56
<b>Section 5.0</b>	<b>TRUCK MANAGEMENT MODULE (TMM) .....</b>	<b>57</b>
5.1	General Features .....	57
5.2	Operation .....	57
5.3	Installation.....	57
5.4	Connection Diagrams .....	57
5.4.1	TMM7A Card Connections.....	57
5.4.2	TMM7A Typical Brush Wear Sensor Connections .....	57
5.4.3	TMM Pump Control Connections .....	58
5.4.4	Typical Brush Wear Sensor Connections For Pump Control.....	58
5.5	TMM7A Outline Drawings.....	58
<b>Section 6.0</b>	<b>SX FAMILY - GE HANDSET INSTRUCTIONS .....</b>	<b>59</b>
6.1	General Features .....	59
6.2	Purpose/Setup Functions .....	59
6.3	Setup Function Procedures .....	59
6.3.1	Setup Mode .....	59
6.3.2	Status Code Scrolling.....	59
6.3.3	SX Handset Plug Connections & Outline Drawing.....	59
6.4	Setup Functions for Traction Controller ..	60-67
6.5	Summary of Current Limit Adjustments .....	68
6.6	Setup Functions for Hydraulic Pump Controller .....	69-71
<b>Section 7.0</b>	<b>DASH DISPLAYS.....</b>	<b>72</b>
7.1	Application .....	72
7.2	Standard Dash Displays .....	72
7.3	Interactive Dash Displays.....	72
7.4	Start-up Display Sequence .....	73
7.5	Outline Drawings .....	73
<b>Section 8.0</b>	<b>AUTO CALIBRATION OF ACCLERATOR POTENTIOMETER .....</b>	<b>74</b>
<b>Section 9.0</b>	<b>MEMORY MAPS .....</b>	<b>75</b>
9.1	Typical Memory Map for Traction Control.....	75-77

**Section 1. INTRODUCTION**

**Section 1.1 Motor Characteristics**

The level of sophistication in the controllability of traction motors has changed greatly over the past several years. Vehicle manufacturers and users are continuing to expect more value and flexibility in electric vehicle motor and control systems as they are applied today. In order to respond to these market demands, traction system designers have been forced to develop new approaches to reduce cost and improve functions and features of the overall system. Development is being done in a multi-generational format that allows the market to take advantage of today's technology, while looking forward to new advances on the horizon. GE has introduced a second generation system using separately excited DC shunt wound motors. The separately excited DC motor system offers many of the features that are generally found on the advanced AC systems. Historically, most electric vehicles have relied have on series motor designs because of their ability to produce very high levels of torque at low speeds. But, as the demand for high efficiency systems increases, i.e., systems that are more closely applied to customers' specific torque requirements, shunt motors are now often being considered over series motors. In most applications, by independently controlling the field and armature currents in the separately excited motor, the best attributes of both the series and the shunt wound motors can be combined.

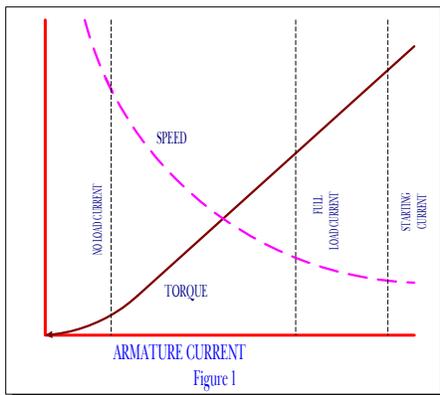


As shown in from the typical performance curves of Figure 1, the high torque at low speed characteristic of the series motor is evident.


In a shunt motor, the field is connected directly across the voltage source and is therefore independent of variations in load and armature current. If field strength is held constant, the torque developed will vary directly with the armature current. If the mechanical load on the motor increases, the motor slows down, reducing the back EMF (which depends on the speed, as well as the constant field strength). The

reduced back EMF allows the armature current to increase, providing the greater torque needed to drive the increased mechanical load. If the mechanical load is decreased, the process reverses. The motor speed and the back EMF increase, while the armature current and the torque developed decrease. Thus, whenever the load changes, the speed changes also, until the motor is again in electrical balance.

In a shunt motor, the variation of speed from no load to normal full load on level ground is less than 10%. For this reason, shunt motors are considered to be constant speed motors (Figure 2).

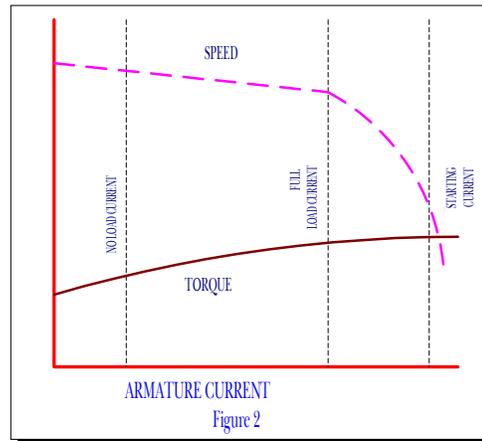

In the separately excited motor, the motor is operated as a fixed field shunt motor in the normal running range. However, when additional torque is required, for example, to climb non-level terrain, such as ramps and the like, the field current is increased to provide the higher level of torque. In most cases, the armature to field ampere turn ratio can be very similar to that of a comparable size series motor (Figure 3.)

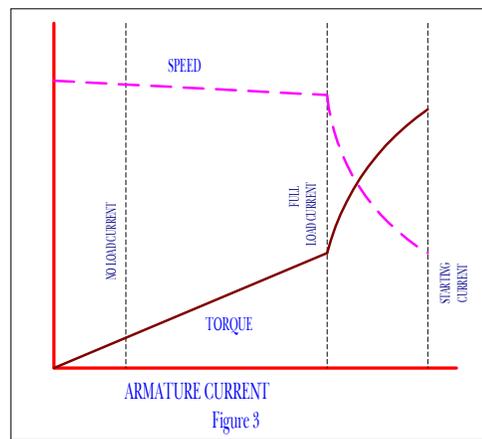

Aside from the constant horsepower characteristics described above, there are many other features that provide increased performance and lower cost. The

following description provides a brief introduction to examples of some of these features.

**Section 1. 2 Solid-State Reversing**

The direction of armature rotation on a shunt motor is determined by the direction in which current flows through the field windings. Because the shunt motor field only typically requires about 10% of the armature current at full torque, it is normally cost effective to replace the double-pole, double-throw reversing contactor with a low power transistor H-Bridge circuit (Figure 4).

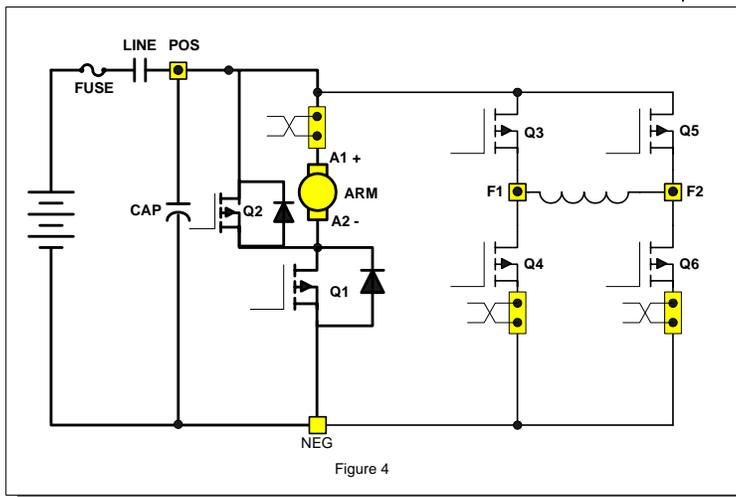


Figure 4

By energizing the transistors in pairs, current can be made to flow in either direction in the field. The armature control circuit typically operates at 12KHZ to 15KHZ, a frequency range normally above human hearing. This high frequency coupled with the elimination of directional contactors, provides very quiet vehicle operation. The field control circuits typically operate at 2 KHZ.

The line contactor is normally the only contactor required for the shunt motor traction circuit. This contactor is used for both pre-charge of the line capacitors and for emergency shut down of the motor circuit, in case of problems that would cause a full motor torque condition. The line can be energized and de-energized by the various logic combinations of the vehicle, i.e. activate on key, seat or start switch closure, and de-energize on time out of idle vehicle. Again, these options add to the quiet operation of the vehicle.

**Section 1. 3 Flexible System Application**

Because the shunt motor controller has the ability to control both the armature and field circuits independently, the system can normally be adjusted for maximum system efficiencies at certain operating parameters. Generally speaking, with the ability of independent field and

armature, the motor performance curve can be maximized through proper control application.

**Section 1. 4 More Features with Fewer Components**

Field weakening with a series wound motor is accomplished by placing a resistor in parallel with the field winding of the motor. Bypassing some of the current flowing in the field into the resistor causes the field current to be less, or weakened. With the field weakened, the motor speed will increase, giving the effect of "overdrive". To change the "overdrive speed", it is necessary to change the resistor value. In a separately excited motor, independent control of the field current provides for infinite adjustments of "overdrive" levels, between motor base speed and maximum weak field. The desirability of this feature is enhanced by the elimination of the contactor and resistor required for field weakening with a series motor.

With a separately excited motor, overhauling speed limit, or downhill speed, will also be more constant. By its nature, the shunt motor will try to maintain a constant speed downhill. This characteristic can be enhanced by increasing the field strength with the control. Overhauling load control works in just the opposite way of field weakening, armature rotation slows with the increase of current in the field.

Regenerative braking (braking energy returned to the battery) may be accomplished completely with solid-state technology. The main advantage of regenerative braking is increased motor life. Motor current is reduced by 50% or more during braking while maintaining the same braking torque as electrical braking with a diode clamp around the armature. The lower current translates into longer brush life and reduced motor heating. Solid state regenerative braking also eliminates a power diode, current sensor and contactor from the circuit.

For GE, the future is now as we make available a new generation of electric traction motor systems for electric vehicles having separately excited DC shunt motors and controls. Features that were once thought to be only available on future AC or brushless DC technology vehicles systems are now achievable and affordable.

**Section 2. FEATURES OF SX FAMILY OF TRANSISTOR MOTOR CONTROLLERS**

**Section 2.1 Performance**

**Section 2.1.1 Oscillator Card Features**

**Section 2.1.1.a Standard Operation**

With the accelerator at maximum ohms or volts, the creep speed can be adjusted by Function 2 of the Handset or a trimpot. The field control section allows the adjustment of the field weakening level in order to set the top speed of the motor. This top speed function (Minimum Field Current) is enabled when the armature current is less than the value set by Function 24 and the accelerator pedal is fully depressed. Top Speed can be adjusted by Function 7 of the Handset or a trimpot.

The percent on-time has a range of approximately 0 to 100 percent. The SX controllers operate at a constant frequency and the percent on-time is controlled by the pulse width of the voltage / current applied to the motor circuits.

**Section 2.1.1.b Creep Speed**

With the accelerator at maximum ohms or volts, the creep speed can be adjusted by Function 2 of the Handset. At creep speed, the ON time can decrease to approximately 5%, with the OFF time at approximately 95%. At full transistor operation, this condition will be reversed (short OFF time, long ON time). This variation of ON and OFF time of the oscillator varies the voltage applied to the motor, thereby varying the speed of the motor for a given load.

**Section 2.1.1.c Control Acceleration**


This feature allows for adjustment of the rate of time it takes for the control to accelerate to 100% applied battery voltage to the motor on hard acceleration. Armature C/A is adjusted by Function 3 from 0.1 to 22 seconds.

**Section 2.1.2 Current Limit**

This circuit monitors motor current by utilizing sensors in series with the armature and field windings. The information detected by the sensor is fed back to the card so that current may be limited to a pre-set value. If heavy load currents are detected, this circuit overrides the oscillator and limits the average current to a value set by Function 4 and Function 8 of the Handset. The C/L setting is based on the maximum thermal rating of the control. Because of the flyback current through Q2, the motor current is usually greater than battery current, except at 100% ON time.

**Section 2.1.3 Braking**

**Section 2.1.3.a Regenerative Braking to Zero Speed**

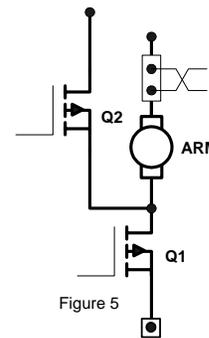

Slow down is accomplished when reversing direction by providing a small amount of retarding torque for deceleration. If the vehicle is moving, and the directional lever is moved from one direction to the other, the regen signal is initiated. Once the regen signal has been initiated, the field current is increased (armature circuit shown in Figure 5). Armature current is regulated to the regen current limit as set by Function 9. As the vehicle slows down, the field current continues to increase, and transistor Q2 begins to chop. The field current will increase until it reaches a preset value set by Function 10, and transistor Q2 on-time will increase until it reaches 100% on-time. Once both of the above conditions have been met, and regen current limit can no longer be maintained, the braking function is canceled. The fields will then reverse, and the control reverts back to motoring. Part of the energy produced by the motor during regen is returned to the battery, and part is dumped in the motor as heat.

**Section 2.1.3.b Pedal Position Regenerative Braking**

This feature allows control of the stopping distance based on pedal position when there has been a "directional switch" change. Pedal position will reduce the regenerative current to the as the accelerator is returned to the creep speed position. Maximum regenerative current is obtained with the accelerator in the top speed position.

**Section 2.1.3.c Auto Braking**

This feature is enabled by initiating a "neutral position" using either the directional switch or the accelerator switch. Once activated, Auto Braking operates similar to Pedal Position Regenerative Braking and is adjusted by using Function 21 of the Handset.

**Section 2.1.4 Auxiliary Speed Control**

**Section 2.1.4.a Field Weakening**

This function allows the adjustment of the field weakening level in order to set the top speed of the motor. The function is enabled when the armature current is less than the value set by Function 24 and the accelerator pedal is fully depressed. It is important to note that this function is used to optimize motor and control performance, and this setting will be determined by GE and OEM engineers at the time of vehicle development. This setting must not be changed by field personnel, without the permission of the OEM.

### **Section 2.1.4.b Speed Limits**

This feature provides a means to control speed by limiting motor volts utilizing three "adjustable speed limits. This motor volt limit regulates top speed of the transistor controller, but actual truck speed will vary at any set point depending on the loading of the vehicle. Each speed limit can be adjustable with the Handset using Functions 11, 12, and 13.

### **Section 2.1.5 Ramp Operation**

#### **Section 2.1.5a Ramp Start**

This feature provides maximum control torque to restart a vehicle on an incline. The memory for this function is the directional switch. When stopping on an incline, the directional switch must be left in its original or neutral position to allow the control to initiate full power when restarted. The accelerator potentiometer input will modulate ramp start current.

#### **Section 2.1.5b Anti-Rollback**

This feature provides retarding torque to limit rollback speed in the non-travel direction when the ACC pedal is released when stopping on a grade, or when the brake pedal is released when starting on a grade. This feature forces the vehicle to roll very slowly down the grade when accelerator or brake is released. Because the vehicle can gain significant speed during roll-back, the torque needed to re-start on the ramp is lower than an unrestricted roll-back speed.

### **Section 2.1.6 Steer Pump Contactor Time Delay**

This feature provides two options for SP time delay. Option 1 provides a 0.5 to 63 second time delayed drop out of the steer pump contactor when the Forward or Reverse directional switch is opened. This Option 1 is overridden by a 1.5 second time delayed drop out whenever the seat switch is opened. Option 2 provides a 0.5 to 63 second time delayed drop out of the SP contactor when the seat switch is opened.

### **Section 2.1.7 On-Board Coil Drivers & Internal Coil Suppression**

Coil drivers for the LINE and SP contactors are on-board the control card. These contactors must have coils rated for the vehicle battery volts.

## **Section 2.2 System Protective Override**

### **Section 2.2.1 Static Return to Off (SRO)**

This inherent feature of the control is designed to require the driver to return the directional lever to the neutral position anytime he leaves the vehicle and returns. Additionally, if the seat switch or key switch is opened, the control shuts off and cannot be restarted until the directional lever is returned to neutral. A time delay of approximately 2 seconds is built into the seat switch input to allow momentary opening of the seat switch, if a bump is encountered.

### **Section 2.2.2 Accelerator Volts Hold Off**

This feature checks the voltage level at the accelerator input whenever the key switch or seat switch is activated. If, at start up, the accelerator is calling for more than 20% of full speed, the control will not operate. This feature assures that the control is calling for low speed operation at start up.

### **Section 2.2.3 Pulse Monitor Trip (PMT)**

The PMT design contains three features which shut down, or lock out, control operation if a fault conditions occurs that would cause a disruption of normal vehicle operation:

- Look ahead
- Look again
- Automatic look again and reset

The PMT circuit will not allow the control to start under the following conditions:

- The control monitors both armature and field FET's at start-up and during running.
- The control will not allow the line contactor to close at start-up, or will drop it out during running, if either the armature or field FET's are defective, so as to cause uncontrolled truck movement.

### **Section 2.2.4 Thermal Protector (TP)**

This temperature sensitive device is mounted to the heat sink of the power transistor (Q1). If the transistor's temperature begins to exceed the design limits, the thermal protector will lower the maximum current limit, and maintain the transistors within their temperature limits. Even at a reduced current limit, the vehicle will normally be able to reach sufficient speed. As the control cools, the thermal protector will automatically reset, returning the control to full power.

### **Section 2.2.5 Low Voltage**

Batteries under load, particularly if undersized or more than 80 percent discharged, will produce low voltages at the control terminals. The SX control is designed for use

down to 50 percent of a nominal battery voltage of 36-84 volts, and 75 percent of a nominal battery voltage of 24 volts. Lower battery voltage may cause the control to operate improperly, however, the resulting PMT should open the Line contactor, in the event of a failure.

## **Section 2.3 Diagnostics**

### **Section 2.3.1 Systems Diagnostics**

The control detects the system's present operating status and can be displayed to either the Dash Display or the Handset. There are currently over 70 status codes that are available with SX systems using Traction and Pump controls and Truck Management Module (TMM). Along with the status code display from the TMM, the SX control is capable of reducing the current to the motor, alerting the operator of a critical fault condition.

### **Section 2.3.2 Status Codes**

#### **Section 2.3.2a Standard Status Codes**

The SX traction control has over 30 Status Codes that assist the service technician and operator in trouble shooting the vehicle. If mis-operation of the vehicle occurs, a status code will be displayed on the Dash Display for vehicles so equipped, or be available by plugging the Handset into the "y" plug of the logic card. With the status code number, follow the procedures outlined in DIAGNOSTIC STATUS CODES to determine the problem and a solution.

Note: The Status Code Instruction Sheets do not claim to cover all possible causes of a display of a "status code". They do provide instructions for checking the most direct inputs that can cause status codes to appear.

#### **Section 2.3.2.b Stored Status Codes**

This feature records the last 16 "Stored Status Codes" that have caused a PMT controller shut down and/or disrupted normal vehicle operation. (PMT type faults are reset by cycling the key switch). These status codes, along with the corresponding BDI and hourmeter readings, can be accessed with the Handset, or by using the RS 232 communications port and dumping the information to a Personal Computer terminal.

### **Section 2.3.3 Hourmeter Readings**

This feature will display the recorded hours of use of the traction and pump control to the Dash Display each time the key switch is turned off.

#### **Section 2.3.3.a Maintenance Alert & Speed Limit**

This feature is used to display Status Code 99 and/or activate a speed limit when the vehicle operating hours match the hours set into the maintenance alert register. This feature is set with the Handset using Functions 19 and 20. The operator is alerted that maintenance on the vehicle is required.

### **Section 2.3.4 Battery Discharge Indication (BDI)**

The latest in microprocessor technology is used to provide accurate battery state of charge information and to supply passive and active warning signals to the vehicle operator. Features and functions:

- Displays 100 to 0 percent charge.
- Display blinks with 20% charge. Disables pump circuit with 10% charge. Auto ranging for 36/48 volt operation. Adjustable for use on 24 to 80 volts.

#### **Section 2.3.4.a Internal Resistance Compensation**

This feature is used when the Battery Discharge Indicator is present. Adjustment of this function will improve the accuracy of the BDI.

### **Section 2.3.5 Handset**

This is a multi-functional tool used with the LX, ZX, and SX Series GE solid state controls. The Handset consists of a Light Emitting Diode (LED) display and a keyboard for data entry. Note, for ordering purposes, a separate Handset part is required for SX controls.

Features and functions:

- Monitor existing system status codes for both traction and pump controls. Monitor intermittent random status codes.
- Monitor battery state of charge, if available.
- Monitor hourmeter reading on traction and pump controls. Monitor or adjust the control functions.

### **Section 2.3.6 RS 232 Communication Port**

This serial communication port can be used with Interactive Custom Dash Displays to allow changes to vehicle operating parameters by the operator. Or, it can be used by service personnel to dump control operating information and settings into a personal computer program.

#### **Section 2.3.6.a Interactive Dash Display Modes**

The Interactive Custom Dash Display allows the operator to select the best vehicle performance for changing factory (task) conditions. There are four (4) "operator interaction

modes" that can be selected by depressing a push button on the dash display.

From the Dash Display, the operator may select any of four pre-set interactive modes consisting of (4) Controlled Acceleration levels, (4) Auto Regen levels and (4) Speed Limits.

These interactive modes are "pre-set" using the Handset (Functions 48-63) or a personal computer (Functions 97-112). This feature allows the operator to select the best vehicle performance for changing factory (task) conditions.

### Section 2.3.7 Circuit Board Coil Driver Modules

Coil drivers are internal to the control card, and are the power devices that operate the Line and SP contactor coils. On command from the control card, these drivers initiate opening and closing the contactor coils. All driver modules are equipped with reverse battery protection, such that, if the battery is connected incorrectly, the contactors can not be closed electrically.

### Section 2.3.8 Truck Management Module (TMM)

The Truck Management Module is a multifunction accessory card, or an integral function of the GE Pump controls when used with the SX Traction control. The Module provides the OEM the ability to initiate status codes or operator warning codes to be displayed on the Dash Display, whenever a normally open switch or sensor wire provides a signal to the Module.

The TMM Module can be used to display a separate status code indicating over-temperature of traction motors, hydraulic motors, or any other device or system that can activate a switch that closes.

The TMM Module can also be used as a Brush Wear Indicator (BWI). The Brush Wear Indicator is designed to detect a "worn out brush" and display a fault code on the Dash Display to warn maintenance personnel that the motor brushes need to be replaced before they wear to the point of causing destructive damage to the motor commutator surface.

### Section 2.4 Hydraulic Pump Control

This hydraulic motor controller consists of the following features:

- Four speeds, adjustable from 0 to 100% motor volts. Fixed speeds actuated by switch closure to negative.

- Current limit and controlled acceleration adjustable.
- Battery Discharge Indicator interrupt compatible.

Operation of voltage regulator card: This card provides the basic functions required for controlling the pump control, optional contactors, and PMT functions. Battery positive is applied through a main control fuse to the key switch, energizing the control card power supply input to P1.

When a pump contactor is used, PMT operation is the same as outlined for the traction controllers.

The four speed (motor volts) reference points P12, P19, P20 and P21 are selected by connecting these points independently to battery negative.

The first speed is obtained by closing Speed Limit I (P12) to control negative. SL1 is adjustable by Function 11 using the Handset to adjust motor voltage from 0 to 100%. The specified motor volts will be regulated, however, the magnitude of motor current will vary depending on the loading of the vehicle.

The second speed is obtained by closing SL2 (P19) to control negative. SL2 is adjusted using the Handset and Function 12, similar to SL1.

The third speed is obtained by closing SL3 (P20) to control negative. SL3 is adjusted using the Handset and Function 13, similar to SL1.

The fourth speed is obtained by closing SL4 (P21) to control negative. SL4 is adjusted using the Handset and Function 14, similar to SL1.

If more than one Speed Limit is activated, the selected speed with the highest motor volts will override the low motor volt speed. The current limit circuit is adjustable and operates the same as the traction current limit.

The controlled acceleration circuit is adjustable and operates the same as the traction circuit. Adjustment range is from 0.1 to 22.0 seconds.

The Battery Discharge Indicator (BDI) interrupt will disable the hydraulic controller if the connection at P10 loses the 12 volt signal from the traction control. BDI interrupt can be disabled by Function 17 using the Handset. Select card type with or without BDI function.

**Section 3.0 ORDERING INFORMATION, ELEMENTARY AND OUTLINE DRAWINGS**

**Section 3.1 Ordering Information for Separately Excited Controls**

Example:

**Part Number:** IC3645 SE 4 D 33 2 C3  
**Argument Number:** 01 02 03 04 05 06 07

**Argument 01:** Basic Electric Vehicle Control Number

**Argument 02:** Control Type:

SP = Series Control (Pump)  
 SH = Separately Excited Control ( Plugging )  
 SR = Separately Excited Control ( Regen to Zero )

**Argument 03:** Operating Voltage:

1 = 120 volts                      4 = 48 volts  
 2 = 24 volts                      5 = 36/48 volts  
 3 = 36 volts                      6 = 24/36 volts  
 7 = 72/80 volts

**Argument 04:** Package Size:

D = 6.86" X 6.67"  
 R = 6.86" X 8.15"  
 U = 8.66" X 8.13"  
 W = 8.66" X 10.83"

**Argument 05:** Armature Current  
 ( 2 characters )

22 = 220 Amps  
 33 = 330 Amps  
 40 = 400 Amps  
 etc.

**Argument 06:** Field Current  
 ( 1 character )



2 = 20 Amps  
 3 = 30 Amps  
 4 = 40 Amps  
 etc.

**Argument 07:** Customer / Revision


A1 = Customer A / Revision 1  
 B1 = Customer B / Revision 1  
 etc.



**Section 3.3 Outline: SX-3 and SR-3 Package Size**

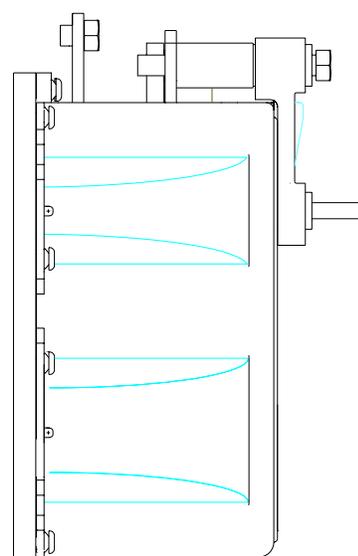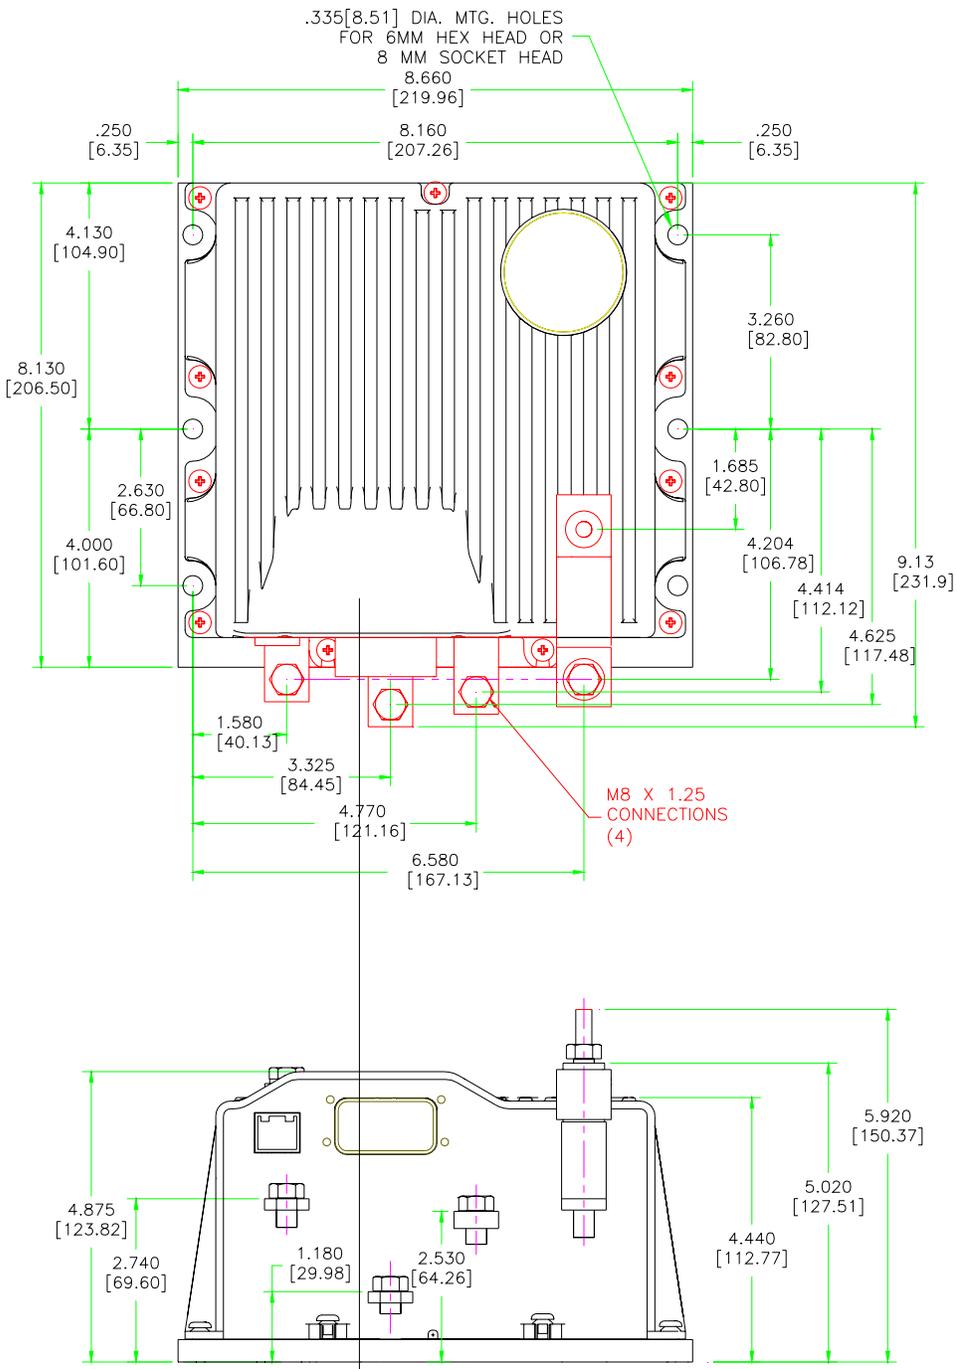


Section 3.4 Traction Elementary for Use with a Pump Control (no 1A Contactor)

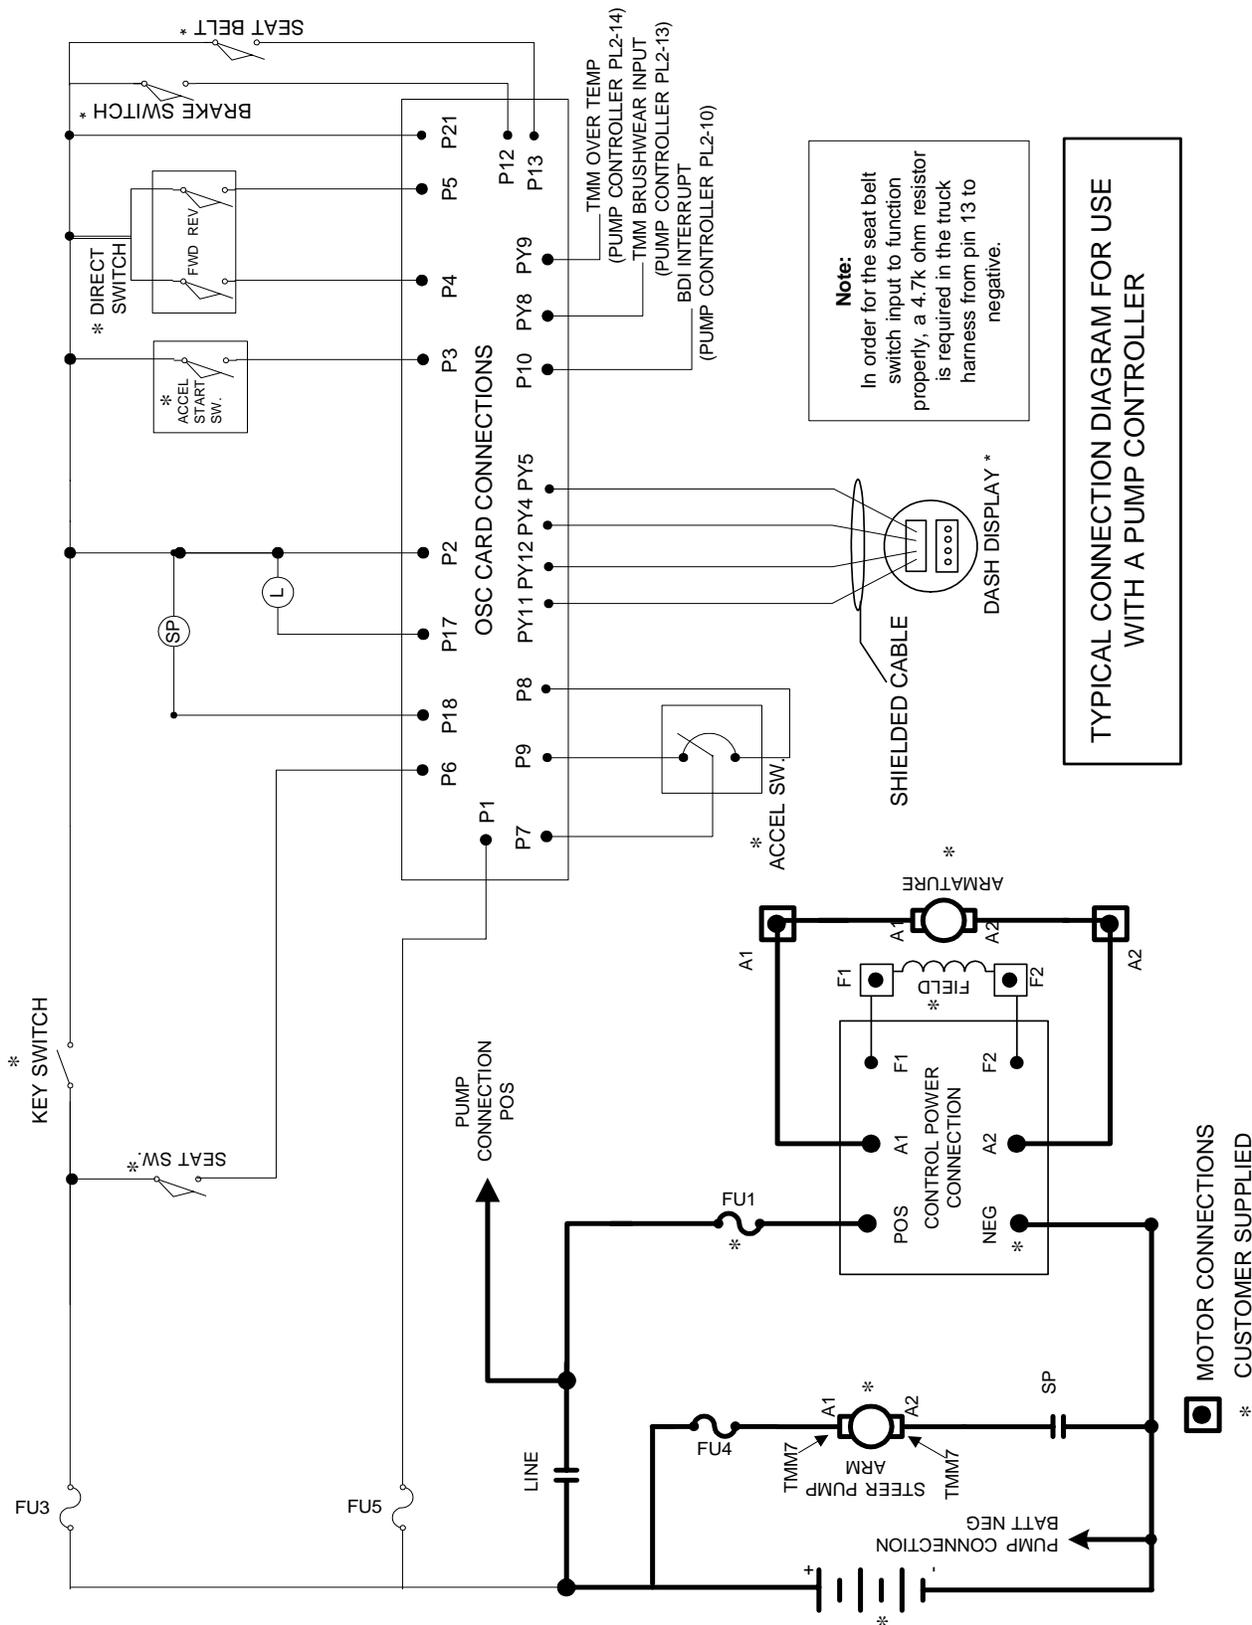



**Section 3.6 Traction Elementary for Use with a Pump Contactor and TMM Card (no 1A Contactor)**

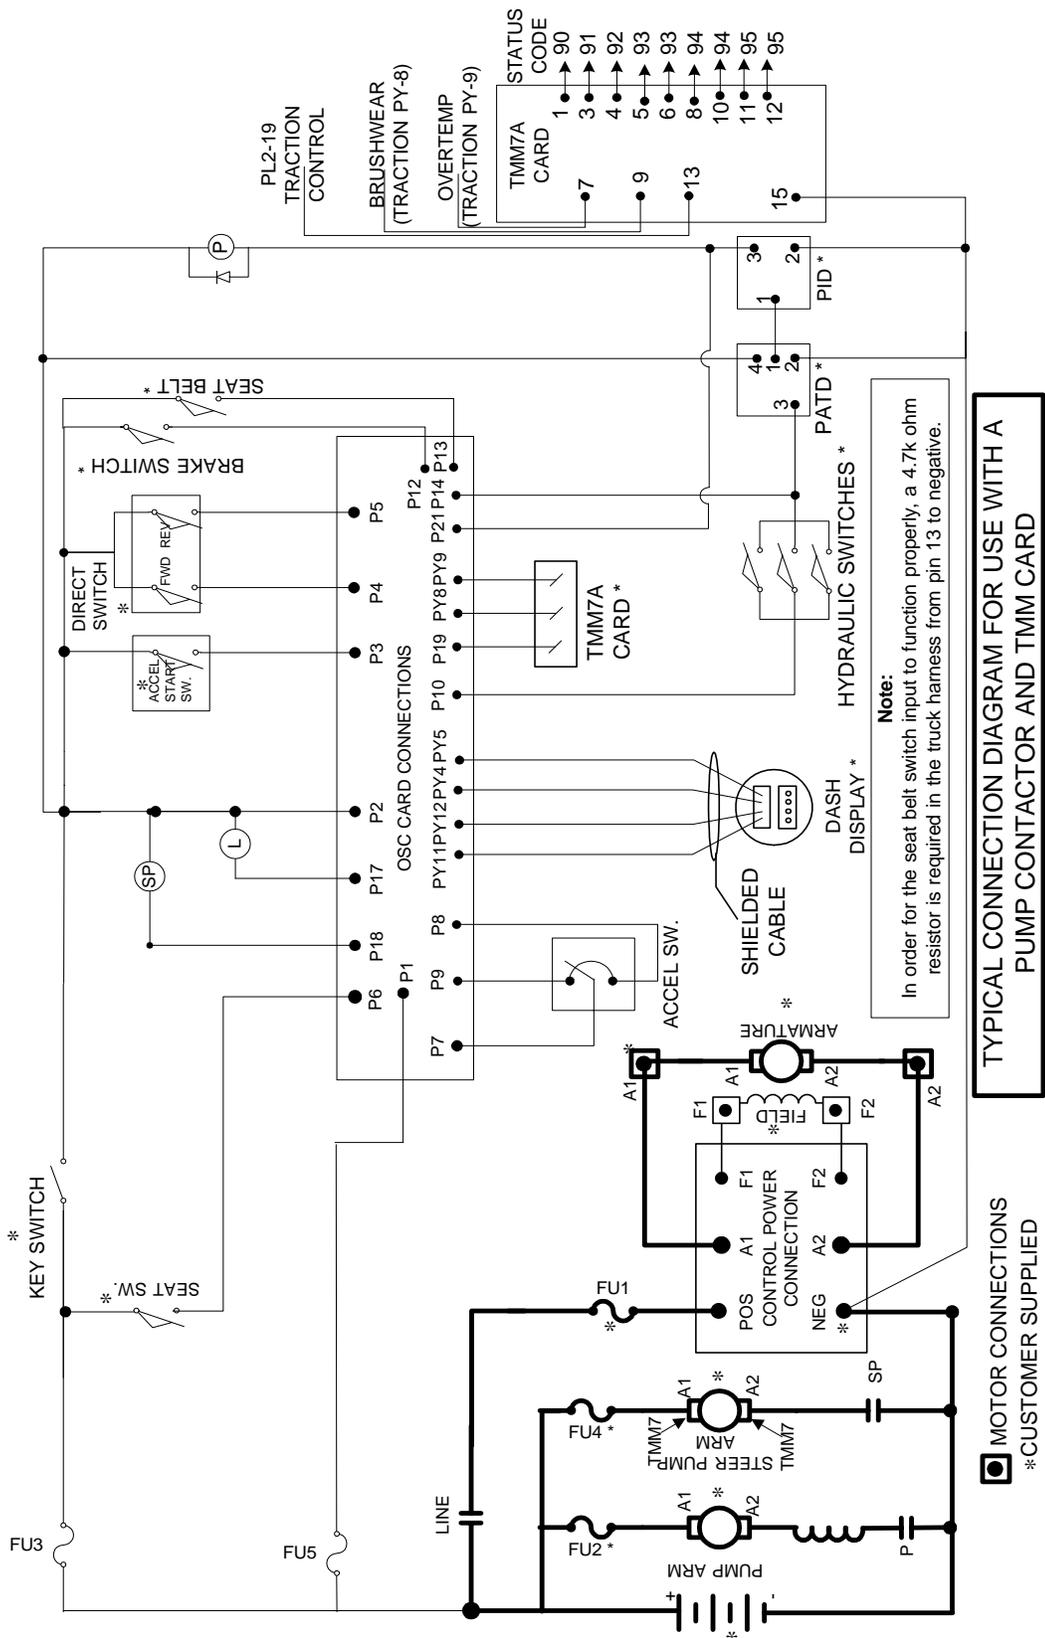


**Note:**  
 In order for the seat belt switch input to function properly, a 4.7k ohm resistor is required in the truck harness from pin 13 to negative.

**TYPICAL CONNECTION DIAGRAM FOR USE WITH A PUMP CONTACTOR AND TMM CARD**


**☐** MOTOR CONNECTIONS  
 \*CUSTOMER SUPPLIED



**Section 3.8 Pump Control Elementary (no 1A Contactor)**

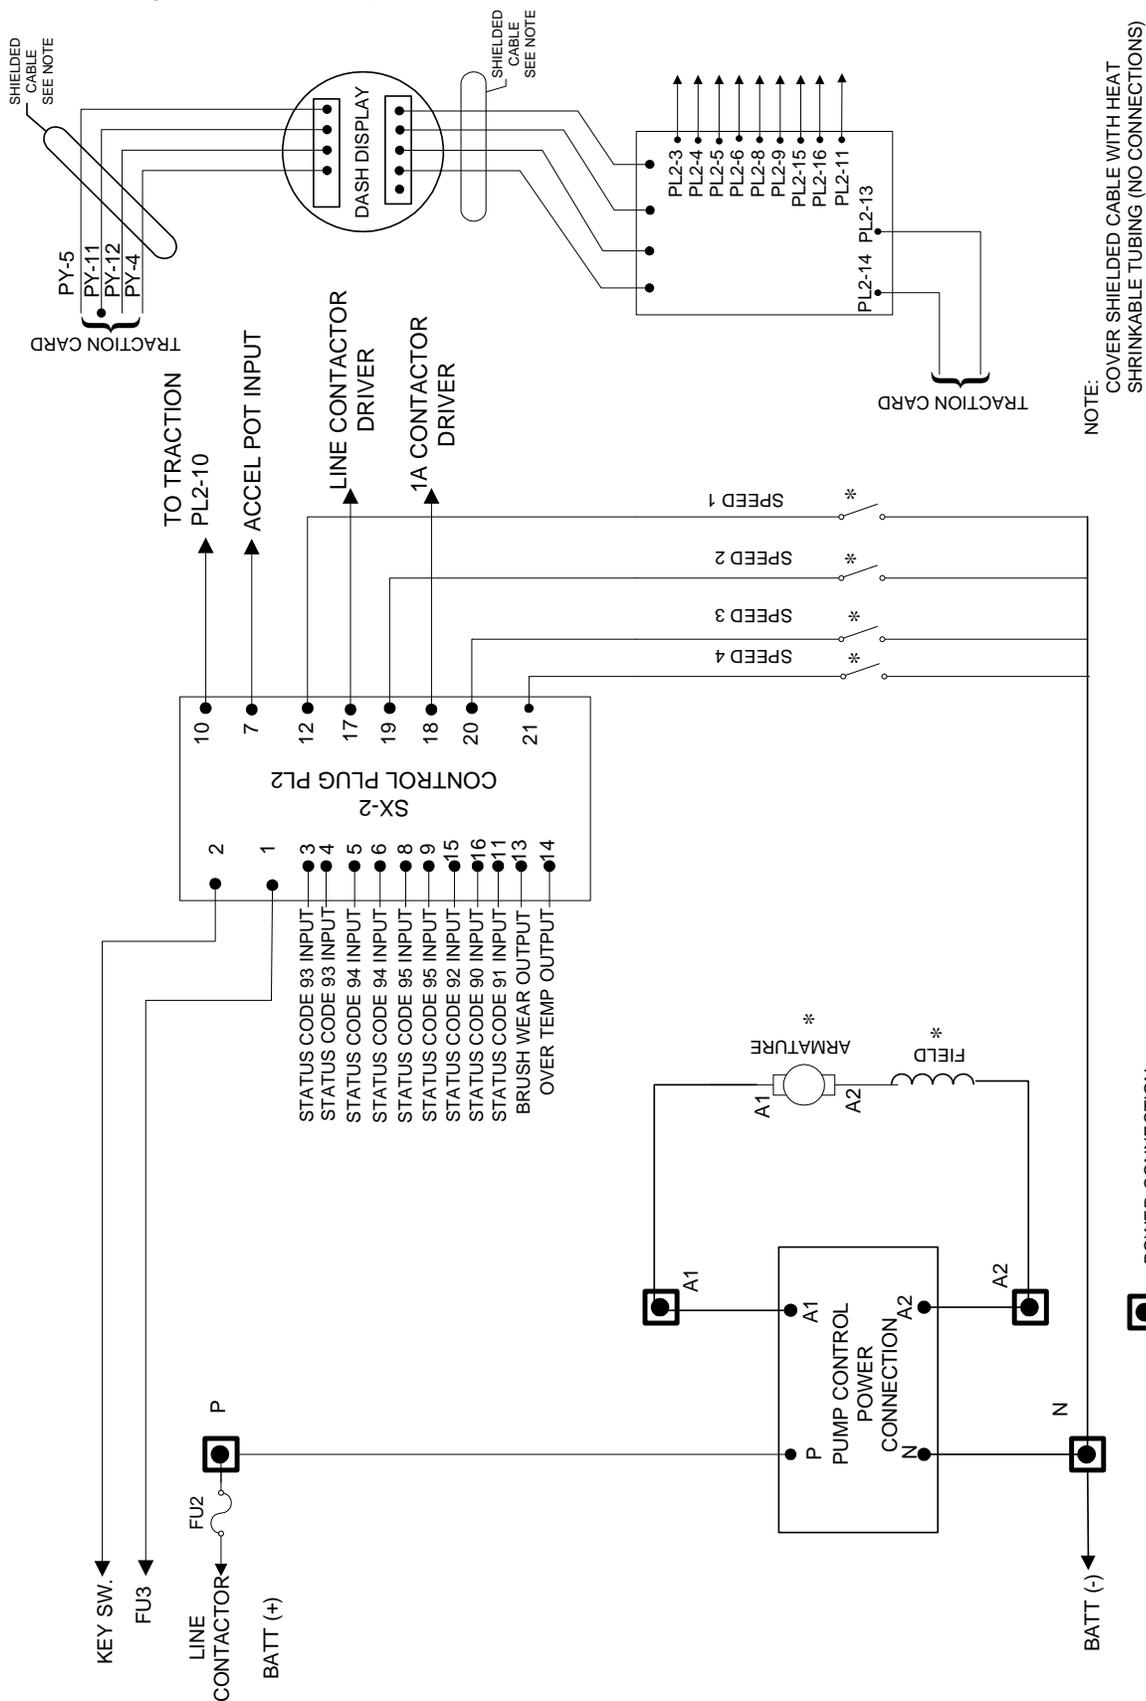


**Section 3.9 Pump Control Elementary (including 1A Contactor)**

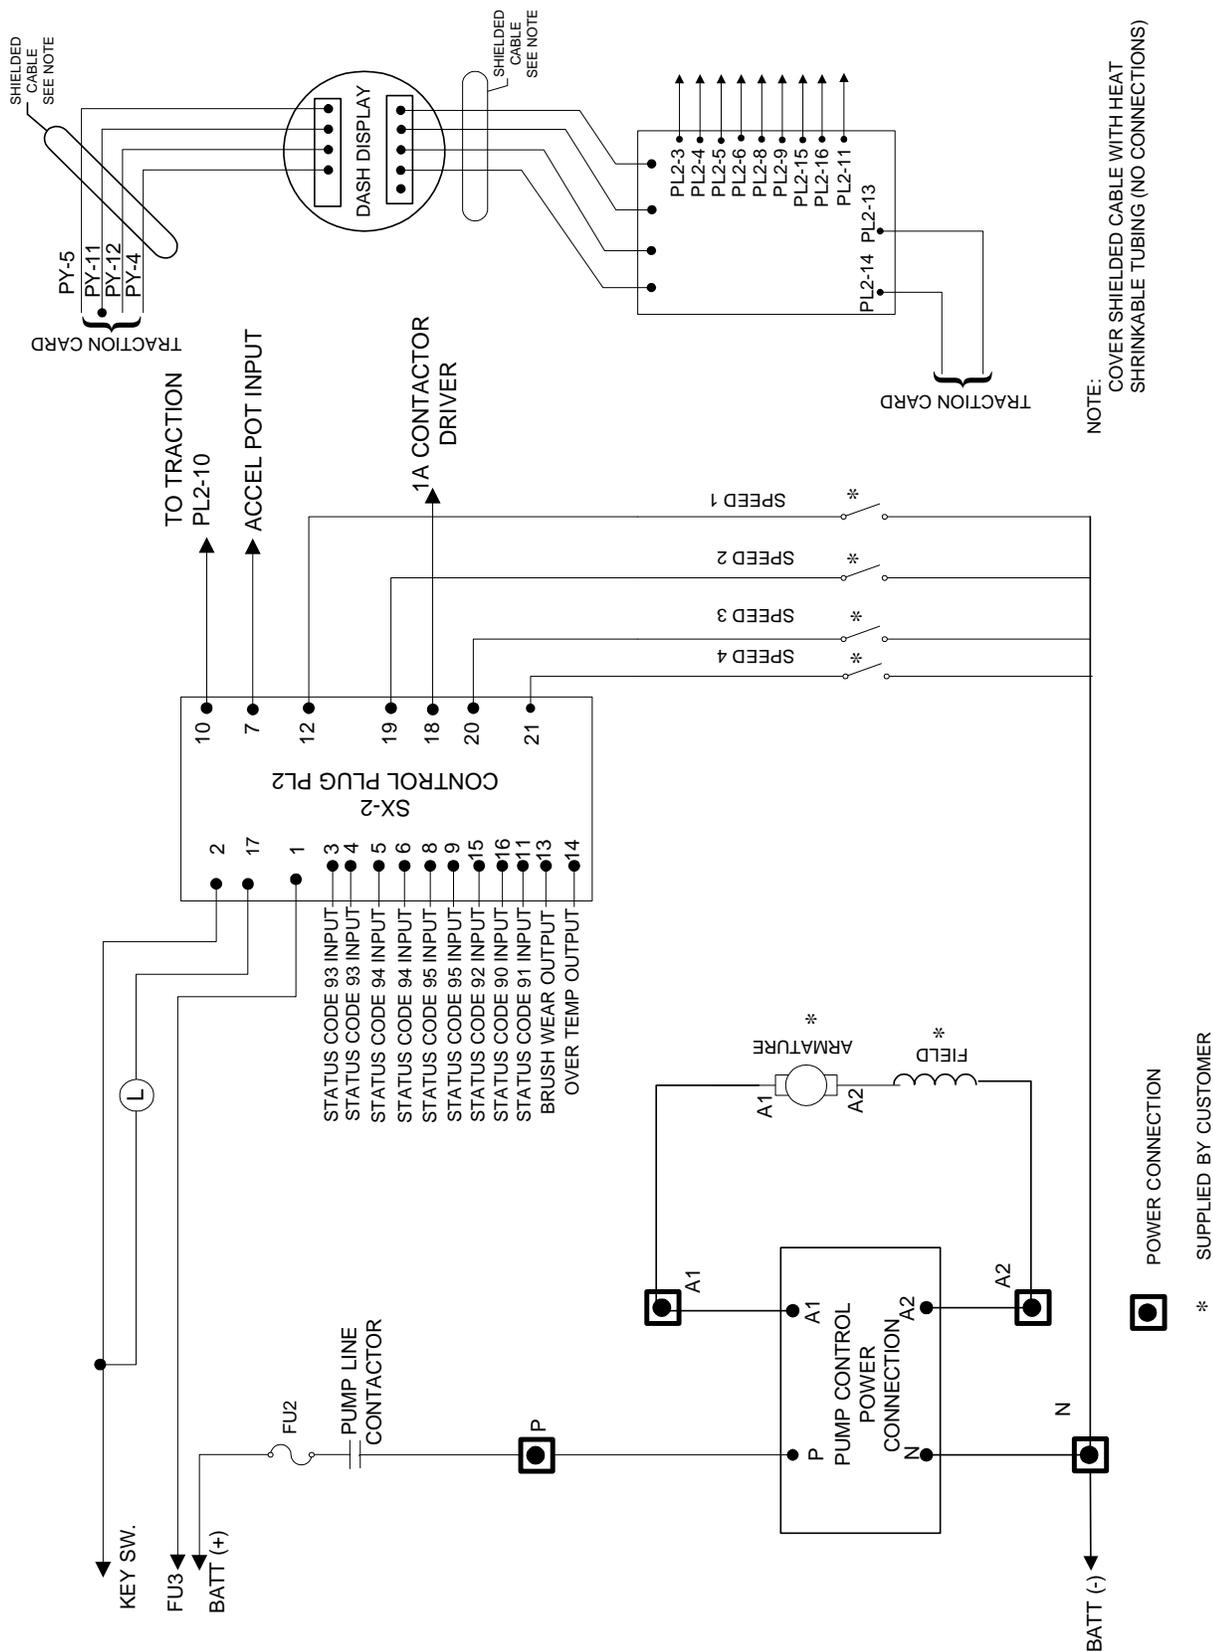


**Section 3.10 Traction and Pump Control Input and Output List**  
**CONNECTIONS TO MAIN PLUG (23 PIN) AND "Y" PLUG (12 PIN)**

<b>PIN</b>	<b>TRACTION INPUT/OUTPUT DESCRIPTION</b>	<b>PUMP INPUT/OUTPUT DESCRIPTION</b>
1	BATTERY VOLTS FROM BATTERY	BATTERY VOLTS FROM BATTERY
2	BATTERY VOLTS FROM KEY	BATTERY VOLTS FROM KEY
3	BATTERY VOLTS FROM START SWITCH	STATUS CODE 93 INPUT
4	BATTERY VOLTS FROM FORWARD SWITCH	STATUS CODE 93 INPUT
5	BATTERY VOLTS FROM REVERSE SWITCH	STATUS CODE 94 INPUT
6	BATTERY VOLTS FROM SEAT SWITCH	STATUS CODE 94 INPUT
7	ACCELERATOR INPUT VOLTAGE SIGNAL	POTENTIOMETER INPUT VOLTAGE SIGNAL
8	ACCELERATOR NEGATIVE	STATUS CODE 95 INPUT
9	ACCELERATOR POT +5 VOLTS SUPPLY	STATUS CODE 95 INPUT
10	BDI INTERRUPT	PUMP ENABLE SIGNAL 12VDC
11	1A DRIVER SIGNAL	STATUS CODE 91 INPUT
12	SPEED LIMIT B+	SPEED LIMIT #1 INPUT
13	NOT USED	TMM1 BRUSHWEAR INDICATER OUTPUT
14	HYDRAULIC SWITCH SENSOR	TMM1 OVER TEMPERATURE OUTPUT
15	I <sub>MOTOR</sub> OUT	STATUS CODE 92 INPUT
16	MOTOR CURRENT COMPENSATION	STATUS CODE 90 INPUT
17	LINE CONTACTOR DRIVER AND SUPPRESSION	LINE CONTACTOR DRIVER
18	STEER PUMP CTR DRIVER AND SUPPRESSION	1A CONTACTOR DRIVER
19	TMM + 5 VOLT SUPPLY	SPEED LIMIT #2 INPUT
20	NOT USED	SPEED LIMIT #3 INPUT
21	HOURLMETER INPUT	SPEED LIMIT #4 INPUT
22	+12V FOR TACHOMETER	NOT USED
23	TACHOMETER	NOT USED
<b>PIN</b>	<b>MOTOR PROPORTIONING "Y" PLUG INPUT/OUTPUT DESCRIPTION</b>	<b>PUMP "Y" PLUG INPUT/OUTPUT DESCRIPTION</b>
1	CLOCK (OUT)	CLOCK (OUT)
2	DATA (OUT)	DATA (OUT)
3	ENABLE (OUT)	ENABLE (OUT)
4	NEGATIVE	NEGATIVE
5	+5V SUPPLY	+5V SUPPLY
6	CONT/STORE (IN) (HANDSET)	CONT/STORE (IN) (HANDSET)
7	TACHOMETER	NOT USED
8	VALUE	VALUE
9	FUNCTION	FUNCTION
10	+12 VOLTS	NOT USED
11	SERIAL RECEIVE	SERIAL RECEIVE
12	SERIAL TRANSMIT	SERIAL TRANSMIT

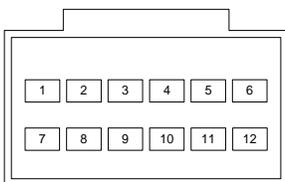

WIRE END VIEW "Y" PLUG

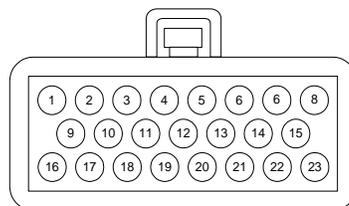

WIRE END VIEW - MAIN PLUG

## Section 4.0 TROUBLESHOOTING AND DIAGNOSTIC STATUS CODES

### Section 4.1 General Maintenance Instructions

The transistor control, like all electrical apparatus, does have some thermal losses. The semiconductor junctions have finite *temperature* limits, above which these devices may be damaged. For these reasons, normal maintenance should guard against any action which will expose the components to excessive heat and/or those conditions which will reduce the heat dissipating ability of the control, such as restricting air flow.

The following Do's and Don'ts should be observed:

Any controls that will be applied in ambient temperatures over 100° F (40° C) should be brought to the attention of the vehicle manufacturer.

All external components having inductive coils must be filtered. Refer to vehicle manufacturer for specifications.

The wiring should not be directly steam cleaned. In dusty areas, blow low-pressure air over the control to remove dust. In oily or greasy areas, a mild solution of detergent or denatured alcohol can be used to wash the control, and then low-pressure air should be used to completely dry the control.

For the control to be most effective, it must be mounted against the frame of the vehicle. The metal vehicle frame, acting as an additional heat sink, will give improved vehicle performance by keeping the control package cooler. *Apply a thin layer of heat-transfer grease (such as Dow Corning 340) between the control heat sink and the vehicle frame.*

Control wire plugs and other exposed transistor control parts should be kept free of dirt and paint that might change the effective resistance between points.

**CAUTION: The vehicle should not be plugged when the vehicle is jacked up and the drive wheels are in a free wheeling position. The higher motor speeds can create excessive voltages that can be harmful to the control.**

Do not hipot (or megger) the control. Refer to control manufacturer before hipotting.

Use a lead-acid battery with the voltage and ampere hour rating specified for the vehicle. Follow normal battery maintenance procedures, recharging before 80 percent discharged with periodic equalizing charges.

Visual inspection of GE contactors contained in the traction and pump systems is recommended to occur during every

160 hours of vehicle operation. Inspection is recommended to verify that the contactors are not binding and that the tips are intact and free of contaminants.

GE does not recommend that any type of welding be performed on the vehicle after the installation of the control(s) in the vehicle. GE will not honor control failures during the warranty period when such failures are attributed to welding while the control is installed in the vehicle.

### Section 4.2 Cable Routing and Separation

Electrical noise from cabling of various voltage levels can interfere with a microprocessor-based control system. To reduce this interference, GE recommends specific cable separation and routing practices, consistent with industry standards.

#### Section 4.2.1 Application Responsibility

The customer and customer's representative are responsible for the mechanical and environmental locations of cables. They are also responsible for applying the level rules and cabling practices defined in this section. To help ensure a lower cost, noise-free installation, GE recommends early planning of cable routing that complies with these level separation rules.

On new installations, sufficient space should be allowed to efficiently arrange mechanical and electrical equipment.

On vehicle retrofits, level rules should be considered during the planning stages to help ensure correct application and a more trouble-free installation.

#### Section 4.2.2. Signal/Powerlevel Definitions

The signal/power carrying cables are categorized into four defining levels: low, high, medium power, and high power. Within those levels, signals can be further divided into classes.

Sections 4.2.2.a through 4.2.2.d define these levels and classes, with specific examples of each. Section 4.2.3 contains recommendations for separating the levels.

##### 4.2.2.a Low-Level Signals (Level L)

Low-level signals are designated as *level L*. These consist of:

- Analog signals 0 through  $\pm 15$  V
- Digital signals whose logic levels are less than 15 V DC
- 4 – 20 mA current loops
- DC busses less than 15 V and 250 mA

The following are specific examples of level L signals used in drive equipment cabling:

- Control common tie
- DC buses feeding sensitive analog or digital hardware
- All wiring connected to components associated with sensitive analog hardware with less than 5V signals (for example, potentiometers and tachometers)
- Digital tachometers and resolvers
- Dash display cabling
- RS-232 cabling

**Note:** Signal inputs to analog and digital blocks should be run as shielded twisted-pair (for example, inputs from tachometers, potentiometers, and dash displays).

#### 4.2.2.b High-Level Signals (Level H)

High-level signals are designated as *level H*. These signals consist of:

- Analog and digital signals greater than 15 V DC and less than 250 mA

For example, switch inputs connected to battery volts are examples of level H signals used in drive equipment cabling.

#### 4.2.2.c Medium-Power Signals (Level MP)

Medium power signals are designated as *level MP*. These signals consist of:

- DC switching signals greater than 15 V
- Signals with currents greater than 250 mA and less than 10A

The following are specific examples of level MP signals used in drive equipment cabling:

- DC busses less than 10 A
- Contactor coils less than 10 A
- Machine fields less than 10 A

#### 4.2.2.d. High Power Signals (Level HP)

Power wiring is designated as *level HP*. This consists of DC buses and motor wiring with currents greater than 10 A. The following are specific examples of level HP signals used in drive equipment cabling:

- Motor armature loops
- DC outputs 10 A and above
- Motor field loops 10 A and above

#### 4.2.3. Cable Spacing Guidelines

Recommended spacing (or clearance) between cables (or wires) is dependent on the level of the wiring inside them. For correct level separation when installing cable, the

customer must apply the **general guidelines** (section 4.2.3.a), outlined below.

#### 4.2.3.a General Cable Spacing

The following general practices should be used for *all levels* of cabling:

- All cables and wires of like signal levels and power levels must be grouped together.
- In general, different levels must run in separate wire bundles, as defined in the different classes, identified above. Intermixing cannot be allowed, unless noted by exception.
- Interconnecting wire runs should carry a level designation.
- If wires are the same level and same type signal, group those wires from one location to any other location together in multiconductor cables or bind them together with twine or zip-ties.
- When unlike signals must cross, cross them in 90° angles at a maximum spacing. Where it is not possible to maintain spacing, place a grounded steel barrier between unlike levels at the crossover point.

#### 4.2.4 Cabling for Vehicle Retrofits

Reducing electrical noise on vehicle retrofits requires careful planning. Lower and higher levels should never encircle each other or run parallel for long distances. It is practical to use existing wire runs or trays as long as the level spacing (see section 4.2.2) can be maintained for the full length of the run.

Existing cables are generally of high voltage potential and noise producing. Therefore, route levels L and H in a path separate from existing cables, whenever possible.

For level L wiring, use barriers in existing wire runs to minimize noise potential.

Do not loop level L signal wires around level H, level MP, or HP wires.

#### 4.2.5 RF Interference

To prevent radio frequency (RF) interference, care should be taken in routing power cables in the vicinity of radio-controlled devices.

#### Section 4.2.6 Suppression

Unless specifically noted otherwise, suppression (for example, a snubber) is required on all inductive devices controlled by an output. This suppression minimizes noise and prevents damage caused by electrical surges.

**Section 4.3 Recommended Lubrication of Pins and Sockets Prior to Installation**

Beginning in January of 1999, GE will implement the addition of a lubricant to all connections using pins and sockets on EV100/EV200 and Gen II products. Any connection made by GE to the A, B, X, Y, or Z plugs will have the lubricant NYE 760G added to prevent fretting of these connections during vehicle operation.

Fretting occurs during microscopic movement at the contact points of the connection. This movement exposes the base metal of the connector pin which, when oxygen is present, allows oxidation to occur. Sufficient build up of the oxidation can cause intermittent contact and intermittent vehicle operation. This can occur at any similar type of connection, whether at the control or in any associated vehicle wiring, and the resultant intermittent contact can provide the same fault indication as actual component failure.

The addition of the NYE 760G lubricant will prevent the oxidation process by eliminating the access of oxygen to the contact point. GE recommends the addition of this lubricant to the 12 pin and 23 pin plugs of all new Gen II controls at the time of their installation into a vehicle

When servicing existing vehicles exhibiting symptoms of intermittent mis-operation or shutdown by the GE control, GE recommends the addition of this lubricant to all 12 and 23 pin plugs, after proper cleaning of the connectors, as a preventative measure to insure fretting is not an issue before GE control replacement. Also, for long term reliable control operation, the plug terminals must be maintained per these instructions with the recommended contact cleaner and lubricant which provides a high degree of environmental and fretting protection.

New and re-manufactured control plugs are cleaned and lubricated prior to shipment from the factory. However, in applications where severe vibration or high temperature cycling and excessive humidity ( such as freezers ) are present, it is recommended that the plug terminals be cleaned and lubricated every year, per this instructions. In normal applications, plug maintenance should be performed every two years, unless intermittent problems arise with the plugs, requiring more immediate attention.

**Warning: Do not use any other cleaners or lubricants other than the ones specified.**

**WARNING: Before conducting maintenance on the vehicle, jack up the drive wheels, disconnect the battery and discharge the capacitors. Consult the Operation and Service Manual for your particular vehicle for details on discharging the capacitors; this procedure differs between SCR and Transistor controls.**

1. **Disconnect** plug from controller or mating plug.

2. **Locate** the plug that contains the socket (female) terminals. *Maintenance needs only to be performed on the plug containing the socket (female) type terminals. Reconnecting the plugs will lubricate the pin (male) terminals.*
3. **Clean** each terminal using Chemtronics® contact cleaner "Pow-R-WasH CZ " as shown in Figure 1.

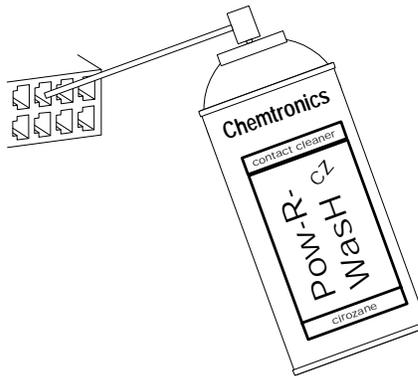


Figure 1

4. **Lubricate** each terminal using Nye® 760G lubricant as shown in figure 2. Apply enough lubricant to each terminal opening to completely fill each opening to a depth of .125" minimum.

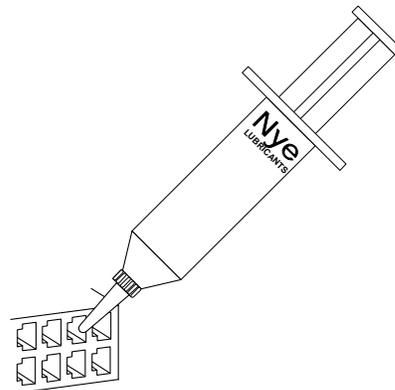


Figure 2

5. **Reconnect** plugs.

**Reference**

Cleaner	Chemtronics® Pow-R-WasH CZ Contact Cleaner
Lubricant	Nye® Lubricants NYOGEL® 760G
GE Plug Lub Kit	Contains both above products: <b>328A1777G1</b>

#### Section 4.4 General Troubleshooting Instructions

Trouble-shooting the SX family of controls should be quick and easy when following the instructions outlined in the following status code instruction sheets.

If mis-operation of the vehicle occurs, a status code will be displayed on the Dash Display (for vehicles equipped with a Dash Display) or made available by plugging a Handset into the plug "Y" location, and then reading the status code.

**Note:** Status code numbers from 00 to 99 are traction control status codes. Status codes with the prefix 1 (101 to 199) are pump control status codes.

With the status code number, follow the procedures outlined in the status code instruction sheets to determine the problem.

**Important Note:** Due to the interaction of the logic card with all vehicle functions, almost any status code or control fault could be caused by the logic card. After all other status code procedures have been followed and no problem is found, the controller should then be replaced as the last option to correct the problem.

The same device designations have been maintained on different controls but the wire numbers may vary. Refer to the elementary and wiring diagrams for your specific control. The wire numbers shown on the elementary diagram will have identical numbers on the corresponding wiring diagrams for a specific vehicle, but these numbers may be different from the numbers referenced in this publication.

**WARNING: Before trouble-shooting, jack up the drive wheels, disconnect the battery and discharge the capacitors. Reconnect the battery as needed for specific checks. Capacitors should be discharged by connecting a 200 ohm 2 watt resistor between the positive and negative terminals on the control panel.**

Check resistance on R x 1000 scale from frame to power and control terminals. A resistance of less than 20,000 ohms can cause misleading symptoms. Resistance less than 1000 ohms should be corrected first.

Before proceeding, visually check for loose wiring, mis-aligned linkage to the accelerator switch, signs of overheating of components, etc.

Tools and test equipment required are: clip leads, volt-ohm meter (20,000 ohms per volt) and basic hand tools.

**Section 4.5 Traction Control Codes**

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>NONE</b>	Segments do not illuminate on the Dash Display and/or the Handset.	No input voltage to the control card or the display unit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Display screen on Dash Display and/or Handset is blank.</p> <p><b><u>POSSIBLE CAUSE</u></b> Positive or negative control voltage is not present.</p> <ul style="list-style-type: none"> <li>• Insure that the key switch is closed and voltage is present between P1 &amp; battery negative (Power Terminal "NEG"). Also check for voltage between P2 and control negative.</li> </ul> <p>Open circuit between control card AND the Dash Display or Handset.</p> <ul style="list-style-type: none"> <li>• Check for an open circuit or loose connection going from the control and the Dash Display or Handset.</li> </ul> <p>Defective Dash Display or Handset.</p> <ul style="list-style-type: none"> <li>• Replace Dash Display or Handset.</li> </ul>	


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-01</b>	No seat switch or deadman switch input (no voltage to P6).	This status code will be displayed when P6 is less than 50% battery volts.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Mis-adjusted or defective seat or deadman switch.</p> <ul style="list-style-type: none"> <li>• Check to see that the seat switch closes properly.</li> </ul> <p>Open circuit between battery positive and P6.</p> <ul style="list-style-type: none"> <li>• Check for loose connections or broken wires:                             <ul style="list-style-type: none"> <li>– Between the seat switch and P6</li> <li>– Between the key switch and the battery positive side of the seat switch.</li> <li>– Between the seat switch and P2.</li> </ul> </li> <li>• On vehicles without a seat/deadman switch, check for a loose connection or broken wire from P2 and/or P6.</li> </ul>	


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-02</b>	Forward directional switch is closed on initial power up.	This status code will be displayed when P4 is greater than 60% of battery voltage at initial key switch on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate because of Static Return to Off (SRO) lock out.</p> <p><b><u>POSSIBLE CAUSE</u></b> Forward directional switch is closed on initial start up (i.e. closure of battery, key switch or seat switch).</p> <ul style="list-style-type: none"> <li>Return directional switch lever to neutral and then return lever to forward position.</li> </ul> <p>Forward directional switch is welded closed or mis-adjusted to be held closed.</p> <ul style="list-style-type: none"> <li>Replace or adjust directional switch to insure that it opens when the directional switch is returned to neutral.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>Replace the controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-03</b>	Reverse directional switch is closed on initial power up.	This status code will be displayed when P5 is greater than 60% of battery voltage at initial key switch on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate because of Static Return to Off (SRO) lock out.</p> <p><b><u>POSSIBLE CAUSE</u></b> Reverse directional switch is closed on initial start up (i.e. closure of battery, key switch or seat/deadman switch).</p> <ul style="list-style-type: none"> <li>Return directional switch lever to neutral and then return lever to reverse position.</li> </ul> <p>Reverse directional switch is welded closed or mis-adjusted to be held closed.</p> <ul style="list-style-type: none"> <li>Replace or adjust directional switch to insure that it opens when the directional switch is returned to neutral.</li> </ul> <p>Defective control. Replace the controller unit.</p>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-05</b>	Start switch fails to close. Cycle the key switch off and on to clear the code.	This status code will be displayed when P7 is calling for greater than 40% speed and P3 is less than 60% of battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate. The key switch must be turned off and on to clear the status code.</p> <p><b>POSSIBLE CAUSE</b> Defective start switch circuit.</p> <ul style="list-style-type: none"> <li>• Check start switch to insure closure when accelerator is depressed.</li> <li>• Check for open circuit or loose connections in wiring from key switch to start switch and from P3 to start switch.</li> </ul> <p>Defective accelerator switch.</p> <ul style="list-style-type: none"> <li>• Check accelerator switch potentiometer for proper operation and ohmic value.</li> </ul>	


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-06</b>	Accelerator depressed with no direction selected.	This status code will be displayed when P4 and P5 are less than 60% of battery volts, and P7 is calling for greater than 40% speed.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Accelerator pedal is depressed before closing forward or reverse directional switch.</p> <ul style="list-style-type: none"> <li>• Status code will disappear when directional switch is closed or when accelerator pedal is released.</li> </ul> <p>Defective directional switch</p> <ul style="list-style-type: none"> <li>• Check forward or reverse switch to insure closure when direction is selected.</li> </ul> <p>Open circuit between directional switch(es) and battery positive or between directional switch(es) and P4 or P5.</p> <ul style="list-style-type: none"> <li>• Check all control wires and connections shown in Trouble Shooting Diagram.</li> </ul>	

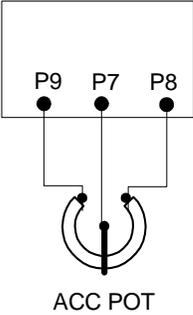
TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-07</b>	Accelerator input speed too low on power up after initial key switch closure.	This status code will be displayed when the accelerator input voltage at P7 is 0.7 volts less than the zero speed auto calibration value for the accelerator.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate when accelerator pedal is depressed or status code -07 is displayed then disappears when the vehicle starts to accelerate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Accelerator input mis-adjusted or defective.</p> <p>Open circuit between battery negative and P7 in accelerator input circuit.</p> <ul style="list-style-type: none"> <li>• Check for broken wires or loose connections or open potentiometer / voltage supply.</li> </ul> <p>Short circuit from battery positive to wiring in accelerator input circuit.</p>	 <p>ACC POT</p>

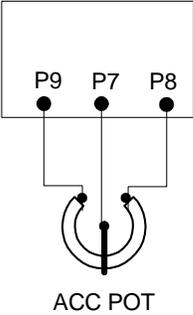TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-08</b>	Accelerator input speed too high on power up after initial key switch closure.	This status code will be displayed when the accelerator input voltage at P7 is calling for greater than 20% speed, and any of the following connections are opened and closed: battery plug or key switch.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Accelerator input mis-adjusted or defective.</p> <ul style="list-style-type: none"> <li>• Input voltage at P7 should be calling for more than 20% speed. Adjust or replace accelerator unit to insure that the voltage at P7 is calling for less than 20% speed before depressing pedal.</li> <li>• Repeat the auto calibration routine outlined in Section 8 of this manual</li> <li>• P7 or the accelerator pot negative have an open circuit.</li> <li>• Defective Control</li> </ul>	 <p>ACC POT</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-09</b>	Both the forward and reverse directional switches are closed at the same time.	This status code will be displayed when P4 and P5 are greater than 60% of battery volts at the same time.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Forward or reverse directional switch welded closed or mis-adjusted to be held closed.</p> <ul style="list-style-type: none"> <li>Replace or adjust directional switches to insure that they open when directional switch is returned to neutral.</li> </ul> <p>Short circuit between battery positive and P4 and/or P5.</p> <ul style="list-style-type: none"> <li>Disconnect wires from P4 and P5 and check wire for short circuit to positive side of directional switch.</li> </ul> <p>Defective Control</p> <ul style="list-style-type: none"> <li>Disconnect wires and measure voltage at P4 and P5. Voltage should be less than 60% of battery volts.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-11</b>	Start switch closed on power up after initial key switch closure.	This status code will be displayed when P3 is greater than 60% of battery voltage when the key switch is closed.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Start switch input mis-adjusted or defective.</p> <ul style="list-style-type: none"> <li>Input voltage at P3 should be less than 60% of battery volts at key switch closing. Adjust or replace accelerator unit to insure that the voltage at P3 is less than 60% of battery volts before closing the start switch.</li> </ul> <p>Short circuit between battery positive and P3 in start switch input circuit.</p> <ul style="list-style-type: none"> <li>Disconnect wire from P3. Check for short circuit from this wire to battery positive.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>Disconnect wire from P3. Measure voltage from P3 to negative. Voltage should be zero, if not, replace control.</li> </ul>	

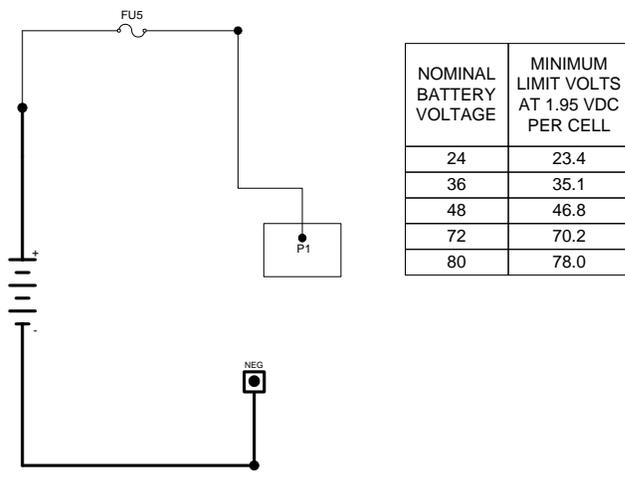TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION												
<b>-15</b>	Battery voltage is too low or control card is mis-adjusted.	This status code will be displayed when the battery volts are less than 1.95 volts per cell at initial key switch on. See table below.												
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>												
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Discharged battery</p> <ul style="list-style-type: none"> <li>Check battery for proper open circuit voltage as shown in "Trouble Shooting Diagram", charge battery, if required.</li> </ul> <p>Defective battery</p> <ul style="list-style-type: none"> <li>Check each battery cell for proper voltage (greater than 1.95 volts at cell). Replace or repair battery.</li> </ul> <p>Incorrect control card adjustment.</p> <ul style="list-style-type: none"> <li>Check Function 15 for proper adjustment for battery being used. See Handset instruction sheet for details. Adjust to proper settings.</li> </ul> <p>Check "minimum" battery volts at P1 and NEG.</p>	 <table border="1"> <thead> <tr> <th>NOMINAL BATTERY VOLTAGE</th> <th>MINIMUM LIMIT VOLTS AT 1.95 VDC PER CELL</th> </tr> </thead> <tbody> <tr> <td>24</td> <td>23.4</td> </tr> <tr> <td>36</td> <td>35.1</td> </tr> <tr> <td>48</td> <td>46.8</td> </tr> <tr> <td>72</td> <td>70.2</td> </tr> <tr> <td>80</td> <td>78.0</td> </tr> </tbody> </table>	NOMINAL BATTERY VOLTAGE	MINIMUM LIMIT VOLTS AT 1.95 VDC PER CELL	24	23.4	36	35.1	48	46.8	72	70.2	80	78.0
NOMINAL BATTERY VOLTAGE	MINIMUM LIMIT VOLTS AT 1.95 VDC PER CELL													
24	23.4													
36	35.1													
48	46.8													
72	70.2													
80	78.0													

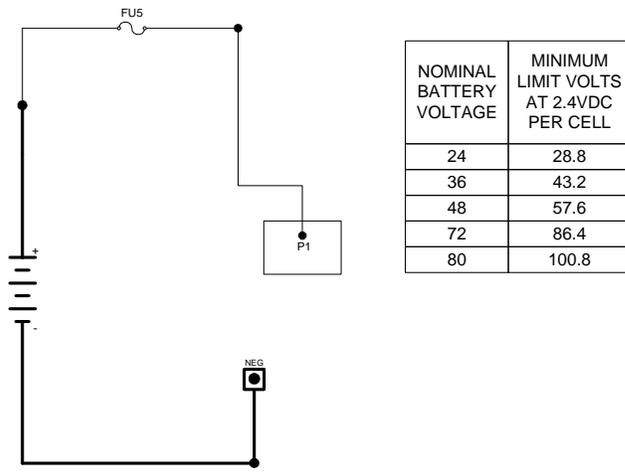TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION												
<b>-16</b>	Battery voltage is too high or control card is mis-adjusted.	This status code will be displayed when the battery volts are greater than 2.4 volts per cell at initial key switch on. See table below.												
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>												
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Incorrect control card adjustment Check Function 15 for proper adjustment for battery being used. See Handset instructions for details. Adjust to proper setting.</p> <p>Battery over charged or incorrect battery used.</p> <ul style="list-style-type: none"> <li>Check battery for proper open circuit voltage per table at right. If voltage is excessive, check battery charger for proper output voltage.</li> </ul> <p>Check "maximum" battery volts at P1 and NEG.</p>	 <table border="1"> <thead> <tr> <th>NOMINAL BATTERY VOLTAGE</th> <th>MINIMUM LIMIT VOLTS AT 2.4VDC PER CELL</th> </tr> </thead> <tbody> <tr> <td>24</td> <td>28.8</td> </tr> <tr> <td>36</td> <td>43.2</td> </tr> <tr> <td>48</td> <td>57.6</td> </tr> <tr> <td>72</td> <td>86.4</td> </tr> <tr> <td>80</td> <td>100.8</td> </tr> </tbody> </table>	NOMINAL BATTERY VOLTAGE	MINIMUM LIMIT VOLTS AT 2.4VDC PER CELL	24	28.8	36	43.2	48	57.6	72	86.4	80	100.8
NOMINAL BATTERY VOLTAGE	MINIMUM LIMIT VOLTS AT 2.4VDC PER CELL													
24	28.8													
36	43.2													
48	57.6													
72	86.4													
80	100.8													

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-21</b>	The accelerator voltage is too high. Cycle the key switch off and on to clear the status code.	This status code will be displayed when the voltage at P7 is greater than 4.5 volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate. The key switch must be turned off and on to clear the status code.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>• Verify wire connection between accelerator pot to P8</li> <li>• Verify wire connection between P7 to accelerator pot</li> <li>• Verify that the accelerator pot is adjusted properly</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-23</b>	Motor field current is high on start up in the reverse direction.	This status code will be displayed when the current draw in the motor field is too high at start up in the reverse direction.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<p style="text-align: center;"><b>NO GRAPHIC FOR THIS STATUS CODE</b></p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-24</b>	Motor field current is high on start up in the forward direction.	This status code will be displayed when the current draw in the motor field is too high at start up in the forward direction.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<b>NO GRAPHIC FOR THIS STATUS CODE</b>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-27</b>	Control's power supply is less than 10 Volts DC.	This status code will be displayed when the control's power supply is less than 10 volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor opens and closes, then can only be closed by opening and closing the key switch.</p> <p><b><u>POSSIBLE CAUSE</u></b> Discharged Battery</p> <ul style="list-style-type: none"> <li>• Check battery to insure proper state of charge. Voltage may be dropping below 10 Volts DC under load.</li> </ul> <p>Loose connection at P1.</p> <ul style="list-style-type: none"> <li>• Insure that the wire connection at P1 is tight.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<p>The diagram shows a battery on the left. A wire from the positive terminal goes through fuse FU3 to a KEY SWITCH. From the KEY SWITCH, the wire goes to terminal P1. Another wire goes from the positive terminal through fuse FU5 to terminal P2. A third wire goes from the negative terminal to a terminal labeled NEG.</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-28</b>	Motor field current is too high during the run mode.	This status code will be displayed when the current in the motor field is sustained above a preset limit for longer than 70 seconds.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Continued operation of vehicle in high motor current condition.</p> <ul style="list-style-type: none"> <li>Operate vehicle at lower motor current condition for 70 seconds.</li> </ul> <p>Function 7 is mis-adjusted to allow higher than normal motor field current.</p> <ul style="list-style-type: none"> <li>Adjust function per OEM instructions.</li> </ul>	<p><b><i>THE PRESENCE OF THIS STATUS CODE IS NOT NECESSARILY INDICATIVE OF A CONTROL ISSUE. IF FUNCTION 7 IS NOT MIS-ADJUSTED, THE STATUS CODE INDICATES AN APPLICATION ISSUE WHERE A MOTOR IS BEING STALLED, ETC. DISPLAY OF THIS STATUS CODE SHOULD NOT TRIGGER THE RETURN OF A CONTROL FOR REPAIR OR REPLACEMENT.</i></b></p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-41</b>	Shorted thermal protector (TP) or armature transistor over temperature.	This status code will be displayed when the voltage at the thermal protector is too low.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Reduced or no power to traction motor in control range.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is in thermal cut-back.</p> <ul style="list-style-type: none"> <li>Allow control to cool, status code should disappear.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>Replace controller unit.</li> </ul>	<p><b><i>THE PRESENCE OF THIS STATUS CODE IS NOT NECESSARILY INDICATIVE OF A CONTROL ISSUE. THIS STATUS CODE MAY INDICATE AN APPLICATION ISSUE. DISPLAY OF THIS STATUS CODE SHOULD NOT TRIGGER THE RETURN OF A CONTROL FOR REPAIR OR REPLACEMENT.</i></b></p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-42</b>	Motor armature offset voltage is too high.	This status code will be displayed when the voltage at the current sensor input is greater than 2.6 volts with no current flowing in the motor circuit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<b>NO GRAPHIC FOR THIS STATUS CODE</b>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-43</b>	Motor armature offset voltage is too low.	This status code will be displayed when the voltage at the current sensor input is less than 2.4 volts with no current flowing in the motor circuit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	<b>NO GRAPHIC FOR THIS STATUS CODE</b>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-44</b>	Armature transistor did not turn off properly.	This status code will be displayed when, during control operation, the armature transistor fails to turn off. This will result in a PMT condition.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor opens and then can only be closed by opening and closing the key switch.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-45</b>	Armature transistor did not turn on properly.	This status code will be displayed when, during control operation, the armature transistor fails to turn on properly. This will result in a PMT condition.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Truck will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-46</b>	"Look Ahead" test for A2 volts less than 12% of battery volts.	This status code will be displayed when the voltage at A2 is less than 12% of battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor will open.</p> <p><b><u>POSSIBLE CAUSE</u></b> Check for short circuit from the motor armature to the frame of the vehicle.</p> <p>Check for welded 1A contactor (if used)</p> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-47</b>	Motor armature is open.	This status code will be displayed when the on-time is >13%, and the current in the motor armature is >-26 amps and <26 amps for four seconds.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate. The status code is cleared when the armature current goes above 26 amps, or the control goes through neutral, or the percent on-tim goes below 17%. The code is only stored once in every twenty hours of occurrence.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control or connection.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> <li>• Open motor armature.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-49</b>	Motor field current is too low during the neutral or run modes. The key must be cycled off and on to clear the code.	This status code will be displayed when the current draw in the motor field is too low during the neutral or run modes.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate. The key switch must be turned off and on to clear the status code.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control or connection.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> <li>• Open motor field winding.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-51</b>	Capacitor volts are low before the line contactor closes.	This status code will be displayed during "key on" when the capacitor volts is less than 85% of battery volts at initial key switch on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor does not close when capacitor does not pre-charge.</p> <p><b><u>POSSIBLE CAUSE</u></b> • Welded 1A contactor (if used)</p> <p>Wiring error</p> <ul style="list-style-type: none"> <li>• Insure that there is no device connected to load side of line contactor.</li> </ul> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-57</b>	Controller "motor current sensor" input too low during running.	This status code will be displayed when the voltage input from the current sensor is too low during running.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Line contactor power tips did not close.</p> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-64</b>	The line driver input (P2-17) is less than 12% of battery volts	This status code will be displayed when the control detects that the line driver input (P2-17) is less than 12% battery volts when the key switch is turned on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Traction Controller	<p><b>SYMPTOM</b> Control will not operate.</p> <p><b>POSSIBLE CAUSE</b> -Open wire connection to Pin 17 - Shorted line Driver transistor</p> <p>Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-65</b>	The line coil current is too high during the run mode	This status code will be displayed when the current limit in the line coil is exceeded during the run mode. The line contactor will drop out and the key switch will have to be recycled to reset the control.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>- Shorted line contactor coil</li> <li>- Short between wires connected to line coil</li> </ul> <p>If line coil resistance is correct: Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-66</b>	The field current exceeds the current limit of the field transistor.	This status code will be displayed when the field transistor exceeds its specific current limit. The line contactor will drop out and the key switch will have to be recycled to restart the control.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate</p> <ul style="list-style-type: none"> <li>• Line contactor opens</li> </ul> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>• Shorted field F1 to F2</li> <li>• F1 or F2 terminals shorted to battery positive (B+)</li> <li>• F1 or F2 terminals shorted to battery negative (B-)</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-67</b>	The armature current exceeds the armature transistor limit.	This status code will be displayed when the armature transistor exceeds its specific current limit. The control is reset by recycling the key switch.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>Shorted motor armature A1 to A2</li> <li>Power cables may be shorted to each other (Measure at control terminals)</li> <li>A1 to A2 terminals may be shorted to battery positive or negative</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-69</b>	The power steering coil current is too high during the run mode.	This status code will be displayed when the current in the power steering driver circuit exceeds current limit during the run mode. The control is reset by recycling the key switch.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>Shorted power steering control coil</li> <li>Short between wires connecting to the power steering coil</li> </ul> <p>If the power steering coil resistance is correct then:</p> <ul style="list-style-type: none"> <li>Defective control. Replace control unit</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION								
<b>-76</b>	Capacitor (1C) voltage too high.	This status code will be displayed when the voltage on the capacitor goes above limit voltage* during the regenerative braking cycle.								
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>								
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Line contactor opens and closes, then opens and can only close by opening and closing the key switch.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>• Unplugging the battery connector during regenerative braking.</li> <li>• Line contactor bouncing open during regen.</li> <li>• Main power fuse opening during regen.</li> <li>• Intermittent battery plug connection.</li> </ul> <p>* Limit Voltage:</p> <table border="1"> <thead> <tr> <th>Limit</th> <th>Batt.</th> </tr> </thead> <tbody> <tr> <td>50V</td> <td>36V</td> </tr> <tr> <td>70V</td> <td>48V</td> </tr> <tr> <td>96V</td> <td>72/80V</td> </tr> </tbody> </table>	Limit	Batt.	50V	36V	70V	48V	96V	72/80V	
Limit	Batt.									
50V	36V									
70V	48V									
96V	72/80V									

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-77</b>	Motor current is detected during regenerative braking.	This status code will be displayed when motoring current is detected during the regenerative braking cycle.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Truck will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit</li> </ul>	

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-82</b>	If the armature motor current is greater than a preset value for longer than 3.5 sec the armature motoring current will be turned off.	This status code will be displayed when the armature motor current exceeds a preset value for 3.5 sec and the accelerator pedal is calling for maximum performance.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> The Control will not operate, and can only be reset by cycling the key switch.</p> <p><b><u>POSSIBLE CAUSE:</u></b></p> <ul style="list-style-type: none"> <li>Continued operation of vehicle in high motor current condition</li> <li>Operating control at stall motor current for more than 3.5 seconds.</li> <li>Function 16 is incorrectly adjusted for control % on time.                             <ul style="list-style-type: none"> <li>- Adjust function per OEM instructions</li> </ul> </li> </ul>	<p><b><i>THE PRESENCE OF THIS STATUS CODE IS NOT NECESSARILY INDICATIVE OF A CONTROL ISSUE. IF FUNCTION 16 IS NOT MIS-ADJUSTED, THE STATUS CODE INDICATES AN APPLICATION ISSUE WHERE A MOTOR IS BEING STALLED, ETC. DISPLAY OF THIS STATUS CODE SHOULD NOT TRIGGER THE RETURN OF A CONTROL FOR REPAIR OR REPLACEMENT.</i></b></p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-83</b>	A switch position is incorrect during the accelerator potentiometer auto calibration routine.	This status code will be displayed when the seat switch is open, or the any of the forward, reverse or start switches are closed at the beginning of the accelerator potentiometer auto calibration routine.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> The auto calibration routine outlined in Section 8 of this manual will not start.</p> <p><b><u>POSSIBLE CAUSE:</u></b></p> <ul style="list-style-type: none"> <li>Seat switch is open                             <ul style="list-style-type: none"> <li>Confirm switch wiring, or replace switch, if required.</li> </ul> </li> <li>Any of the forward, reverse or start switches are closed                             <ul style="list-style-type: none"> <li>Confirm switch wiring, or replace switch, if required.</li> </ul> </li> </ul>	<p>The diagram shows a power circuit starting from a battery through fuse FU1. It branches into two main paths. One path goes through fuse FU5 to a terminal block with terminals P1, P17, P2, and P6. From P1, it goes to a KEY SWITCH. From P17, it goes to a SEAT SW. From P2, it goes to a START SW. From P6, it goes to a FORWARD SW. Another path from the battery goes through fuse FU3 to a terminal block with terminals P3, P4, and P5. From P3, it goes to a REVERSE SW. From P4, it goes to an ACC POT. From P5, it goes to an ARMATURE. The ARMATURE is connected to terminals POS (A1) and NEG (A2) on a power connection block. The FIELD windings (F1 and F2) are also connected to this block.</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-85</b>	Motor armature current is too high, and the control trip time is less than 1 millisecond. The key must be cycled off and on to reset the control.	This status code will be displayed when the motor armature current is >1600 amps in 1A mode, or >1325 amps in control run mode.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Control will not operate. The key switch must be cycled off and on to clear the status code.</p> <p><b><u>POSSIBLE CAUSE</u></b> Defective control.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul> <p>Shorted motor armature.</p> <ul style="list-style-type: none"> <li>• Verify that no shorts are present in the motor armature.</li> </ul>	<b>NO GRAPHIC FOR THIS STATUS CODE</b>


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-86</b>	Accelerator pot values obtained during the auto calibration routine were not valid.	Refer to Section 8 of this manual for possible causes of this status code.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Accelerator potentiometer auto calibration routine was not successfully completed.</p> <p><b><u>POSSIBLE CAUSE:</u></b></p> <ul style="list-style-type: none"> <li>▪ Misadjusted or defective accelerator potentiometer assembly</li> <li>▪ Verify the accelerator assembly</li> <li>▪ Open circuit on the accelerator pedal</li> </ul>	<p>The diagram illustrates the electrical circuit for the accelerator potentiometer and its connection to the traction controller. It shows a power source (LINE) connected through fuse FU1 to the traction controller's POS terminal. The controller's NEG terminal is connected to ground. The controller's A1 and F1 terminals are connected to the SEAT SW. and START SW. respectively. The controller's A2 and F2 terminals are connected to the ARMATURE. The ACC POT is connected to the controller's P8, P7, P4, and P5 terminals. The KEY SWITCH is connected through fuse FU3 to the controller's P1 and P17 terminals. The FORWARD SW. and REVERSE SW. are connected to the controller's P2 and P6 terminals. A fuse FU5 is also shown in the circuit.</p>


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-89</b>	Hydraulic lever is activated before the pump is enabled.	This status code will be displayed when the voltage at P14 is greater than 3 volts at pump enable (10ms).
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b>                      The truck will not run or the pump will not operate.</p> <p><b><u>POSSIBLE CAUSE:</u></b></p> <ul style="list-style-type: none"> <li>▪ Shorted or welded hydraulic switch</li> <li>▪ Verify connections to hydraulic switches</li> <li>▪ Verify mechanical operation of hydraulic switches</li> </ul>	

**Section 5.4 TMM Codes**

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-90</b>	Traction motor temperature has exceeded maximum temperature limit.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at zero volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Motor Temperature	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by switch closure to battery negative.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	<b>NO GRAPHIC FOR THIS STATUS CODE</b>


TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-91</b>	Pump motor temperature has exceeded maximum temperature limit.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at zero volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Motor Temperature	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by switch closure to battery negative.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	<b>NO GRAPHIC FOR THIS STATUS CODE</b>

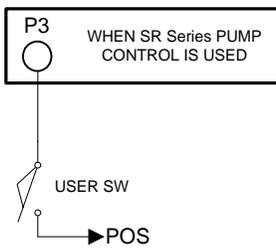
TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-93</b>	Steering pump motor brush wear indicator has detected worn brush.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Steer Pump Motor Brush Wear Indicator	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by motor brush sensor closure to battery positive.</p> <p>Plug P3 (pump) is shorted to positive.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	 <p style="text-align: right;">SC93</p>

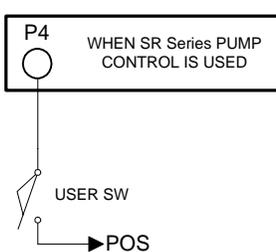TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-93</b>	Steering pump motor brush wear indicator has detected worn brush.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Steering Pump Motor Brush Wear Indicator	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by motor brush sensor closure to battery positive.</p> <p>Plug P4 (pump) is shorted to positive.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	 <p style="text-align: right;">SC93A</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-94</b>	Traction motor brush wear indicator has detected worn brush.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Motor Brush Wear Indicator	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by motor brush sensor closure to battery positive.</p> <p>Plug P5 (pump) is shorted to positive.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	<p style="text-align: right;">SC94</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-94</b>	Traction motor brush wear indicator had detected worn brush.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at zero volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Motor Brush Wear	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by motor brush sensor closure to battery positive.</p> <p>Plug P6 (pump) is shorted to positive.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	<p style="text-align: right;">SC94A</p>

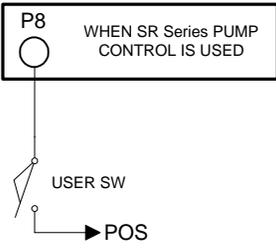TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-95</b>	Pump motor brush wear indicator has detected worn brush.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Motor Brush Wear Indicator	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by motor brush sensor closure to battery positive.</p> <p>Plug P8 (pump) is shorted to positive.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	 <p style="text-align: right;">SC95</p>

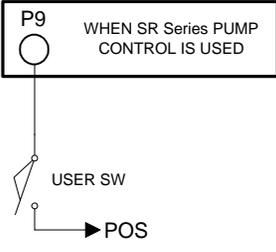TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-95</b>	Pump motor brush wear indicator has detected worn brush.	This status code will be displayed when the voltage at the respective terminal of the TMM or Pump Logic Card is at battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Motor Brush Wear Indicator	<p><b><u>SYMPTOM</u></b> Status code flashes "on and off".</p> <p><b><u>POSSIBLE CAUSE</u></b> User defined status code is displayed by motor brush sensor closure to battery positive.</p> <p>Plug P9 (pump) is shorted to positive.</p> <p>Defective input switch (shorted).</p> <p>Defective TMM card.</p> <p>Defective pump card.</p>	 <p style="text-align: right;">SC95A</p>

TRACTION STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-99</b>	Maintenance alert and speed limit.	This status code will be displayed when the "normal" hour meter exceeds the "maintenance alert hours" setting for the vehicle.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Traction Controller	<p><b><u>SYMPTOM</u></b> Status code is displayed for 4 seconds when the key switch is first turned on, and/or the vehicle may run at a reduced speed.</p> <p><b><u>CUSTOMER SELECTED SETTING WITH THE HANDSET:</u></b> User defined status code is displayed when the normal hour meter reading exceeds the programmed "maintenance alert hours" setting selected by the user</p> <ul style="list-style-type: none"> <li>• Maintenance Code Hour Meter, Functions 19 and 20, are programmed with the Handset and command the display of status code -99.</li> <li>• If desired, Maintenance Code Speed Limit, Function 13, can be programmed with the Handset.</li> </ul> <p>User should perform the desired maintenance function. Re-set maintenance alert hour meter after maintenance is performed.</p>	<p><b><u>NO DIAGRAM</u></b></p> <p><b>USER SHOULD PERFORM THE DESIRED MAINTENANCE FUNCTION</b></p>

**Section 4.6 Pump Control Codes**

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-117</b>	"Card Type" selection is invalid.	This status code will be displayed when the card type selection value is set to an invalid number.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Invalid card type selection.</p> <ul style="list-style-type: none"> <li>Review function 17 in the Handset Instruction sheets. Adjust and set card type value as instructed by OEM service manual.</li> </ul>	<p><b>NO GRAPHIC FOR THIS STATUS CODE</b></p>

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-127</b>	Control logic card power supply is less than 10 VDC.	This status code is displayed when the logic card power supply is less than 10 volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <p>Discharged Battery</p> <ul style="list-style-type: none"> <li>Check battery to insure proper state of charge.</li> </ul> <p>Loose connection at P1.</p> <ul style="list-style-type: none"> <li>Insure that the wire connection at P1 is tight.</li> </ul> <p>Defective logic card</p> <ul style="list-style-type: none"> <li>Replace control.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-128</b>	Armature current is too high during the lift mode.	Status code displayed when the current in the armature circuit is sustained above 400A for 70 sec.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b> Continued operation of vehicle in high motor current condition.</p> <ul style="list-style-type: none"> <li>Operate vehicle at lower motor current condition for 70 seconds.</li> </ul>	<p><b>NO GRAPHIC FOR THIS STATUS CODE</b></p>

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-141</b>	Shorted thermal protector (TP1) or transistor is over temperature.	This status code is displayed when the voltage at the thermal protector is less than 3.8 volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Reduced or no power to pump motor in control range.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is in thermal cut-back.</p> <ul style="list-style-type: none"> <li>Allow control to cool, status code should disappear.</li> </ul>	<p>The diagram shows a control plug PL2 with 21 pins. Pins 1-11 are labeled as STATUS CODE 93-91 INPUT. Pin 12 is labeled SK-2. Pin 13 is BRUSH WEAR OUTPUT. Pin 14 is OVER TEMP OUTPUT. Pin 2 is connected to a fuse (FLU2) and a terminal P. Pin 7 is connected to TO TRACTION PL2-10. Pin 10 is connected to ACCEL POT INPUT. Pin 12 is connected to LINE CONTACTOR DRIVER. Pin 17 is connected to 1A CONTACTOR DRIVER. Pin 19 is connected to SPEED 4. Pin 20 is connected to SPEED 3. Pin 21 is connected to SPEED 2. Pin 21 is also connected to SPEED 1. The pump control power connection has terminals P, A1, A2, and N. The motor has terminals A1, A2, and N. The armature is connected to A1 and A2. The field is connected to A2 and N.</p>

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-142</b>	Pump Controller “motor current sensor” input is missing.	This status code is displayed when the voltage at the current sensor is greater than 1.6 volts with no current flowing in the motor circuit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TRUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> No power to pump motor in control range.</p> <p><b>POSSIBLE CAUSE</b> Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-143</b>	Pump Controller “motor current sensor” input is too low.	This status code is displayed when the voltage at the current sensor is less than 0.6 volts with no current flowing in the motor circuit.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TRUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> No power to pump motor in control range.</p> <p><b>POSSIBLE CAUSE</b> Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-144</b>	Power Transistor (Q1) did not turn off properly.	This status code is displayed when, during pump control operation, the transistor fails to turn off.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> Control may run continuously.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-145</b>	Power Transistor (Q1) did not turn on properly.	This status code is displayed when during pump control operation, the transistor fails to turn on.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b> The control may run continuously.</p> <p><b><u>POSSIBLE CAUSE</u></b> Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-146</b>	"Look Ahead" test for T2 volts less than 12% of battery volts.	This status code will be displayed when the voltage at T2 is less than 12% of battery volts.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Pump control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Check for short circuit from the motor armature to the frame of the vehicle.</p> <p>Control is defective.</p> <ul style="list-style-type: none"> <li>• Replace controller unit.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-150</b>	Capacitor volts are low after the line contactor closes.	This status code will be displayed when the capacitor voltage is less than 85% of the battery voltage in the run mode.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Pump control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Defective line contactor.</p> <ul style="list-style-type: none"> <li>• Check for open line contactor power tips.</li> </ul> <p>Check for loose or open connections in cables from battery positive to control positive circuit.</p> <p>Defective power fuse.</p> <ul style="list-style-type: none"> <li>• Check power fuse for open circuit.</li> </ul> <p>No battery voltage at P1.</p> <ul style="list-style-type: none"> <li>• Check for battery voltage at POS and P1.</li> <li>• Check for loose connection at P1.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-151</b>	Capacitor volts are low before the line contactor closes. (Internal card function during pre-charge)	This status code will be displayed during "key on" when the capacitor volts is less than 85% of battery volts at initial key switch on.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Pump control will not operate.</p> <p><b>POSSIBLE CAUSE</b> .Defective control. • Replace controller unit.</p> <p><i>Note: Repeated "charging/discharging" the capacitors during troubleshooting will cause status code 51. Also "do not" connect <b>any</b> loads to the load side of the line contactor.</i></p>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-157</b>	Controller "motor current sensor" input voltage polarity check.	This status code will be displayed when the voltage input to motor current sensor is of the wrong polarity.
MEMORY RECALL <b>YES</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Pump control will not operate.</p> <p><b>POSSIBLE CAUSE</b> Control is defective. • Replace controller unit.</p>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-180</b>	Voltage at capacitor (1C) is less than 14 volts.	This status code will be displayed when the voltage at P1 is less than 14 volts. This occurs typically in the run mode of operation.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Pump control will not operate.</p> <p><b>POSSIBLE CAUSE</b> (Line contactor controlled by traction control). Line Contactor opened up during run.</p> <ul style="list-style-type: none"> <li>• Check connection from P17 to Line coil (-) for loose connection.</li> <li>• Check connection from battery (+) to Line coil (+) for loose connection.</li> <li>• Check power connection from battery (+) to contactor L.</li> <li>• Check for blown power fuse at pump control.</li> <li>• Check for dirty contactor tips.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-181</b>	Battery voltage is less than 14 volts.	This status code will be displayed when the battery voltage measured at P1 is less than 14 volts.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b>TROUBLE-SHOOTING DIAGRAM</b>
Circuits valid for Pump Controller	<p><b>SYMPTOM</b> Pump control will not operate.</p> <p><b>POSSIBLE CAUSE</b></p> <ul style="list-style-type: none"> <li>• Check connection from control fuse to pump P1 for loose connections.</li> <li>• Check for low battery volts under load.</li> </ul>	

PUMP STATUS CODE	DESCRIPTION OF STATUS	CAUSE OF STATUS INDICATION
<b>-189</b>	Input switch closed before pump enable signal is received.	This status code will be displayed when pin 12, 19, 20 or 21 is pulled to negative before pin 10 is greater than 5.0 volts.
MEMORY RECALL <b>NO</b>	<b>CORRECTIVE ACTIONS</b>	<b><u>TROUBLE-SHOOTING DIAGRAM</u></b>
Circuits valid for Pump Controller	<p><b><u>SYMPTOM</u></b>                      Pump control will not operate.</p> <p><b><u>POSSIBLE CAUSE</u></b></p> <ul style="list-style-type: none"> <li>• Hydraulic handle pulled before pump enable signal given.</li> <li>• Shorted hydraulic switch</li> <li>• Defective control.</li> </ul>	

**Section 5. TRUCK MANAGEMENT MODULE (TMM)**

**Section 5.1 General Features**

The Truck Management Module is a multi-functional accessory card (IC3645TMM7A), or an integral function of the SR Pump control when used with the SX Family of Traction controls. The Module provides the OEM with the ability to initiate status codes or operator warning codes to be displayed on the Dash Display whenever a normally open switch or sensor wire provides a signal to the Module.

The TMM Module can be used to display a separate status code indicating an over temperature of traction motors, hydraulic motors, or any other device or system that can activate a switch that closes.

It can also be used as a Brush Wear Indicator (BWI). The Brush Wear Indicator is designed to detect a "worn-out brush" and display a fault code on the Dash Display to warn maintenance personnel that the motor brushes need to be replaced before they wear to the point of causing destructive damage to the motor commutator surface. The BWI function is compatible with any sensor that short circuits to the motor armature to signal limits of brush wear.

**Note: Motor armature must be in the positive side of the battery circuit.**

**Section 5.2 Operation**

The Module utilizes 9 OEM input points and 3 output points that connect to the "Y" plug on the traction logic card. **Due to the low level signal value of this output, shielded wire should always be used to insure proper operation.** The input to the Module is either a switch or sensor wire closure to battery negative or positive. The following table outlines the status code displayed for each input, when that point is closed to battery negative or positive, as indicated.

<b>TMM7A Card Terminal</b>	<b>Pump Control Terminal</b>	<b>Status Code</b>	<b>Connect To</b>
TB1	P16	90 *	Neg
TB3	P11	91	Neg
TB4	P15	92	Neg
TB5	P3	93 *	Pos
TB6	P4	93 *	Pos
TB8	P5	94	Pos
TB10	P6	94	Pos
TB11	P8	95	Pos
TB12	P9	95	Pos

\* Status codes 90 and 93 can also be programmed with the Handset to reduce the speed of the truck from 100 to 0 percent-on-time.

**IMPORTANT NOTE:** Status Codes 93, 94 and 95 are only checked when a neutral signal is present (i.e., open start switch or open F/R switch). The status code is displayed and the speed limit enabled when the control is returned to the run mode. Do not use status code 93 speed limit for applications requiring immediate speed limit on switch closure.

Typical wiring diagrams and outline drawings for the TMM7A accessory card and SR family of Pump TMM functions are shown in Sections 5.4 and 5.5.


**Section 5.3 Installation**

**WARNING:** Before any adjustments, servicing or act requiring physical contact with working components, jack drive wheels off the floor, disconnect the battery and discharge the capacitors in the traction and pump controls, as explained in Section 4.4.


The TMM7A accessory card should be mounted to a flat surface (in any plane) in an area protected from water, oil and battery acid. Mounting dimensions are shown in Section 5.5. Two (0.187 inch, 4.75mm) mounting holes are provided.

**Section 5.4 Connection Diagrams**


**Section 5.4.1 TMM7A Card Connections**

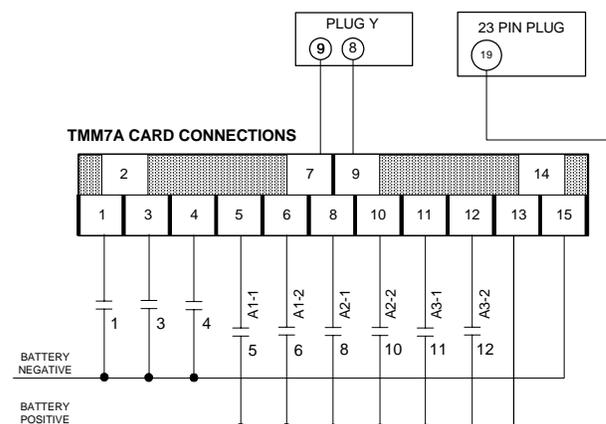


**Section 5.4.2 Typical Brush Wear Sensor Connections**

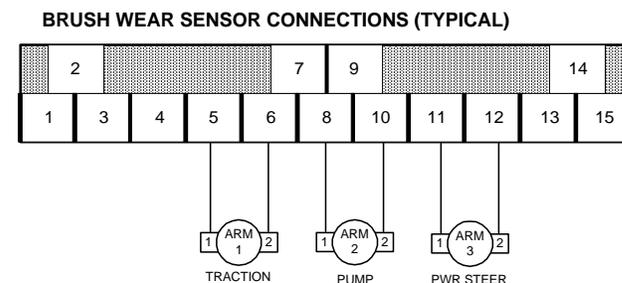


**Section 5.4.3 TMM Pump Control Connections**

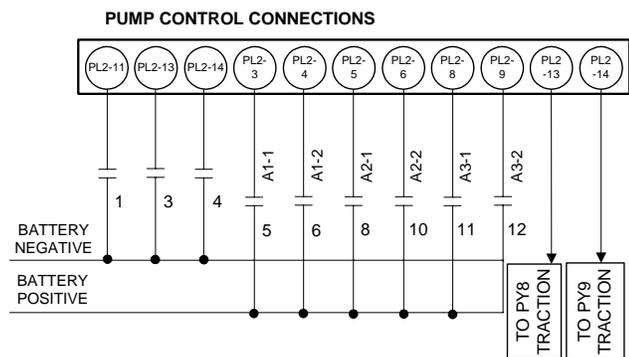

**Section 5.4.4 Typical Brush Wear Sensor Connections For Pump Control**

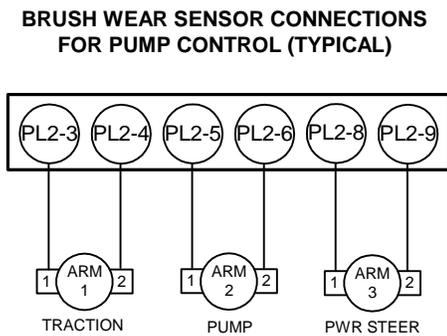

**Section 5.5 TMM7A Outline Drawings**

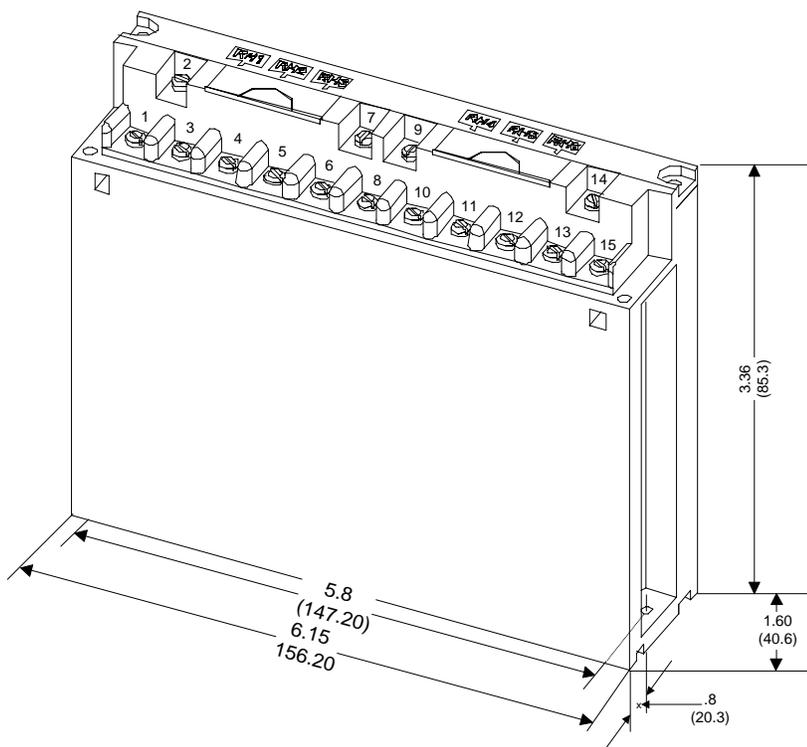

## Section 6. SX FAMILY GE HANDSET INSTRUCTIONS

### Section 6.1 General Features

The GE Handset is a multi-functional tool to be used with the LX, ZX, and SX Series GE solid-state controls. The Handset consists of a Light Emitting Diode (LED) display and a keyboard for data entry.

**Note: The Handset is the same for all GE controls, however, the cable will change between some control types.**


### Section 6.2 Purpose / Setup Functions

The purpose of the Handset is to allow authorized personnel to perform the following functions of the SX family of Controls:

- Monitor existing system fault codes
- Monitor intermittent random fault codes
- Monitor battery state of charge on systems with BDI
- Monitor hourmeter reading
- Monitor or adjust the following control functions:
  - ◆ Creep speed
  - ◆ Armature Controlled Acceleration and 1A Time
  - ◆ Regenerative Braking Current Limit
  - ◆ Armature and Field Current Limit
  - ◆ Speed Limit Points
  - ◆ Truck Management Fault Speed Limit
  - ◆ Internal Resistance Compensation for Battery State of Charge Indication
  - ◆ Battery Voltage ( 36/48 volts is auto ranging )
  - ◆ Selection of Card Operation Type.

**Warning: Before connecting or disconnecting the Handset tool, turn off the key switch, unplug the battery and jack up the drive wheels of the vehicle.**

At the transistor control traction card, unplug the "Y plug" if the dash display is in use, and plug in the Handset to the plug location "Y" on the control card. After installing the Handset tool, plug the battery in and turn the key switch on. The following is the start-up display sequence that will occur:

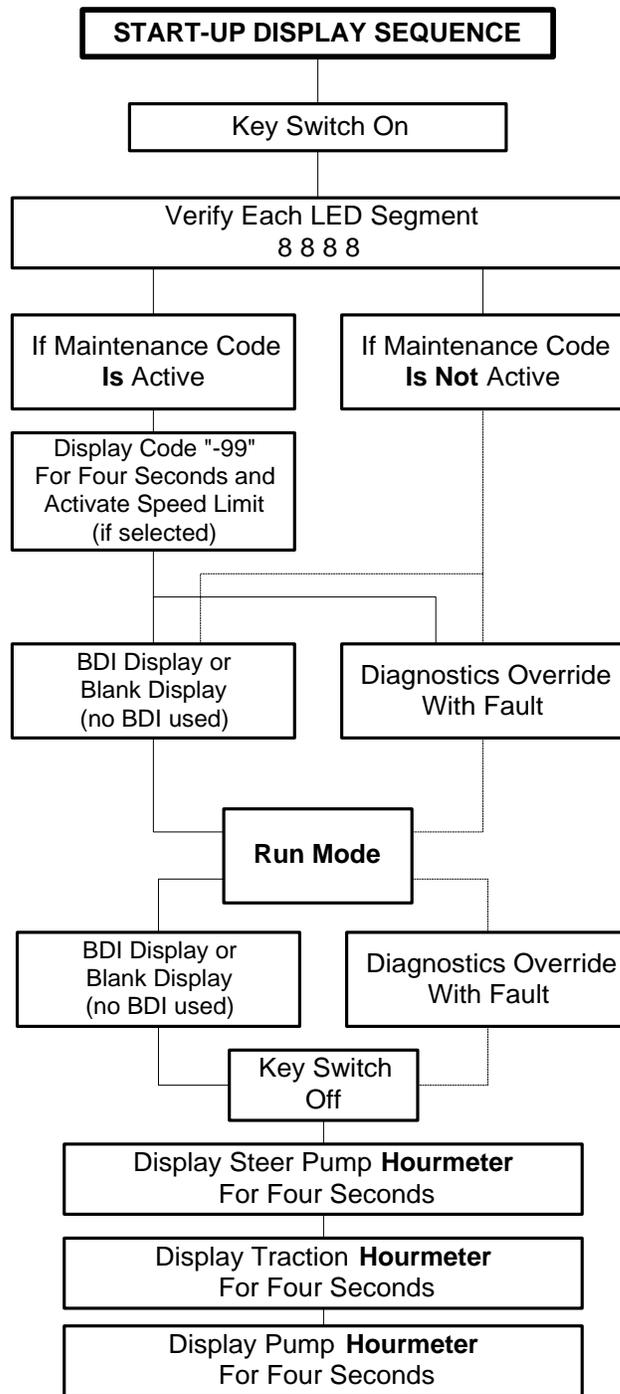

**NOTE: The vehicle can be operated with the Handset connected, however, the adjustment knob must be set fully clockwise to insure the control operates at top speed.**

**Warning: Before making any adjustments to the control, you must consult the operating and maintenance instructions supplied by the vehicle manufacturer. Failure to follow proper set up instructions could result in mis-operation or damage to the control system.**

**Section 6.3 Set-up Function Procedures**

With the Handset connected, hold down the **CONT** key and turn on the key switch. This will place you in the set-up mode, ready to monitor or adjust control function settings.

**NOTE:** The term "Push" means to depress key for approximately one second.

**Section 6.3.1 Setup Mode**

<b>SET-UP MODE</b>		
ACTION	DISPLAY SHOWS	REMARKS
Hold Down CONT And Turn On Key	<b>8 8 8 8</b>	Segment Check Displayed
Push Function Number	<b>U 0 0 5</b>	Selected Function No. Is Displayed
After One Second Time Delay	<b>0 8 5</b>	Stored Value For The Function Is Displayed
Push CONT	<b>0 8 5</b>	Display Value Will Blink
Change Value With Adjustment Knob	<b>1 2 5</b>	Value Changes While Blinking
Push STORE	<b>1 2 5</b>	New Value Stored And Blinking Stops
Push ESC	<b>8 8 8 8</b>	Segment Check Displayed

At this point, another function can be monitored/changed by pushing another function number, or the vehicle can be placed in the run mode by holding the **ESC** key down for one second or longer. The display will return to either the diagnostics mode, the BDI display, or a blank display (if BDI is not used and there are no fault codes). The vehicle can now be operated with the Handset connected, or the Handset can be disconnected before operation.


**NOTE:** You can return to the segment check mode at any time, by holding down the **ESC** key until **8888** appears in the display.

**Section 6.3.2 Status Code Scrolling**


The SX family of controllers furnishes a function register that contains the last 16 "stored status codes" that shut down vehicle operation (a PMT type fault that is reset by

cycling the key switch) and the battery state of charge reading at the time the fault occurred. The first of the 16 status codes will be overwritten each time a new status code occurs. This stored status code register can be cleared from memory by using the Handset.


**ACCESSING STORED STATUS CODES WITH GE HANDSET**

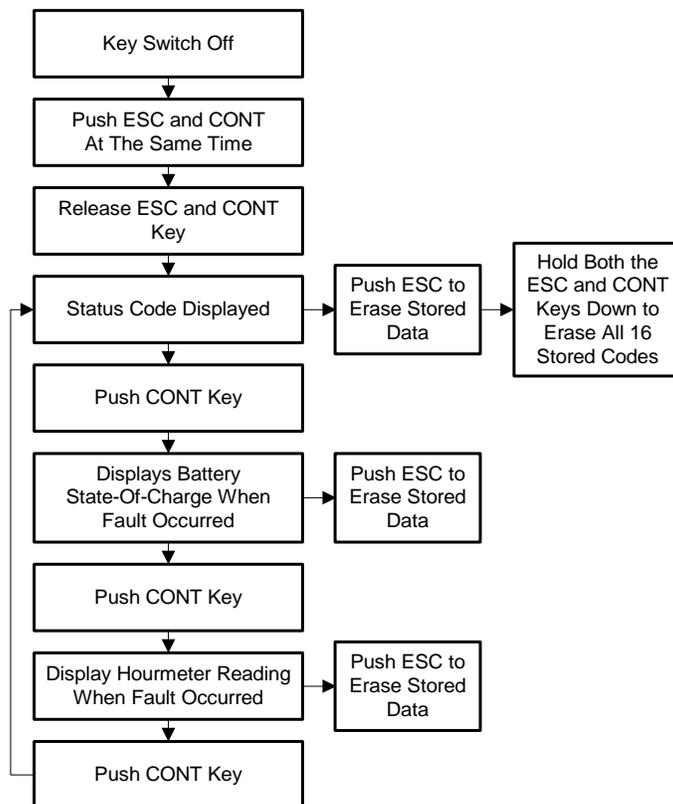

**Section 6.3.3 SX Family Handset, Plug Connections and Outline Drawing**

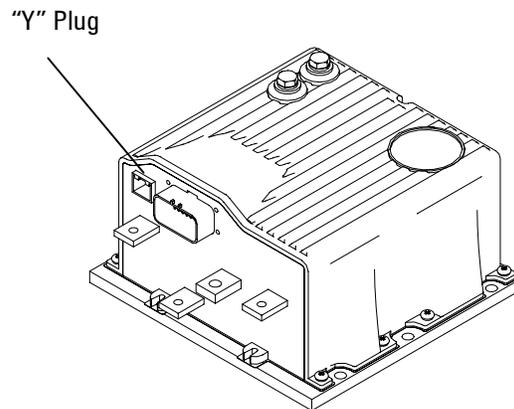

**Handset Cable Part Number - 328B1002G1**

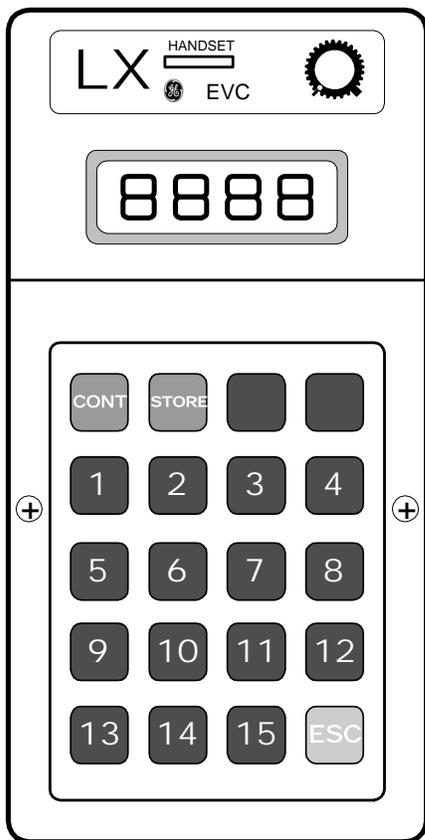

**Section 6.4 Setup Functions for Traction Controller**

**FUNCTION 1 ADJUSTABLE MOTOR EMF FOR PLUGGING OR REGEN (Push 1)**

This function allows for the adjustment of the level of motor EMF required for plugging or regenerative braking. The control will default to standard regen functionality if the setting is higher than a value of 60.

Range	0 to 95.6 volts
Set	0 to 255
Resolution	0.375 volts per set unit
Example:	Setting of 20 = 7.5 volts

**FUNCTION 2 CREEP SPEED ( Push 2 )**

This function allows for the adjustment of the creep speed of the vehicle. Creep speed can add 13 % to the percent on time at the slowest speed range.

Range	2% to 15% on time
Set	0 to 255
Resolution	0.05% per set unit
Example:	Setting of 20 = 3% on time

**FUNCTION 3 ARMATURE CONTROLLED ACCELERATION (Push 3)**

This function allows for the adjustment of the rate of time it takes for the control to accelerate to 100% applied battery voltage to the motor on hard acceleration.

Range	0.025 to 6.3 seconds
Set	0 to 255
Resolution	0.025 seconds per set unit
Example:	Setting of 20 = 0.5 seconds

**FUNCTION 4 ARMATURE CURRENT LIMIT (Push 4)**

This function should always remain set at 255 (maximum current limit) for this family of controls.

**FUNCTION 5 COUNTER EMF TRIP POINT FOR AUTO BRAKING (Push 5)**

This function allows for the adjustment of the speed at which the truck will activate auto braking, after the accelerator pedal is released. The truck speed correlates to the amount of voltage produced by the traction motor when it is coasting. The setting of this function represents the motor voltage.

Range	0 to 100 volts
Set	0 to 255
Resolution	0.392 volts per set unit
Example:	Setting of 20 = 7.84 volts

**FUNCTION 6 AUTO CALIBRATION OF ACCELERATOR POTENTIOMETER (Push 6)**

This function allows for the auto calibration of the accelerator potentiometer. This function should be left set to a value of zero during normal truck operation. To activate the auto calibration routine, set this function to a value between 15 and 20, and refer to Section 8.0 of this handbook for detailed instructions covering the auto calibration procedure.

**FUNCTION 7 MIN FIELD CURRENT ( Push 7 )**

This function allows the adjustment of the field weakening level in order to set the top speed of the motor.

Rating	Min	Max	Set	Resolution Per unit value	Example If set at 71
36/48V	0	20	51 to 115	0.314 amps	6.28A
72/80V	0	17	51 to 114	0.269 amps	5.38A
1000A	0	20	51 to 90	0.507 amps	10.14A

$$\text{MIN } I_F = (\text{VAL}-51) \times 0.314 \text{ ( at 36/48 VOLTS)}$$

$$\text{MIN } I_F = (\text{VAL}-51) \times 0.269 \text{ ( at 72/80 VOLTS)}$$

$$\text{MIN } I_F = (\text{VAL}- 51) \times 0.507 \text{ (at 1000 AMPS)}$$

**Important Note: This function is used to optimize motor and control performance, and this setting will be determined by GE and OEM engineers at the time of vehicle development. This setting must not be changed by field personnel without the permission of the OEM.**

**FUNCTION 8 MAX FIELD CURRENT  
( Push 8 )**

This function allows for the adjustment of the maximum field current in order to obtain the maximum torque of the motor. This function should always be set to 255.

**FUNCTION 9 REGEN BRAKING CURRENT LIMIT  
(Push 9)**

This function allows for the adjustment of the maximum current seen by the motor during regenerative braking; the higher the current, the shorter the stopping distance.

Volts	Min	Max	Set	Resolution Per unit value	Example If set at 100
36/48	182A	591A	0 to 255	1.625	344 amps
72/80	52A	409A	32 to 255	1.625	162 amps

$$\text{REGEN BRAKE } I_A = (\text{VAL} \times 1.625) + 182 \text{ at 36/48 volts}$$

$$\text{REGEN BRAKE } I_A = (\text{VAL} \times 1.625) \text{ at 72/80 volts}$$

**FUNCTION 10 MAX FIELD CURRENT DURING REGEN  
( Push 10 )**

This function allows for the adjustment of the maximum field current attainable during the regenerative braking mode.

Rating	Min	Max	Set	Resolution Per unit value	Example If set at 220
36/48V	0	64	51 to 255	0.314	53 amps
72/80	0	55	51 to 255	0.269	45 amps
1000A	0	103	51 to 255	0.507	85 amps

$$I_F = (\text{VAL}-51) \times 0.314 \text{ (at 36/48 volts)}$$

$$I_F = (\text{VAL}-51) \times 0.269 \text{ (at 72/80 volts)}$$

$$I_F = (\text{VAL}-51) \times 0.507 \text{ (at 1000 amps)}$$

**Important Note: This function is used to optimize motor and control performance and this setting will be determined by GE and OEM engineers at the time of vehicle development. This setting must not be changed by field personnel without the permission of the OEM.**

**FUNCTION 11 BRAKE SWITCH CURRENT LIMIT  
( Push 11)**

This function allows for the adjustment of the maximum motor armature current when the voltage at Pin 12 is less than 50% of battery voltage. *The 1A contactor will not close, if the brake switch current is active.*

Range	160 amps to 575 amps
Set	0 to 255
Resolution	160 amps + (VALUE x 1.63 amps)
Example	Setting of 100 = 323 amps

**FUNCTION 12 TOP SPEED LIMIT  
( Push 12 )**

This function allows for the adjustment of the motor speed limit (maximum battery volts to the motor). *This speed limit is the same as function 11, however it is always active.*

Range	100% to 0% battery volts
Set	46 to 180
Resolution	0.75% per set unit
Example	Setting of 80 = 75% of battery volts

$$\text{SPEED LIMIT} = 100\% - ((\text{VAL}-46) \times 0.75\%)$$

**FUNCTION 13 MAINTENANCE AND TRUCK  
MANAGEMENT SPEED LIMIT  
( Push 13 )**

This function is the same as function 11, however it is active based on maintenance hours, or traction motor overheating or on low BDI value.

Range	100% to 0% battery volts
Set	46 to 180
Resolution	0.75% per set unit
Example	Setting of 80 = 75% of battery volts

$$\text{SPEED LIMIT} = 100\% - ((\text{VAL}-46) \times 0.75\%)$$

**FUNCTION 14 INTERNAL RESISTANCE  
COMPENSATION  
( Push 14 )**

This function is used when the Battery Discharge Indicator is present. Adjustment of this function will improve the

accuracy of the BDI. In order to determine this setting the voltage drop of the battery under load must first be calculated by the following method. This function can be changed by the dash display mode selection button.

1. On a fully charged battery, record the open circuit voltage ( $V_0$ ) by measuring the voltage at the control positive and negative power terminals.
2. Load the traction motor to 100 amps in 1A and record the voltage ( $V_L$ ) at the control positive and negative power terminal.
3. Calculate voltage drop ( $V_{Drop}$ ) as follows:  
$$V_{Drop} = V_0 - V_L$$
4. Use the table below to determine the appropriate setting using the calculated  $V_{Drop}$  as a reference.

**INTERNAL RESISTANCE COMPENSATION TABLE**

Setting	$V_{Drop}$	Setting	$V_{Drop}$
2	11.44	17	01.34
3	07.60	18	01.27
4	05.72	19	01.20
5	04.57	20	01.14
6	03.81	21	01.09
7	03.27	22	01.04
8	02.86	23	00.99
9	02.54	24	00.95
10	02.28	25	00.91
11	02.08	26	00.88
12	01.90	27	00.85
13	01.76	28	00.82
14	01.63	29	00.79
15	01.52	30	00.76
16	01.43	31	00.74

**FUNCTION 15 BATTERY VOLTS (Push I5)**

This function allows for the adjustment of voltage range for controls equipped with the Battery Discharge Indication function. In order for the BDI to operate properly, the setting as shown in the table must be entered:

Battery volts	Set units
36 volts	Between 32 and 44
48 volts	Between 45 and 69
72 volts	Between 70 and 80
80 volts	Between 81 and 183
36/48 volts	Between 184 and 250
No BDI	Between 251 and 255

**The following functions have function numbers larger than the numbers on the Handset keyboard. To access these functions. Push the CONT key and the number shown in the following instructions at the same time. THE SEAT SWITCH MUST BE OPEN.**

**FUNCTION 16 STALL PROTECTION % ON-TIME TRIP POINT ( Push CONT 1)**

This function allows for the adjustment of the stall motor protection, as well as the display and storing of an 82 fault code. This function adjusts the percent on time at which the fault occurs when the accelerator is calling for greater than 50% speed and the armature current is above 500 amps at 36/48V (or above 370 amps at 72/80V).

Range	100% to 0% battery volts
Set	46 to 180
Resolution	0.75% per set unit
Example	Setting of 125 = 41% on-time

$$\% \text{ ON TIME} = 100\% - ((\text{VAL}-46) \times 0.75\%)$$

**Important Note: This function is used to optimize motor and control performance, and this setting will be determined by GE and OEM engineers at the time of vehicle development. This setting must not be changed by field personnel without the permission of the OEM.**

**FUNCTION 17 CARD TYPE SELECTION ( Push CONT 2 )**

This function allows the user to enable or disable the vehicle's auto braking routine by setting the function within the ranges outlined below.

Control	Function	Setting
740A, 36/48V	1A enabled, auto braking enabled	128 to 255
740A, 36/48V	1A enabled, auto braking disabled	64 to 127
740A, 36/48V	Without 1A, auto braking enabled	50 to 63
740A, 36/48V	Without 1A, auto braking disabled	0 to 49
600A, 36/48V	Auto braking enabled	50 to 255
600A, 36/48V	Auto braking disabled	0 to 49
450A, 72/80V	Auto braking enabled	50 to 255
450A, 72/80V	Auto braking disabled	0 to 49
1000A	1A enabled, auto braking enabled	128 to 255
1000A	1A enabled, auto braking disabled	64 to 127
1000A	Without 1A, auto braking enabled	50 to 63
1000A	Without 1A, auto braking disabled	0 to 49

**FUNCTION 18 STEER PUMP TIME DELAY  
( Push CONT 3 )**

This function allows for the selection of steer pump contactor pick up input, either seat switch or directional switch closing, as well as the adjustment of the time delay for the contactor drop out.

- **Pick up steer pump contactor on seat switch closure and drop out steer pump contactor on seat switch opening, after a delay determined by the following:**

Range	1.5 to 65 seconds
Setting	Between 0 and 127
Resolution	0.5 seconds per set unit

Example: Setting of 20 = (20 x 0.5) + 1.5 = 11.5 seconds

- **Pick up steer pump contactor on directional switch closure and drop out steer pump contactor on directional switch opening, after a delay determined by the following:**

Range	0.5 to 63 seconds
Setting	Between 128 and 255
Resolution	0.5 seconds per set unit

Example: Setting of 149 = ((149-128) x 0.5) + 1.5 = 11.5 seconds

Note: If the seat switch opens, the steer pump contactor will open immediately.

**FUNCTION 19 MAINTENANCE CODE TENS AND UNITS HOURS SET  
( Push CONT 4 )**

This function allows for the adjustment of the tens and units hours of the maintenance code activation time.

Range	0 to 99
Set	0 to 99
Example	9999 Hours

**FUNCTION 20 MAINTENANCE CODE THOUSANDS AND HUNDREDS HOURS SET  
( Push CONT 5 )**

This function allows for the adjustment of the thousands and hundreds hours of the maintenance code activation time.

Range	0 to 240
Set	0 to 240
Example	9999 Hours

**FUNCTION 21 AUTO REGEN BRAKING CURRENT LIMIT  
( Push CONT 6 )**

This function allows for the adjustment of the braking torque applied when the start or directional switch is opened, and the counter EMF is above the setting of Function 5. A higher current correlates to a shorter stopping distance.

$$\text{Current} = (\text{Value of Setting} / 4) \times 6.5$$

Note, if the result is less than 52 amps, the control will default to 52 amps.

**FUNCTION 22 NOT APPLICABLE**

This value changes with operating mode selected, and should not be adjusted in the field.

**FUNCTION 23 REGEN CANCEL CURRENT  
( Push CONT 8 )**

This function allows for the adjustment of the armature current at which regenerative braking cancels, and is specific to each motor design.

**Important Note: This function is used to optimize motor and control performance, and this setting will be determined by GE and OEM engineers at the time of vehicle development. This setting must not be changed by field personnel without the permission of the OEM.**

**FUNCTION 24 FIELD WEAKENING START  
( Push CONT 9 )**

This function allows for setting the armature current at which minimum field current will be achieved.

Range	0 to 414 Amps
Setting	0 to 255
Resolution	1.625 per set unit
Example	Setting of 20 = 32.5 amps

$$I_{\text{MOTOR FWS}} = \text{VAL} \times 1.625$$

**FUNCTION 25 MONITOR  
( Push CONT 10 )**

This function allows the monitoring of certain control functions by looking directly at the RAM of the microprocessor. Because absolute memory locations need to be known, this function should not be used without detailed instructions from the GE application engineer.

**This function should only be adjusted by the vehicle OEM. To ensure optimum operation of the control, this function must be left with zero stored in this register.**

#### **FUNCTION 26 FIELD TO ARMATURE CURRENT RATIO ( Push CONT 11)**

This function sets the ratio between armature and field current when operating below the maximum field current and above the Field Weakening Start point. The setting represents the quantity of field current changed for each 1 amp of armature current changed.

For a 36/48V control:

Range	0 to 0.314 field amps/armature amp
Setting	0 to 13
Resolution	0.024 field amps/armature amp
Example	Setting of 10 = 0.24 field amps/armature amp

For a 72/80V control:

Range	0 to 0.269 field amps/armature amp
Setting	0 to 13
Resolution	0.021 field amps/armature amp
Example	Setting of 10 = 0.20 field amps/armature amp

For a 1000A control:

Range	0 to 0.507 field amps/armature amp
Setting	0 to 13
Resolution	0.038 field amps/armature amp
Example	Setting of 10 = 0.38 field amps/armature amp

#### **FUNCTION 27 MINUTES REGISTER (Push CONT 12)**

This register is only intended for storage of the minutes value for proper operation of the hour meter and should not be adjusted.

#### **FUNCTION 28 STORED STATUS CODE COUNT POINTER ( Push CONT 13)**

This register contains the location of the last stored status code recorded of the 16 stored status codes. These stored status codes have caused a PMT controller shutdown and/or disruption of normal vehicle operation.

To determine which stored status code was the last one recorded, read the number stored in Function 28. Using the **Memory Map** for your logic card, match the "**stored status code pointer number**" [the number shown in (*bold italics*) in the HS (Handset) number column] on the memory map, with the number obtained from Function 28. This will be the last stored status code recorded.

Note: **When scrolling through the stored status code register, the register always starts at status code 1 and scrolls to status code 16. Instructions for scrolling the register are in section 6.3.2 of this instruction booklet.**

#### **FUNCTION 29 POWER STEERING HOURS (ONES AND TENS) ( Push CONT 14 )**

This register is only intended for storage of the ones and tens values of the hours of operation of the power steering motor and should not be adjusted.

#### **FUNCTION 30 POWER STEERING HOURS (HUNDREDS AND THOUSANDS) ( Push CONT 15 )**

This register is only intended for storage of the hundreds and thousands values of the hours of operation of the power steering motor and should not be adjusted.

#### **DASH DISPLAY INTERACTIVE MODES**

The following functions (functions 48 through 63) are mode settings that are activated from the Interactive Dash Display. Each function must be set using the logic table shown below. If you try to set this function outside these guidelines, an error code will be displayed to prompt you to enter the correct setting.

***The following functions have function numbers larger than the numbers on the Handset keyboard. To access these functions. Push the CONT key and the number shown in the following instructions at the same time. THE SEAT SWITCH MUST BE CLOSED.***

#### **FUNCTION 48 MODE 1 ARMATURE CONTROLLED ACCELERATION ( Push CONT 1 )**

This function allows for the adjustment of the rate of time it takes for the control to accelerate to 100% applied battery voltage to the motor on hard acceleration.

Range            1.0 to 25.5 seconds  
Set                10 to 255  
Resolution      0.10 seconds per set unit  
Example:        Setting of 20 = 2.0 seconds

This C/A takes effect when the Mode 1 settings are called for by the interactive Dash Display.

**FUNCTION 49    MODE 1 REGEN CURRENT LIMIT**  
**( Push CONT 2 )**

This function allows for the adjustment of the maximum current seen by the motor during regenerative braking; the higher the current, the shorter the stopping distance.

Volts	Min	Max	Set	Resolution Per unit value	Example If set at 100
36/48	182A	591A	0 to 255	1.625	344 amps
72/80	52A	409A	32 to 255	1.625	162 amps

REGEN BRAKE  $I_A = (VAL \times 1.625) + 182$  at 36/48 volts  
REGEN BRAKE  $I_A = (VAL \times 1.625)$  at 72/80 volts

This REGEN CURRENT LIMIT takes effect when the Mode 1 settings are called for by the interactive Dash Display.

**FUNCTION 50    MODE 1 AUTO REGEN CURRENT LIMIT**  
**( Push CONT 3 )**

This function allows for the adjustment of the braking torque applied when the start or directional switch is opened, and the counter EMF is above the setting of Function 5. A higher current correlates to a shorter stopping distance.

Current = (Value of Setting /4) x 6.5

Note, if the result is less than 52 amps, the control will default to 52 amps.

This AUTO REGEN CURRENT LIMIT takes effect when the Mode 1 settings are called for by the interactive Dash Display.

**FUNCTION 51    MODE 1 SPEED LIMIT 2**  
**( Push CONT 4 )**

This function allows for the adjustment of the motor speed limit (maximum battery volts to the motor).

Range            100% to 0% battery volts  
Set                46 to 180  
Resolution      0.75% per set unit

Example            Setting of 80 = 75% of battery volts

SPEED LIMIT =  $100\% - ((VAL-46) \times 0.75\%)$

This SPEED LIMIT 2 takes effect when the Mode 1 settings are called for by the interactive Dash Display.

**FUNCTION 52    MODE 2 ARMATURE CONTROLLED**  
**ACCELERATION**  
**( Push CONT 5 )**

Same as Function 48.

This C/A takes effect when the Mode 2 settings are called for by the interactive Dash Display.

**FUNCTION 53    MODE 2 REGEN CURRENT LIMIT**  
**( Push CONT 6 )**

Same as Function 49.

This REGEN CURRENT LIMIT takes effect when the Mode 2 settings are called for by the interactive Dash Display.

**FUNCTION 54    MODE 2 AUTO REGEN CURRENT LIMIT**  
**( Push CONT 7 )**

Same as Function 50.

This AUTO REGEN CURRENT LIMIT takes effect when the Mode 2 settings are called for by the interactive Dash Display.

**FUNCTION 55    MODE 2 SPEED LIMIT 2**  
**( Push CONT 8 )**

Same as Function 51.

This SPEED LIMIT 2 takes effect when the Mode 2 settings are called for by the interactive Dash Display.

**FUNCTION 56    MODE 3 ARMATURE**  
**CONTROLLED ACCELERATION**  
**( Push CONT 9 )**

Same as Function 48.

This C/A takes effect when the Mode 3 settings are called for by the interactive Dash Display.

**FUNCTION 57    MODE 3 REGEN CURRENT LIMIT  
                  ( Push CONT 10)**

Same as Function 49.

This REGEN CURRENT LIMIT takes effect when the Mode 3 settings are called for by the interactive Dash Display.

**FUNCTION 58    MODE 3 AUTO REGEN CURRENT LIMIT  
                  ( Push CONT 11 )**

Same as Function 50.

This AUTO REGEN CURRENT LIMIT takes effect when the Mode 3 settings are called for by the interactive Dash Display.

**FUNCTION 59    MODE 3 SPEED LIMIT 2  
                  ( Push CONT 12 )**

Same as Function 51.

This SPEED LIMIT 2 takes effect when the Mode 3 settings are called for by the interactive Dash Display.

**FUNCTION 60    MODE 4 ARMATURE  
                  CONTROLLED ACCELERATION  
                  ( Push CONT 13)**

Same as Function 48.

This C/A takes effect when the Mode 4 settings are called for by the interactive Dash Display.

**FUNCTION 61    MODE 4 REGEN CURRENT LIMIT  
                  ( Push CONT 14)**

Same as Function 49.

This REGEN CURRENT LIMIT takes effect when the Mode 4 settings are called for by the interactive Dash Display.

**FUNCTION 62    MODE 4 AUTO REGEN CURRENT LIMIT  
                  ( Push CONT 15 )**

Same as Function 50.


This AUTO REGEN CURRENT LIMIT takes effect when the Mode 4 settings are called for by the interactive Dash Display.

**FUNCTION 63    MODE 4 SPEED LIMIT 2****( Push CONT ESC )**

Same as Function 51.

This SPEED LIMIT 2 takes effect when the Mode 4 settings are called for by the interactive Dash Display.

Section 6.5 Summary of Current Limit Adjustments

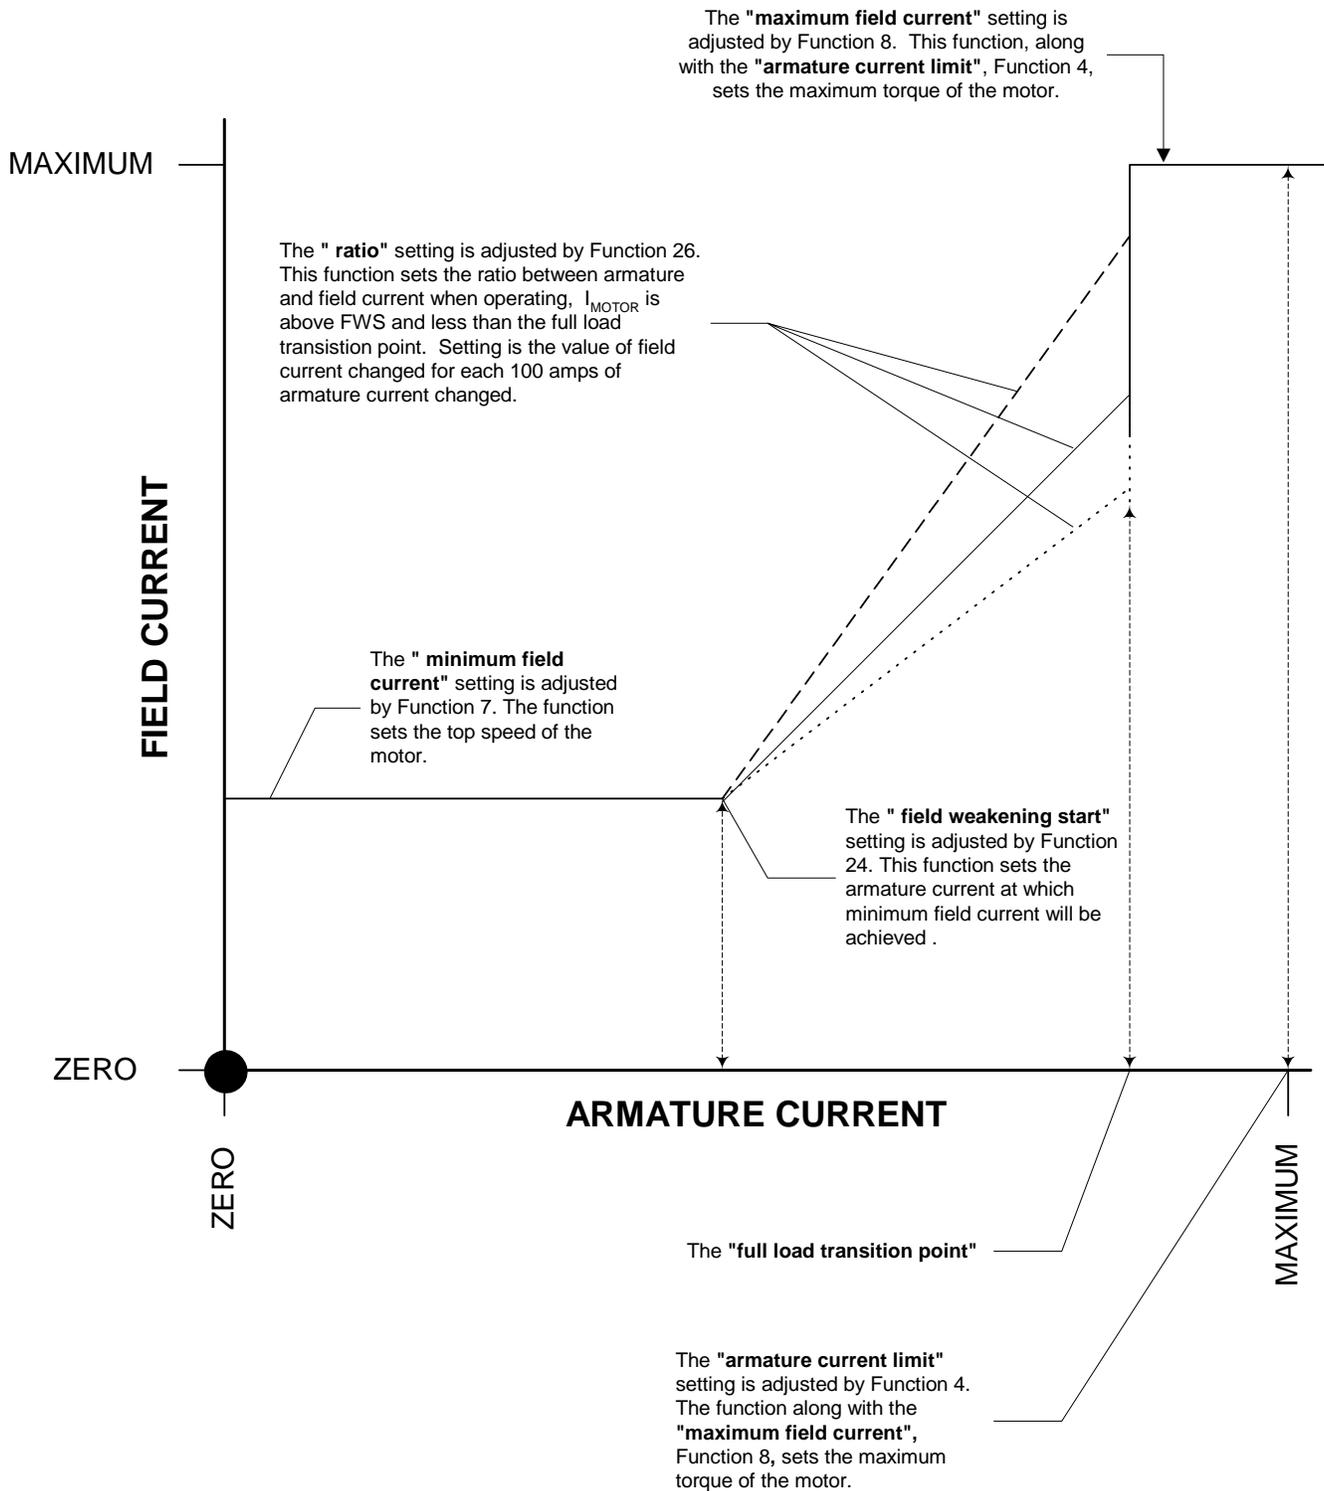

**Section 6.6 Setup Functions for Hydraulic Pump Control**

**FUNCTION 1 NOT APPLICABLE**

This function is not applicable to this type of control and should not be adjusted.

**FUNCTION 2 INTERNAL RESISTANCE  
 COMPENSATION START  
 (Push 2)**

This function allows for the adjustment of the current level at which the internal resistance compensation feature (Function 16) will take effect.

Range 0 to 1325 amps  
 Setting 52 to 255  
 Resolution 6.5 amps per set unit

Example: Setting of 72 =  $(72-52) \times 6.5 = 130$  amps

**FUNCTION 3 CONTROLLED ACCELERATION  
 (Push 3)**

This function allows for the adjustment of the rate of time it takes for the control to accelerate to 96% applied battery voltage to the motor on hard acceleration.

Range 0.1 to 5.5 seconds  
 Setting 0 to 255  
 Resolution 0.021 seconds per set unit

Example: Setting of 20 = 0.52 seconds C/A

**FUNCTION 4 ARMATURE CURRENT LIMIT  
 (Push 4)**

This function allows for the adjustment of the current limit of the control. The setting for this function should always remain at 255 for this family of controls to achieve maximum current limit.

**FUNCTION 7 INTERNAL RESISTANCE  
 COMPENSATION RATE  
 (Push 7)**

This function allows for the adjustment of the rate of time it takes for the control to add the internal resistance compensation voltage that is applied to the motor. This function will add 0.375 volts to the motor at the rate of time adjusted until the total IR compensation voltage has been added.

Range 0.0015 to 0.383 seconds  
 Setting 0 to 255  
 Resolution 0.0015 seconds per set unit

Example: Setting of 20 = 0.032 seconds  
 For example, if you had selected 2.08 volts from Function 16 to be added to the motor, it would take 0.18 seconds to add a total of 2.08 volts.  $(2.08/0.375)=0.032$

**FUNCTION 11 AUX 1/AUX 2 SPEED LIMIT 1 (SL1)  
 (Push 11)**

This function allows for the adjustment of the speed limit (maximum battery volts to the motor) when the SL1 limit switch input signal is received by the control card. SL1 limit switch is a normally open switch connected to battery negative, the switch closing enables speed limit.

Range 0% to 100% battery volts  
 Setting 0 to 255  
 Resolution 0.375 volts per set unit

Example: Setting of 50=18.75 volts

**FUNCTION 12 LIFT 1 SPEED LIMIT 2 (SL2)  
 (Push 12)**

Same as Function 11 except using SL2 limit switch for input.

**FUNCTION 13 TILT SPEED LIMIT 3 (SL3)  
 (Push 13)**

Same as Function 11 except using SL3 limit switch for input.

**FUNCTION 14 LIFT 2 SPEED LIMIT (SL4)  
 (Push 14)**

Same as Function 11 except using SL4 limit switch for input.

**FUNCTION 15 NOT APPLICABLE**

***Note: The following functions have function numbers larger than the numbers on the Handset keyboard. To access these functions, push the CONT key and the number shown in the following instructions at the same time. THE KEY SWITCH MUST BE CLOSED.***

This function is not applicable to this type of control and should not be adjusted.

**FUNCTION 16 SPEED / TORQUE COMPENSATION**  
**(Push CONT 1)**

This function is used to stabilize pump speed at heavy loads. The voltage selected will be added to the motor at each 100 amp increment starting at the value set in Function 2. The voltage compensation selected will be added in increments of 0.375 volts until the entire voltage is added. For example, a setting of 2 will be added in 30 steps of 0.375 volts each whereas, a setting of 4 will be added in 15 steps of 0.375 volts each.

**SPEED / TORQUE  
 COMPENSATION TABLE**

SETTING	VOLTAGE DROP	SETTING	VOLTAGE DROP
2	11.44	17	1.34
3	7.60	18	1.27
4	5.72	19	1.20
5	4.57	20	1.14
6	3.81	21	1.09
7	3.27	22	1.04
8	2.86	23	0.99
9	2.54	24	0.95
10	2.28	25	0.91
11	2.08	26	0.88
12	1.90	27	0.85
13	1.76	28	0.82
14	1.63	29	0.79
15	1.52	30	0.76
16	1.43	31	0.74

**FUNCTION 17 CARD TYPE SELECTION**  
**(Push CONT 2)**

This function should be set in accordance with the control type in use in the vehicle:

Function	Setting
Std C/L BDI Lockout	54 to 62
High C/L BDI Lockout	63 to 71

BDI Lockout means that the BDI signal from the traction control must be present in order for the pump control to operate. This control will stop operation when the battery state of charge reaches 10%.

Settings for these functions should be made in between the values shown.

**Warning: These setting must be changed by authorized personnel only, following instructions supplied by the manufacturer. Card type selection must be made within the capabilities of the TRANSISTOR control panel used and the supporting electro-mechanical devices. Failure to comply with proper application standards could result in mis-operation or damage to the control and/or motors.**

**FUNCTION 28: FAULT COUNT POINTER**  
**(Push CONT 13)**

This register contains the location of the last stored status code recorded of the 16 stored status codes. These stored status codes have caused a PMT controller shutdown and/or disruption of normal vehicle operation.

To determine which stored status code was the last one recorded, read the number stored in Function 28. Using the **Memory Map** (See Section 8.1) for your logic card, match the **"stored status code pointer number"** (the number shown in ***bold italics***) in the HS (Handset) number column) on the memory map, with the number obtained from Function 28. This will be the last stored status code recorded.

**Note: When scrolling the stored status code register, the register always starts at status code 1 and scrolls to status code 16. Instructions for scrolling the register are in Section 6.3.2 of this instruction booklet.**

**Note: The following functions have function numbers larger than the numbers on the Handset keyboard. To access these functions, push the CONT key and the number shown in the following instructions at the same time. THE KEY SWITCH MUST BE OPEN.**

**FUNCTION 48 MODE 1 - CONTROLLED ACCELERATION**  
**(Push CONT 1)**

This function allows for the adjustment of the rate of time it takes for the control to accelerate to 96% applied battery voltage to the motor on hard acceleration.

Range                    0.1 to 22.0 seconds  
 Setting                 0 to 255  
 Resolution             0.084 seconds per set unit

Example: Setting of 20 = 1.8 seconds C/A

**FUNCTION 49 MODE 1 – LIFT 1 SPEED LIMIT (SL2)**  
**(Push CONT 2)**

This function allows for the adjustment of the speed limit (maximum battery volts to the motor) when the SL2 limit switch input signal is received by the control card. SL2 limit switch is a normally open switch connected to battery negative, the switch closing enables speed limit.

Range            0% to 100% battery volts  
 Setting         0 to 255  
 Resolution     0.375 volts per set unit

Example: Setting of 50=18.75 volts

**FUNCTION 50    MODE 1 – TILT SPEED LIMIT (SL3)**  
**(Push CONT 3)**

This function allows for the adjustment of the speed limit (maximum battery volts to the motor) when the SL3 limit switch input signal is received by the control card. SL3 limit switch is a normally open switch connected to battery negative, the switch closing enables speed limit.

Range            0% to 100% battery volts  
 Setting         0 to 255  
 Resolution     0.375 volts per set unit

Example: Setting of 50=18.75 volts

**FUNCTION 51    MODE 1 – LIFT 2 SPEED LIMIT (SL4)**  
**(Push CONT 2)**

This function allows for the adjustment of the speed limit (maximum battery volts to the motor) when the SL4 limit switch input signal is received by the control card. SL4 limit switch is a normally open switch connected to battery negative, the switch closing enables speed limit.

Range            0% to 100% battery volts  
 Setting         0 to 255  
 Resolution     0.375 volts per set unit

Example: Setting of 50=18.75 volts

**FUNCTION 52:    MODE 2 - CONTROLLED ACCELERATION**  
**(Push CONT 5)**

Same as function 48.

**FUNCTION 53:    MODE 2 -- LIFT 1 SPEED LIMIT (SL2)**  
**(Push CONT 6)**

Same as Function 49.

**FUNCTION 54    MODE 2 – TILT SPEED LIMIT (SL3)**  
**(Push CONT 7)**

Same as Function 50.

**FUNCTION 55    MODE 2 – LIFT 2 SPEED LIMIT (SL4)**  
**(Push CONT 8)**

Same as Function 51.

**FUNCTION 56    MODE 3 - CONTROLLED ACCELERATION**  
**(Push CONT 9)**

Same as function 48.

**FUNCTION 57    MODE 3 – LIFT 1 SPEED LIMIT (SL2)**  
**(Push CONT 10)**

Same as Function 49.

**FUNCTION 58    MODE 3 – TILT SPEED LIMIT (SL3)**  
**(Push CONT 11)**

Same as Function 50.

**FUNCTION 59    MODE 3 – LIFT 2 SPEED LIMIT (SL4)**  
**(Push CONT 12)**

Same as Function 51.

**FUNCTION 60    MODE 4 - CONTROLLED ACCELERATION**  
**(Push CONT 13)**

Same as function 48.

**FUNCTION 61    MODE 4 – LIFT 1SPEED LIMIT (SL2)**  
**(Push CONT 14)**

Same as Function 49.

**FUNCTION 62    MODE 4 – TILT SPEED LIMIT 3 (SL3)**  
**(Push CONT 15)**

Same as Function 50.

**FUNCTION 63    MODE 4 – LIFT 2 SPEED LIMIT (SL4)**  
**(Push CONT 16)**


Same as Function 51.

**Section 7. DASH DISPLAYS**

**Section 7.1 Application**

The SX family Standard and Interactive Dash Displays allow the operator and maintenance personnel easy access to truck operation information and real-time system diagnostics of the controller, motor and various accessories. Hourmeter readings, battery discharge information, maintenance information and system status codes are clearly displayed during startup and running modes. Shielded cable connections are made to the Dash Display by means of five (5) 22-gage wires to the "Y" Plug of the traction and hydraulic pump controls.

**Section 7.2 Standard Dash Displays**

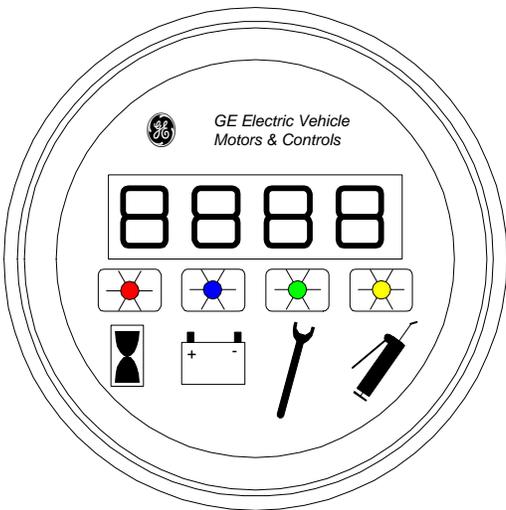

The GE Standard Dash Display is a four segment Light Emitting Diode (LED) instrument that displays the GE LX, ZX, and SX Status Codes, Hourmeter Readings, Battery Discharge Indication, and Maintenance Required Code. The four LED's above the symbols indicate the active readout mode.

**Section 7.3 Interactive Custom Dash Displays**



The Interactive Custom Dash Display allows the operator to select the best vehicle performance for changing factory (task) conditions. There are four (4) "operator interaction modes" that can be selected by depressing a push-button on the dash display.

From the Dash Display, the operator may select any of four pre-set interactive modes consisting of (4) Controlled Acceleration levels, (4) Auto Regen levels and (4) Speed Limit levels.

These interactive modes are "pre-set" using the Handset (Functions 48 - 63) or a personal computer (Functions 97 - 112). This feature allows the operator to select the best vehicle performance for changing factory (task) conditions.


The Custom Dash Display incorporates all the features and functions of the Standard Dash Display, in addition to the following customer options:

- LED graphics to display Battery Discharge Indication status.
- Various LED indicators for Maintenance Required Status Codes. These can include options for traction, pump and power steer motors, hourmeter, over-temperature, seat belt, brake and other safety sensors.
- A push-button associated with the four segment LED that displays Status Codes can be used to scroll the last 16 "Stored Status Codes" that shut down vehicle operation with a PMT fault.

**Connections**

Connections are made to the Dash Display with five (5) 22-gage wires to Plug "Y" of each control. Shielded cable is required to eliminate signal interference.


**Part Number**

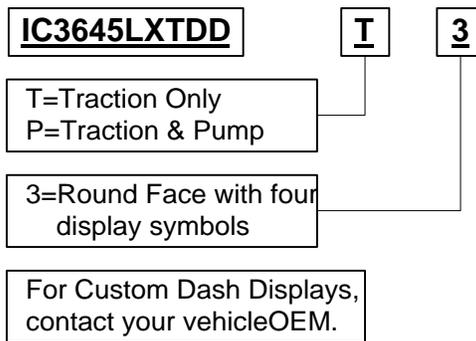



**Reference**

- AMP#102241-3 Dash Display mating plug
- AMP#1-87195-8 Dash Display mating pin
- 44A723596-G09 Dash Display plug kit
- AMP#175965-2 "Y" Plug
- AMP#175180-1 "Y" Plug receptacle

**Section 7.4 Start-Up Display Sequence**

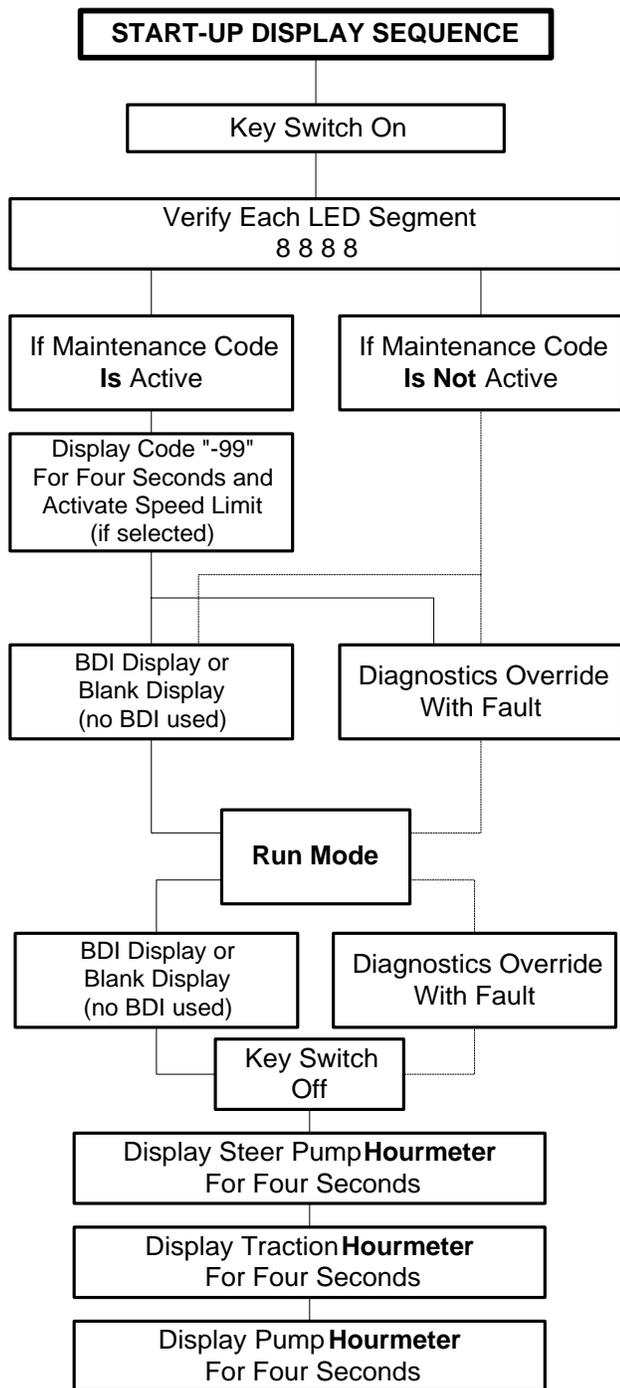

**Section 7.5 Outline Drawings**

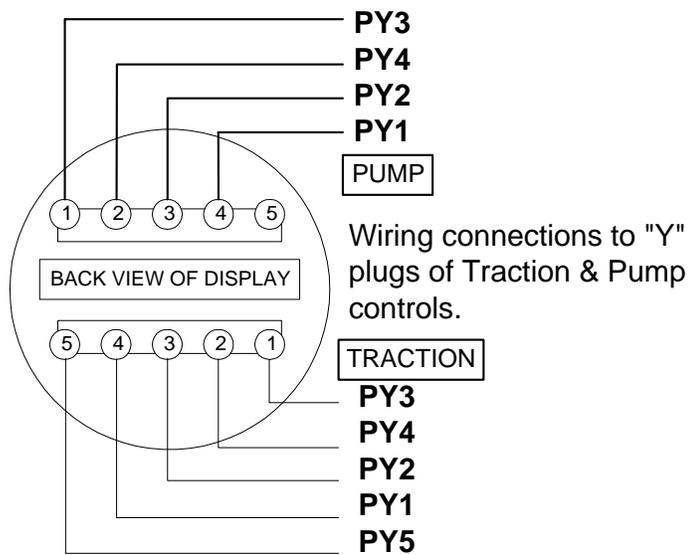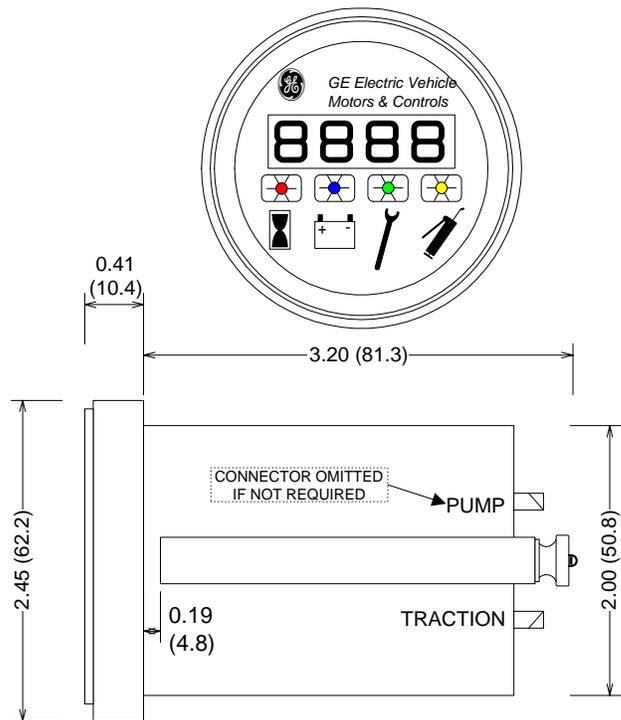

**SECTION 7.0 AUTOCALIBRATION OF ACCELERATOR  
POTENTIOMETERS**

When calibrating the accelerator pot, program Function 6 with a handset to a value between 15 and 20, and then exit programming mode. Cycle the key switch on and off to store the function setting, and leave the handset plugged in.

When returning the key switch to the "ON" position, make sure that the forward, reverse and start switches are open, and that the seat switch is closed. If one of these conditions is not met, an "-83" status code will appear the dash display. Once all of the above conditions have been met, four "A"s will appear on the handset.

**AAAA**

When the four "A" 's are displayed, close the forward directional switch, with the accelerator pedal fully released. The dash display should show three "A" 's:

**AAA**

Return the forward switch to the open position, and the dash display should show two "A" 's:

**AA**

Fully depress the accelerator pedal and close the forward switch. Only one "A" should be displayed:

**A**

Re-open the forward switch. The truck will either return to a normal operating state or an "-86" status code will appear on the handset. If the "-86" code appears, either the full accelerator pedal voltage was greater than 4.5 volts, or the voltage span from no pedal depression to full pedal depression was less than 2.6 volts. Either condition requires external adjustment to the accelerator pot prior to repeating the process above.

The auto-calibration routine is now completed.

Section 9.0 MEMORY MAPS

Section 9.1 Traction Control

E <sup>2</sup>	Func No.	HS No.	Traction Control Function	Access By	Restrictions
0	1	1	Motor EMF Required for Plug/Regen	HS or PC	None
1	2	2	Creep	HS or PC	None
2	3	3	Controlled Acceleration	HS or PC	None
3	4	4	Armature Current Limit	HS or PC	None
4	5	5	Counter EMF Trip Point for Auto Braking	HS or PC	None
5	6	6	Auto Calibration of Accelerator Pot	HS or PC	None
6	7	7	Minimum Field Current	HS or PC	None
7	8	8	Maximum Field Current	HS or PC	None
8	9	9	Regen Current Limit	HS or PC	None
9	10	10	Field Current for Regen	HS or PC	None
10	11	11	Brake Switch Current Limit	HS or PC	None
11	12	12	Top Speed Limit	HS or PC	None
12	13	13	Maintenance & Truck Mgmt Speed Limit	HS or PC	None
13	14	14	IR Compensation	HS or PC	None
14	15	15	Battery Volts Select	HS or PC	None
15	16	16	Stall Protection and % ON-Time Trip	HS or PC	None
16	17	17	Card Type Select	HS or PC	None
17	18	18	Steer Pump Time Delay	HS or PC	None
18	19	19	Maintenance Code HM (Tens/Units)	HS or PC	None
19	20	20	Maintenance Code HM (Thou/Hun)	HS or PC	None
20	21	21	Auto Regen Braking Current Limit	HS or PC	None
21	22	22	Mode Storage	HS or PC	For DD on power up
22	23	23	Regen Cancel Current	HS or PC	None
23	24	24	FW Start	HS or PC	None
24	25	25	Monitor	HS or PC	GE Temporary Storage
25	26	26	Ratio	HS or PC	GE Temporary Storage
26	27	27	Steer Pump Minutes	HS or PC	GE Temporary Storage
27	28	28	Fault Count Pointer	HS or PC	None
28	29	29	Steer Pump Hours (Tens/Ones)	HS or PC	None
29	30	30	Steer Pump Hours (Thou/Hun)	HS or PC	None
30	31		Traction Hours (Tens/Ones)	PC Only	None
31	32		Traction Hours (Thou/Hun)	PC Only	None
32	33	<b>(18)</b>	Stored Status Code #1	PC Only	Reset to Zero Only
33	34		BDI 1	PC Only	Reset to Zero Only
34	35		Hours (Tens/Ones) 1	PC Only	Reset to Zero Only
35	36		Hours (Thou/Hun) 1	PC Only	Reset to Zero Only
36	37	<b>(20)</b>	Stored Status Code #2	PC Only	Reset to Zero Only
37	38		BDI 2	PC Only	Reset to Zero Only
38	39		Hours (Tens/Ones) 2	PC Only	Reset to Zero Only
39	40		Hours (Thou/Hun) 2	PC Only	Reset to Zero Only
40	41	<b>(22)</b>	Stored Status Code #3	PC Only	Reset to Zero Only
41	42		BDI 3	PC Only	Reset to Zero Only
42	43		Hours (Tens/Ones) 3	PC Only	Reset to Zero Only

<b>E<sup>2</sup></b>	<b>Func No.</b>	<b>HS No.</b>	<b>Traction Control Function</b>	<b>Access By</b>	<b>Restrictions</b>
43	44		Hours (Thou/Hun) 3	PC Only	Reset to Zero Only
45	46		BDI 4	PC Only	Reset to Zero Only
46	47		Hours (Tens/Ones) 4	PC Only	Reset to Zero Only
47	48		Hours (Thou/Hun) 4	PC Only	Reset to Zero Only
48	49	<b>(26)</b>	Stored Status Code #5	PC Only	Reset to Zero Only
49	50		BDI 5	PC Only	Reset to Zero Only
50	51		Hours (Tens/Ones) 5	PC Only	Reset to Zero Only
51	52		Hours (Thou/Hun) 5	PC Only	Reset to Zero Only
52	53	<b>(28)</b>	Stored Status Code #6	PC Only	Reset to Zero Only
53	54		BDI 6	PC Only	Reset to Zero Only
54	55		Hours(Tens/Ones) 6	PC Only	Reset to Zero Only
55	56		Hours(Thou/Hun) 6	PC Only	Reset to Zero Only
56	57	<b>(30)</b>	Stored Status Code #7	PC Only	Reset to Zero Only
57	58		BDI 7	PC Only	Reset to Zero Only
58	59		Hours(Tens/Ones) 7	PC Only	Reset to Zero Only
59	60		Hours(Thou/Hun) 7	PC Only	Reset to Zero Only
60	61	<b>(32)</b>	Stored Status Code #8	PC Only	Reset to Zero Only
61	62		BDI 8	PC Only	Reset to Zero Only
62	63		Hours;(Tens/Ones) 8	PC Only	Reset to Zero Only
63	64		Hours(Thou/Hun) 8	PC Only	Reset to Zero Only
64	65	<b>(34)</b>	Stored Status Code #9	PC Only	Reset to Zero Only
65	66		BDI 9	PC Only	Reset to Zero Only
66	67		Hours(Tens/Ones) 9	PC Only	Reset to Zero Only
67	68		Hours(Thou/Hun) 9	PC Only	Reset to Zero Only
68	69	<b>(36)</b>	Stored Status Code #10	PC Only	Reset to Zero Only
69	70		BDI 10	PC Only	Reset to Zero Only
70	71		Hours(Tens/Ones) 10	PC Only	Reset to Zero Only
71	72		Hours(Thou/Hun) 10	PC Only	Reset to Zero Only
72	73	<b>(38)</b>	Stored Status Code #11	PC Only	Reset to Zero Only
73	; 74		BDI 11	PC Only	Reset to Zero Only
74	75		Hours(Tens/Ones) 11	PC Only	Reset to Zero Only
75	76		Hours(Thou/Hun) 11	PC Only	Reset to Zero Only
76	77	<b>(40)</b>	Stored Status Code #12	PC Only	Reset to Zero Only
77	78		BDI 12	PC Only	Reset to Zero Only
78	79		Hours(Tens/Ones) 12	PC Only	Reset to Zero Only
79	80		Hours(Thou/Hun) 12	PC Only	Reset to Zero Only
80	81	<b>(42)</b>	Stored Status Code #13	PC Only	Reset to Zero Only
81	82		BDI 13	PC Only	Reset to Zero Only
82	83		Hours(Tens/Ones) 13	PC Only	Reset to Zero Only
83	84		Hours(Thou/Hun) 13	PC Only	Reset to Zero Only
84	85	<b>(44)</b>	Stored Status Code # 14	PC Only	Reset to Zero Only
85	86		BDI 14	PC Only	Reset to Zero Only
86	87		Hours(Tens/Ones) 14	PC Only	Reset to Zero Only
87	88		Hours(Thou/Hun) 14	PC Only	Reset to Zero Only
88	89	<b>(46)</b>	Stored Status Code # 15	PC Only	Reset to Zero Only
89	90		BDI 15	PC Only	Reset to Zero Only

E <sup>2</sup>	Func No.	HS No.	Traction Control Function	Access By	Restrictions
90	91		Hours (Tens/Ones) 15	PC Only	Reset to Zero Only
90	91		Hours (Tens/Ones) 15	PC Only	Reset to Zero Only
91	92		Hours (Thou/Hun) 15	PC Only	Reset to Zero Only
92	93	<b>(48)</b>	Stored Status Code #16	PC Only	Reset to Zero Only
94	95		Hours (Tens/Ones) 16	PC Only	Reset to Zero Only
95	96		Hours (Thou/Hun) 16	PC Only	Reset to Zero Only
96	67	48	Dash Display CA-1		
97	98	49	Dash Display Regen C/L-1	HS or PC	None
98	99	50	Dash Display Auto Regen C/L-1	HS or PC	None
99	100	51	Dash Display Speed Limit 2 - 1	HS or PC	None
100	101	52	Dash Display CA-2	HS or PC	None
101	102	53	Dash Display Regen C/L-2	HS or PC	None
102	103	54	Dash Display Auto Regen C/L-2	HS or PC	None
103	104	55	Dash Display Speed Limit 2 - 2	HS or PC	None
104	105	56	Dash Display CA-3	HS or PC	None
105	106	57	Dash Display Regen C/L -3	HS or PC	None
106	107	58	Dash Display Auto Regen C/L-3	HS or PC	None
107	108	59	Dash Display Speed Limit 2 - 3	HS or PC	None
108	109	60	Dash Display CA-4	HS or PC	None
109	110	61	Dash Display Regen C/L-4	HS or PC	None
110	111	62	Dash Display Auto Regen C/L-4	HS or PC	None
111	112	63	Dash Display Speed Limit 2 - 4	HS or PC	None
112	113		Secure HM (Tens/Ones) Steer Pump	PC Only	OEM Read Only
113	114		Secure HM (Thou/Hun) Steer Pump	PC Only	OEM Read Only
114	115		Secure Aux HM (Tens/Ones)	PC Only	OEM Read Only
115	116		Secure Aux HM (Thou/Hun)	PC Only	OEM Read Only
116	117		Reserved	PC Only	GE Future Use
117	118		Reserved	PC Only	GE Future Use
118	119		Reserved	PC Only	GE Future Use
119	120		Reserved	PC Only	GE Future Use
120	121		Truck Minutes	PC Only	None
121	122		Pump Minutes	PC Only	None
122	123		Pump Hours (Tens/Ones)	PC Only	None
123	124		Pump Hours (Thou/Hun)	PC Only	None
124	125		OEM Use	PC Only	None
125	126		OEM Use	PC Only	None
126	127		Accelerator Auto Calibration Slope	PC Only	None
127	128		Accelerator Auto Calibration Y-Intercept	PC Only	None

Numbers in **(bold italics)** are Stored Status Code pointers.